



ASCII Import - Type of Data

Define which dimension is stored in which data field.
First select and highlight a column in the grid below and then select the appropriate checkbox.
Every column with a green header will be imported.

Easting
 Northing
 Level
 Feature Code / Point Code
 Survey Point Number / Point ID

Line		Easting	Northing	Level	Fea
1	1	533939.680	294540.610	163.860	1
2	9002	534015.850	294150.390	163.550	1
3	2	533935.550	294521.890	162.840	25
4	3	533937.890	294521.260	162.830	25
5	4	533939.020	294521.200	162.760	30
6	5	533940.880	294520.930	163.470	30
7	6	533941.530	294520.950	163.710	46
8	7	533942.110	294520.950	163.780	3
9	8	533945.650	294521.260	163.900	4
10	9	533949.170	294521.400	163.810	3

AS0002

ASCII Import - Model and String Det...

Models and Strings | Drawing | Levels and Shifts

Next >

< Back

Cancel

ASCII File Statistics

Import Model

COORD

Derive string name from feature code
 Use the first four valid characters of the feature code
 Create point strings using the first three valid characters of the feature code
 Use a translation table

Translation Table

AS0004