

# Converting Smart 3D for iTwin

2024-03-11

# Contents

- 1. Introduction ..... 3
- 2. Software to download ..... 3
  - 2.1. Smart 3D Extractor ..... 3
  - 2.2. Open 3D Model Connector..... 3
- 3. Set Logon as a Service..... 4
- 4. Software Installation and configuration ..... 8
  - 4.1. Smart 3D Extractor ..... 8
    - 4.1.1. Configure Licensing ..... 8
  - 4.2. Installation of Open 3D Model Connector ..... 16
- 5. Configure Smart 3D Extractor Admin shortcut..... 16
- 6. Restore Smart 3D databases..... 20
  - 6.1. Unzip sample databases for Smart 3D ..... 20
  - 6.2. Restore the first Smart 3D database ..... 21
  - 6.3. After the initial restoration of the Smart 3D Database ..... 24
- 7. Run the Open 3D Model Connector ..... 25

## 1. Introduction

This document outlines the steps required to setup software required for using setup and use the Smart 3D Extractor and the Open 3D Model Connector with iTwins.

## 2. Software to download

### 2.1. Smart 3D Extractor

Navigate to:

<https://softwaredownloads.bentley.com/en/ProductDetails/2938>

The screenshot shows a web browser window displaying the Bentley Software Downloads page for the Smart 3D Bridge Extractor. The page includes a navigation menu with 'Home', 'Bentley Systems Inc', 'Assets', and 'Projects'. A blue header bar contains 'Software Downloads | Product Details' and a 'Show Internal Products and Deliverables' toggle set to 'Yes'. The main content area features a product icon, the title 'Smart 3D Bridge Extractor', and a description: 'Smart 3D Bridge Extractor converts models from Smart 3D for use with PlantSight.' Below this is a filter section with dropdown menus for 'Generation' (CONNECT Editi), 'Version' (10.08.00.080), 'Language' (English), 'Architecture' (x64), and 'Deliverable Type' (Installer). A 'Subscription Entitlement' dropdown is set to 'Yes'. 'Apply' and 'Clear' buttons are present. A download card displays 'PlantSight Smart 3D Bridge Extractor CONNECT Edition x64 (SES) Update 8 (English)' with a 'Download' button. Below the card, it lists 'Version:10.08.00.080 Date:11/12/2021 Size:557 MB System Requirements'. A note at the bottom says '\*Clear the Default Filters to view more Downloads'. A footer contains copyright information: '© 2021 Bentley Systems, Incorporated | Terms of Service | Privacy | Terms of Use | Cookies | Legal Notices'. On the right, a 'Related Software' section shows 'Open 3D Model Connector' with a 'Get Software' button.

### 2.2. Open 3D Model Connector

Navigate to:


<https://softwaredownloads.bentley.com/en/ProductDetails/2736>

The screenshot shows the Bentley Software Downloads website. The main content area features the 'Open 3D Model Connector' product. Below the product description, there is a filter section with the following dropdown menus: Generation (CONNECT Editi), Version (10.08.00.084), Language (English), Architecture (x64), Deliverable Type (Installer), and Subscription Entitlement (Yes). An 'Apply' button and a 'Clear' button are located below the filters. A 'Download' button is visible next to the product name 'PlantSight Open 3D Model Bridge CONNECT Edition x64 (SES) Update 8 (English)'. The 'Related Software' sidebar on the right lists 'E3D Bridge Extractor' and 'Smart 3D Bridge Extractor', each with a 'Get Software' button.


### 3. Set Logon as a Service


Before installing Smart 3D Extractor, you must enable logon as a service for the current user. This is required as these programs are required to run as a service.

Open Administrative Tools, select Local Security Policy and open it

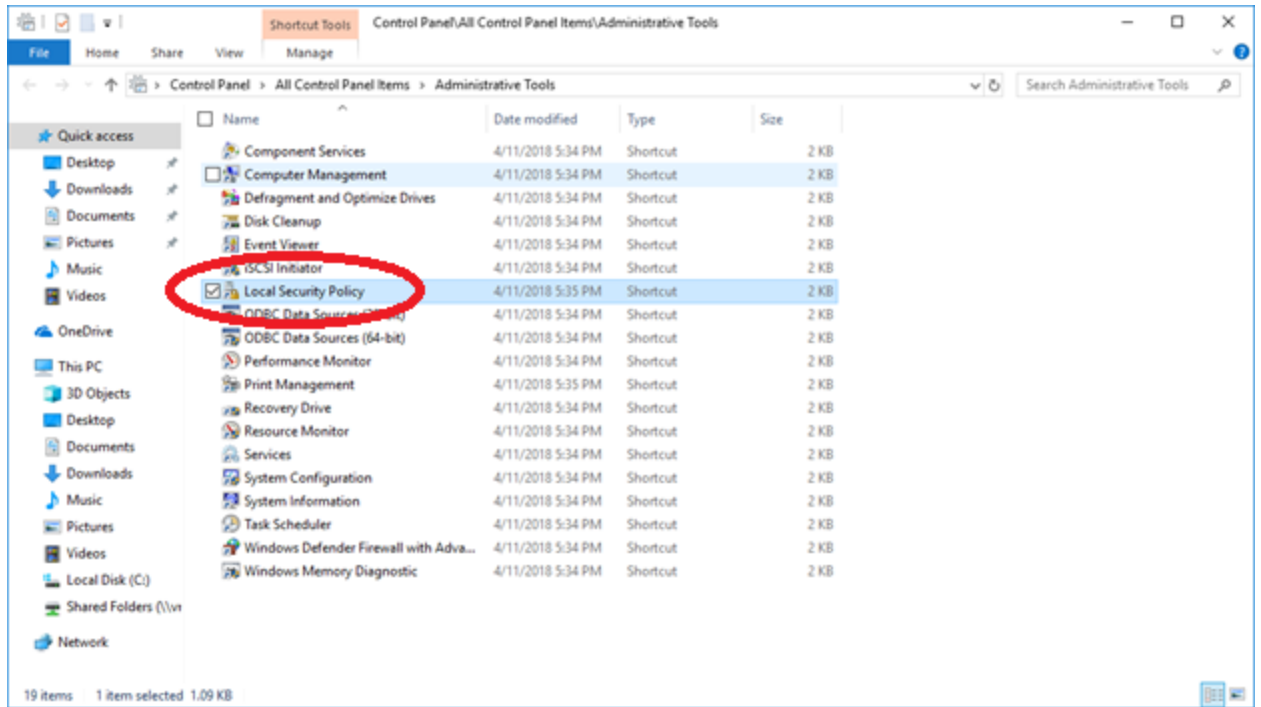


Go to Local Policies and User Rights Assignment, then select Log on as a service

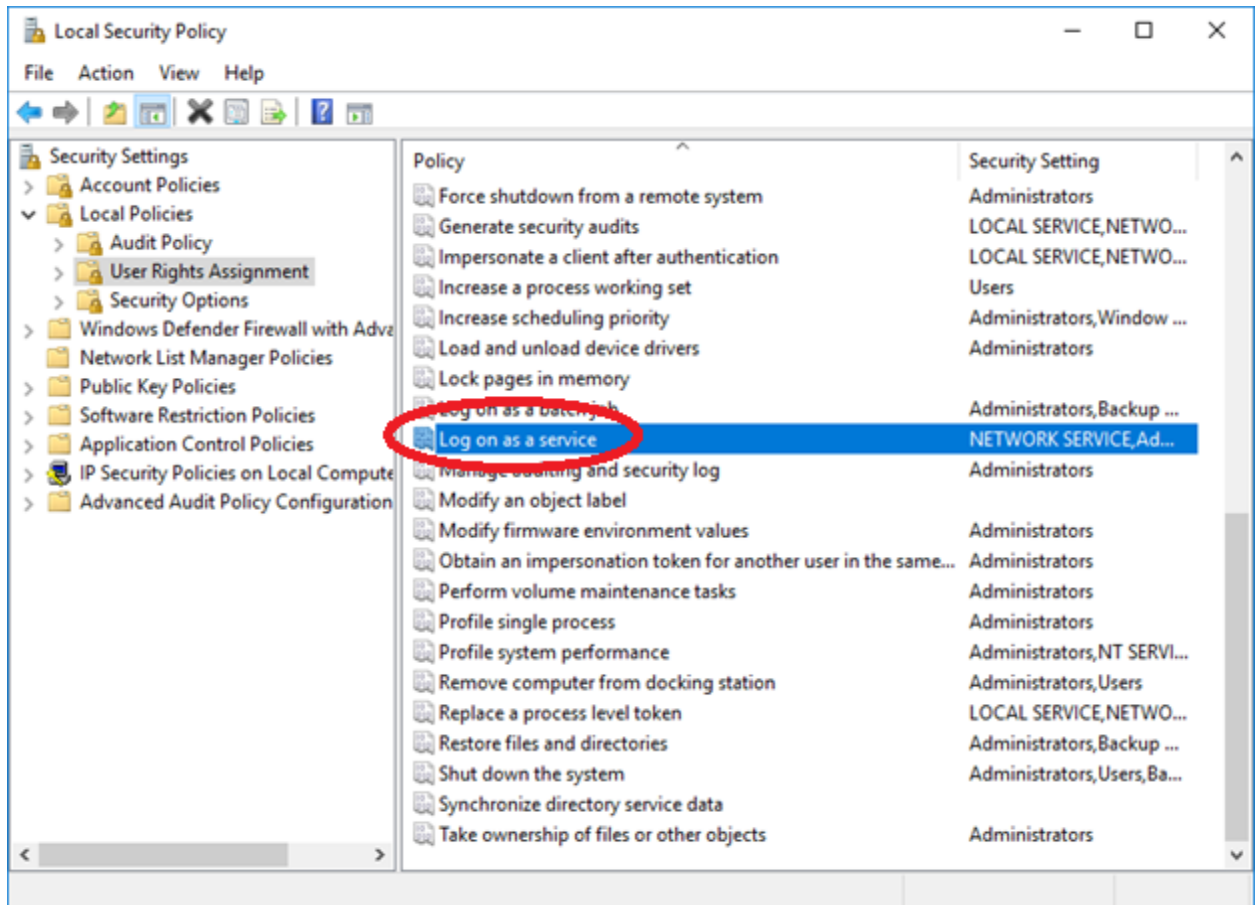

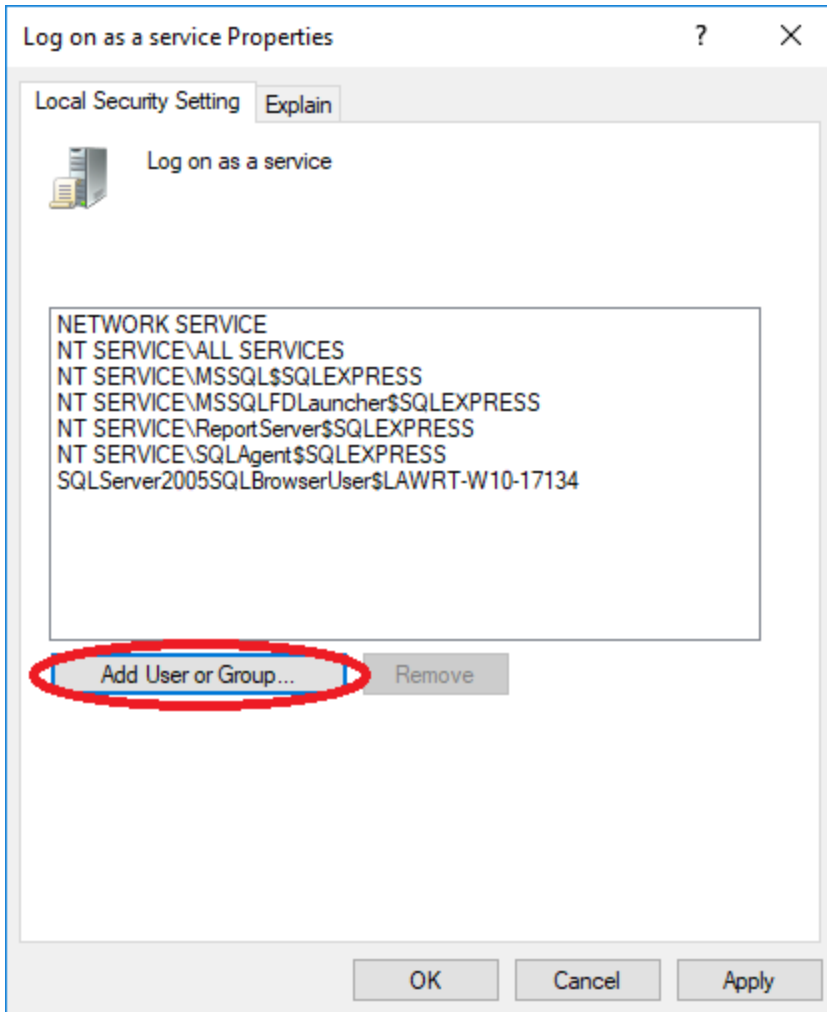

Add the user name and click OK

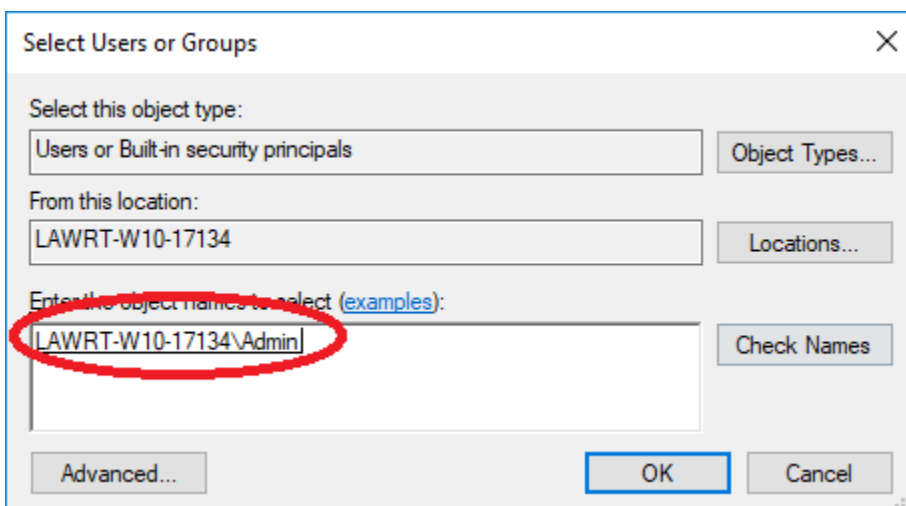

## 4. Software Installation and configuration

### 4.1. Smart 3D Extractor


Prior to installing the Smart 3D Extractor, ensure that you have installed SQL Express or SQL Server. The detailed steps for this are outlined in “SQL Express Setup”. Download and install Setup\_PlantSightSmart3DBridgeExtractorx64\_10.08.xx.yy.exe.

The use of SQL Express is sufficient for the sample database that is often used for demo setups, but if data from an actual project is used, it will likely exceed the 10 GB limit of SQL Express. In this case, install SQL Server.

Another alternative is to install the Smart 3D Extractor with your Smart 3D installation and this will allow you to also capture the changes made in the Smart 3D project after the initial model import.

#### 4.1.1. Configure Licensing

When the install finishes, you should configure the licensing. The licensing for Smart 3D Extractor now uses SES licensing.

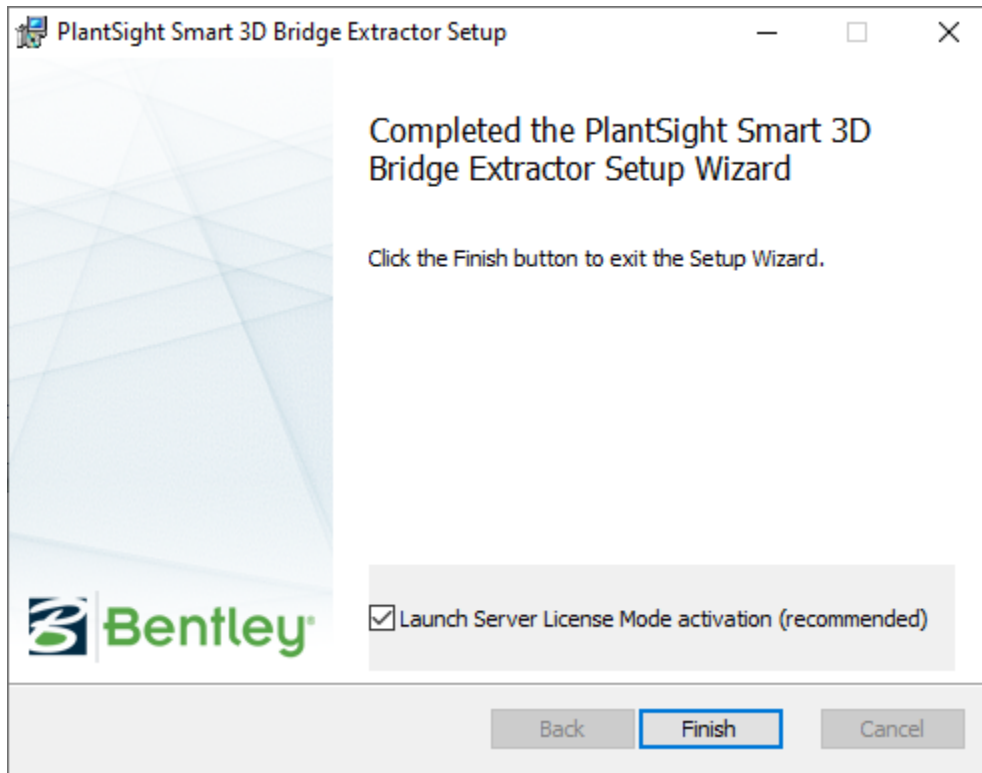


Clicking finish will bring up the Bentley Login Client. Enter the credentials you normally use for the CONNECTION Client.




The image shows a screenshot of a web browser window titled "Bentley Login Client". The window contains the Bentley logo at the top left. Below the logo, the text "Sign In" is displayed in a large font, followed by the subtitle "Access your Bentley Services". There are two input fields: one for "Email" and one for "Password". The password field includes a small eye icon on the right side to toggle visibility. Below the password field is a blue hyperlink that says "Forgot password?". At the bottom of the form is a large green button with the text "Sign In" in white.

After entering your credentials, you should get this:

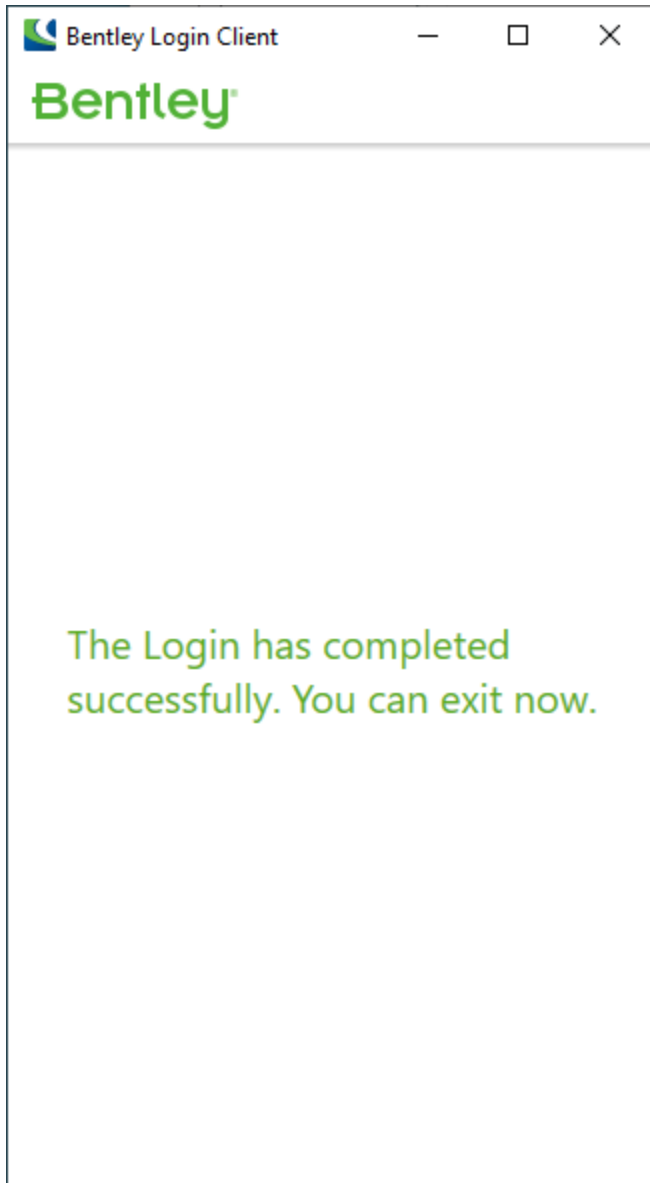

Closing this window will bring up the activation wizard where you will add the licensed products you will be using.

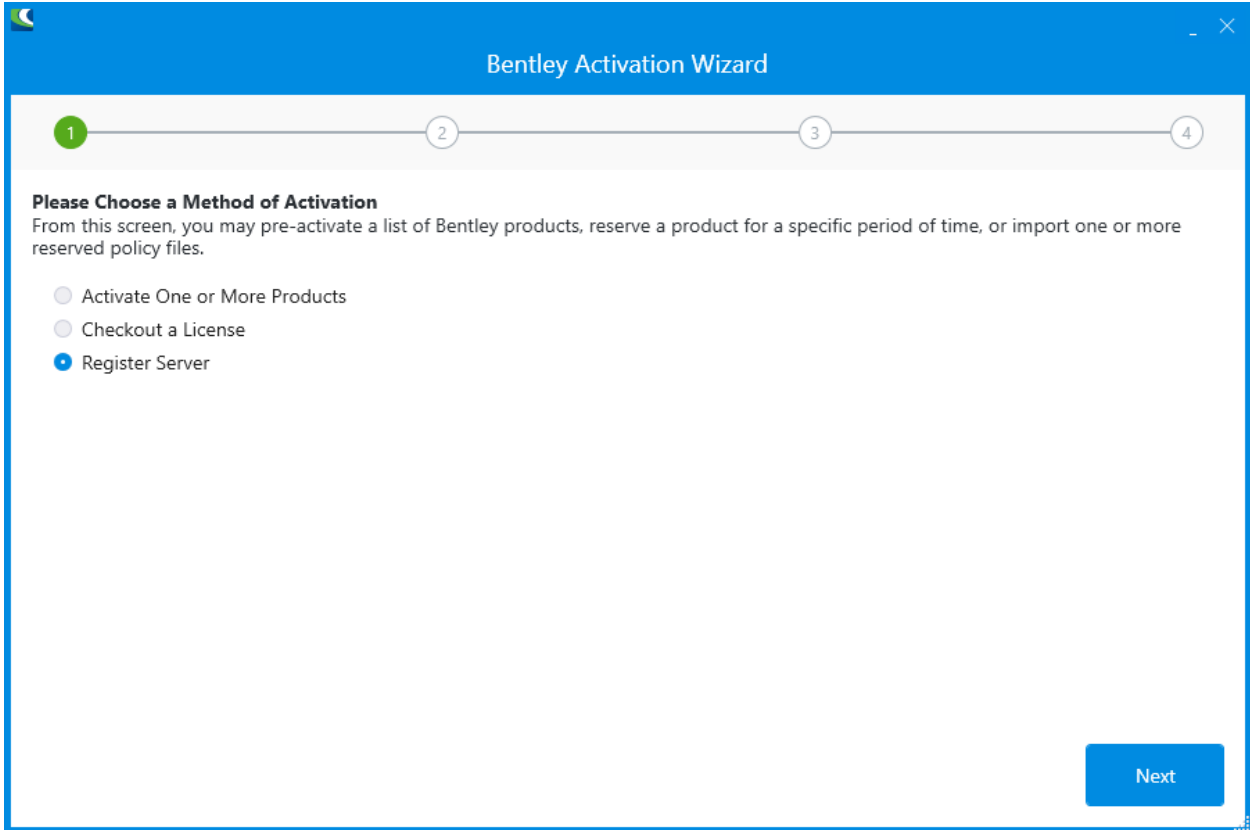

Select a country:

**Bentley Activation Wizard**

1 2 3 4

**Register this machine for Bentley Server Products**

Machine Name: LAWRT-18363-657

Country: United States

Allow users outside server


- Brazil
- India
- United Kingdom
- United States

Threshold alerting is not available in server mode. Any threshold alerting configured in Entitlement Management will be ignored.

Back Next


And click Next.

Now you will need to add the products that will be used. Note that when using server based licensing, all products used on this machine will have the usage against this user.

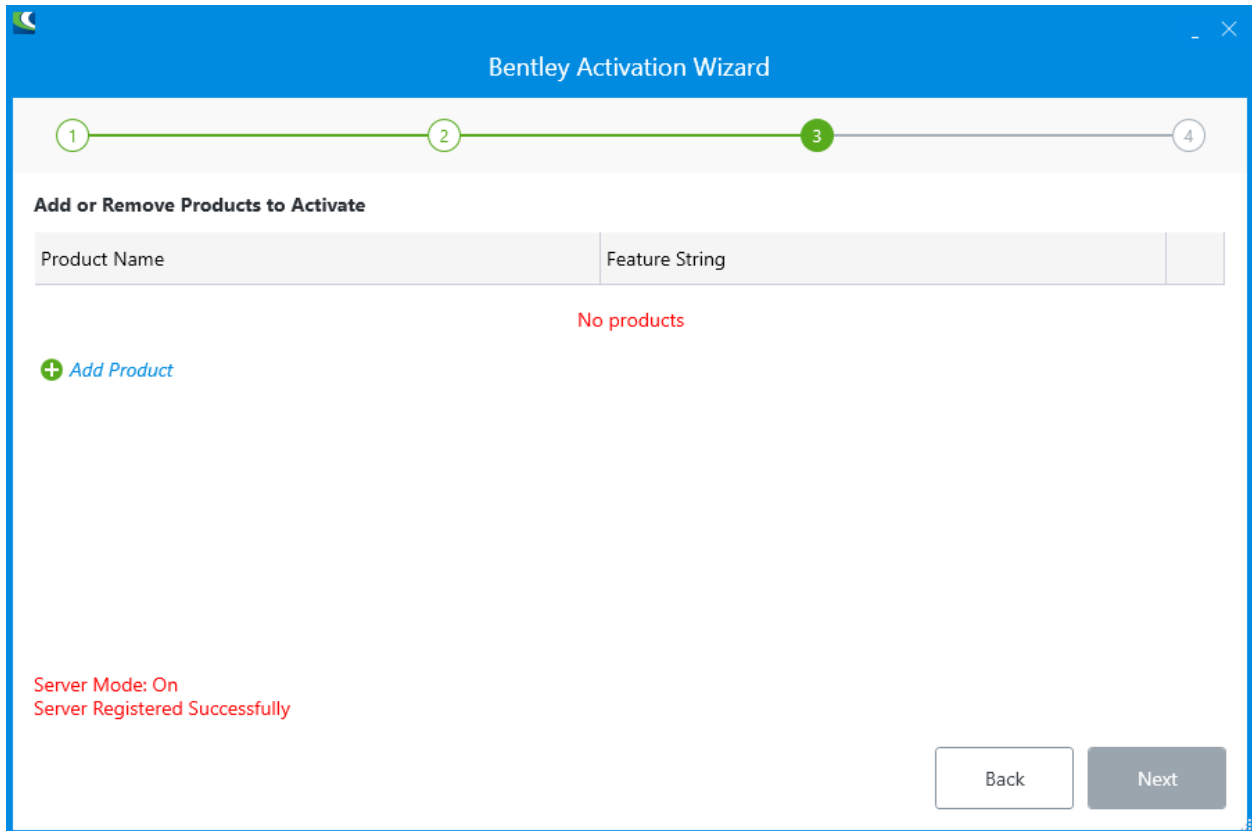


Click "+ Add Product"


Type in "Smart 3D Extractor". Make sure the selection is in the text box and then click the check mark at the right.

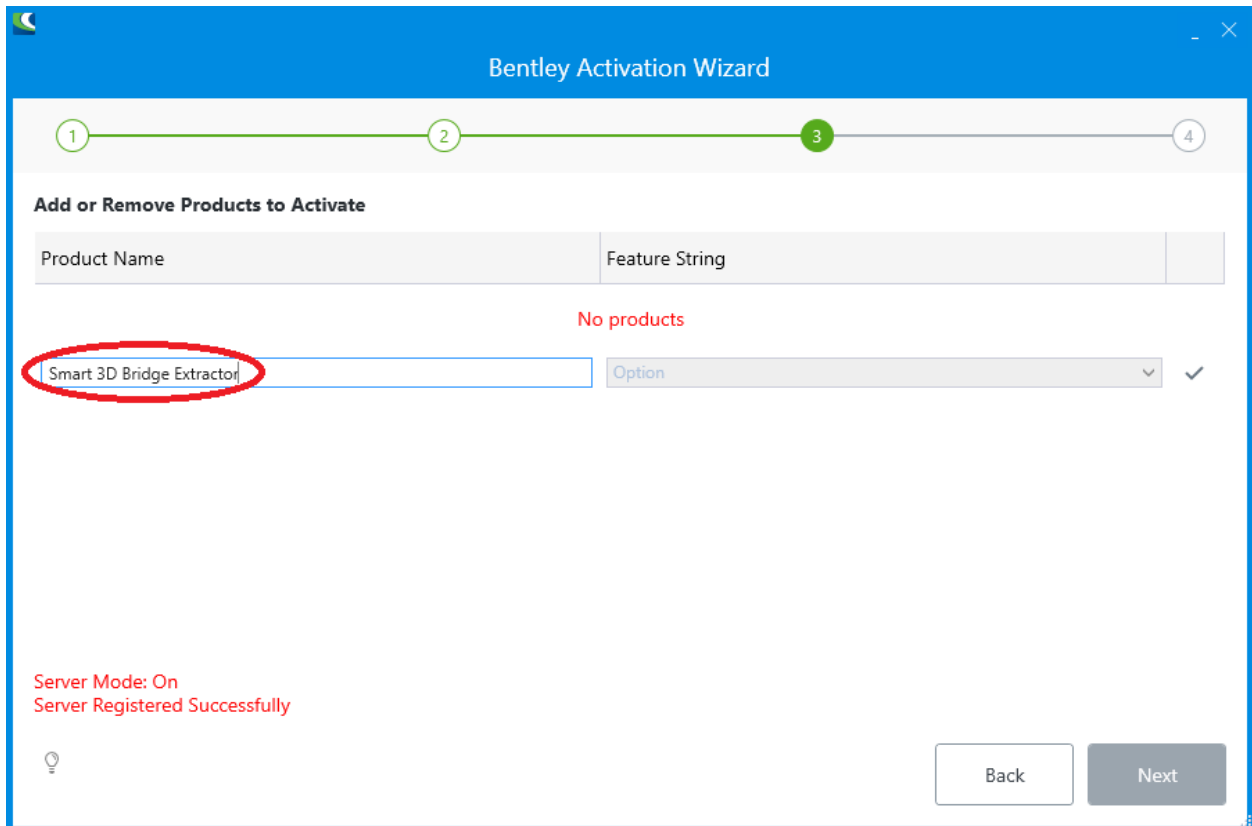

You should then have this:

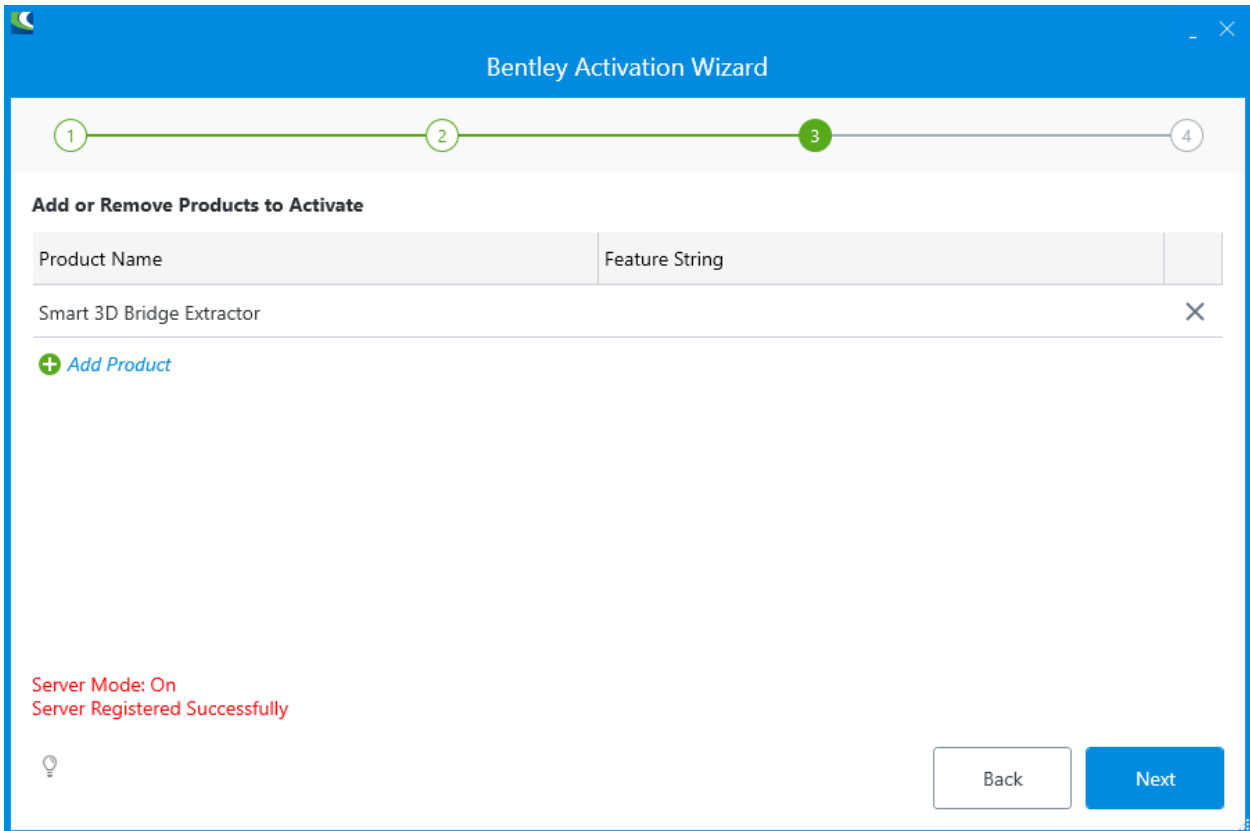

Click the “+ Add Product” again and this time add “Open 3D Model Connector”. After adding this product, the wizard should look like this:

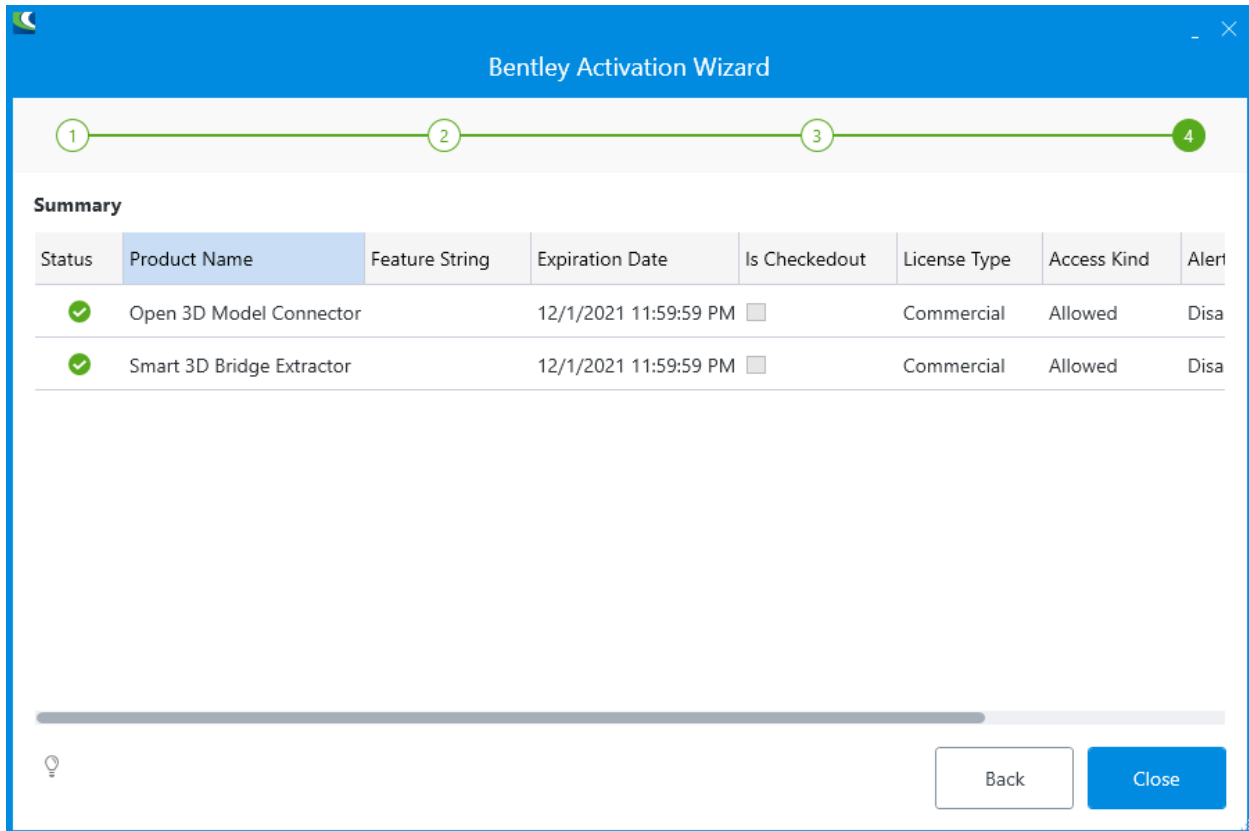

Click Next. You should see that the status for both products is labeled with a green checkmark.

Press close and the install of the Smart 3D Extractor should be complete.

#### 4.2. Installation of Open 3D Model Connector


Install Setup\_PlantSightOpen3DModelBridgex64\_10.08.xx.yy.exe.

#### 5. Configure Smart 3D Extractor Admin shortcut


If you are using a database that has been restored just on SQL and not on a machine that has Smart 3D installed, you will need to create a different shortcut for Smart 3D Extractor Admin. If you are using the Smart 3D Extractor on a machine with Smart 3D installed, skip this section and the next section.

Find the “PlantSight Smart 3D Extractor Admin” shortcut in the Windows Start menu



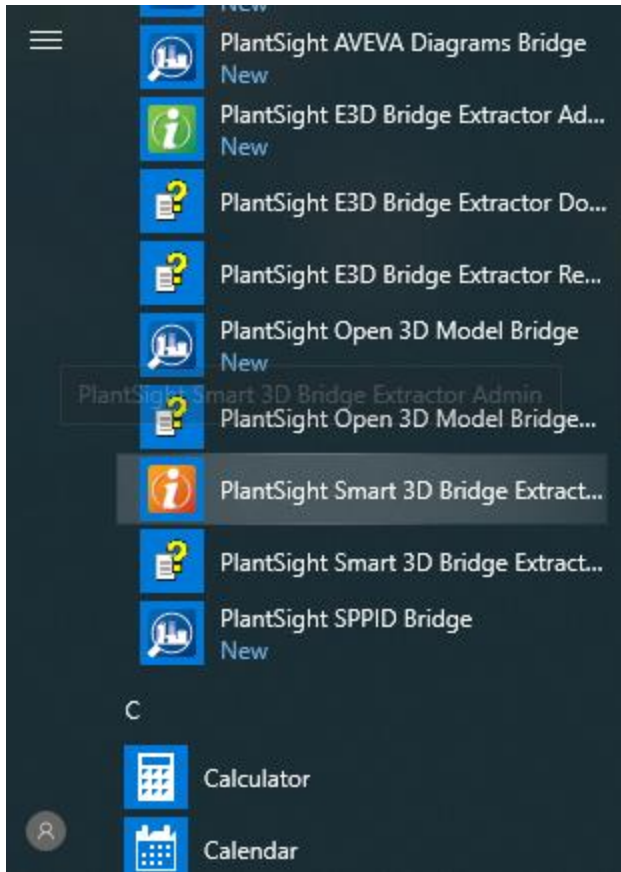


Right click on the shortcut and select Open file location

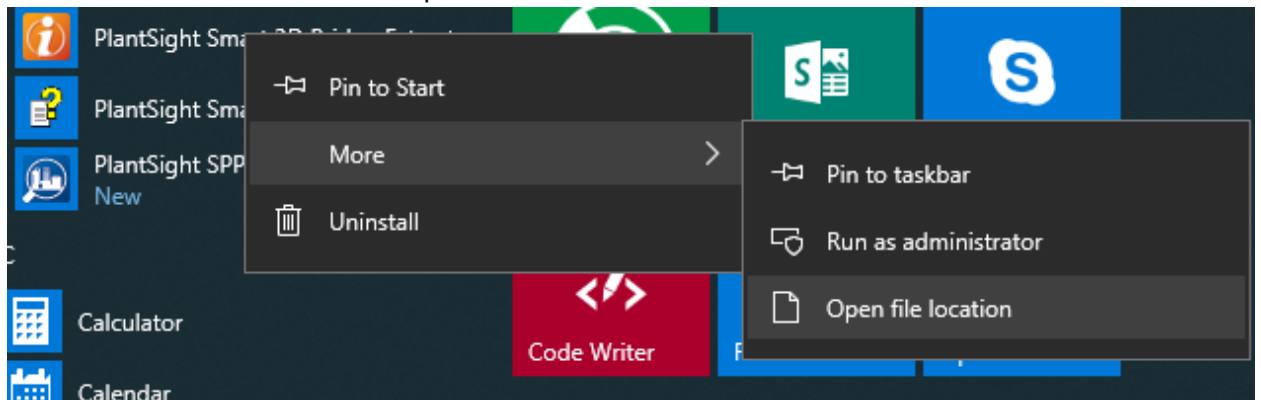

Copy the shortcut to the desktop.

Right click on the shortcut and select properties.


Add “-ds” to the target. By adding the -ds parameter, this will bring up the Data Sources tab in iCS for S3D Admin. This allows restoring Smart 3D databases without the need for installing Smart 3D.

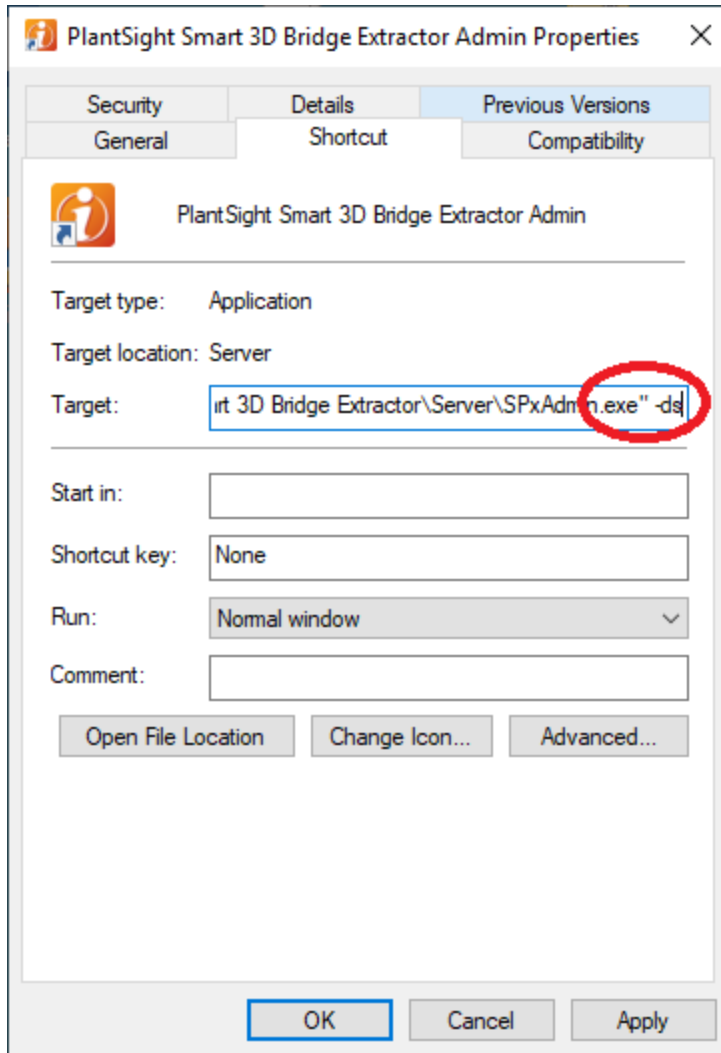


Click OK

Run the shortcut you just created.

Select the "Convert to OpenPlant EC Schema" and click Apply

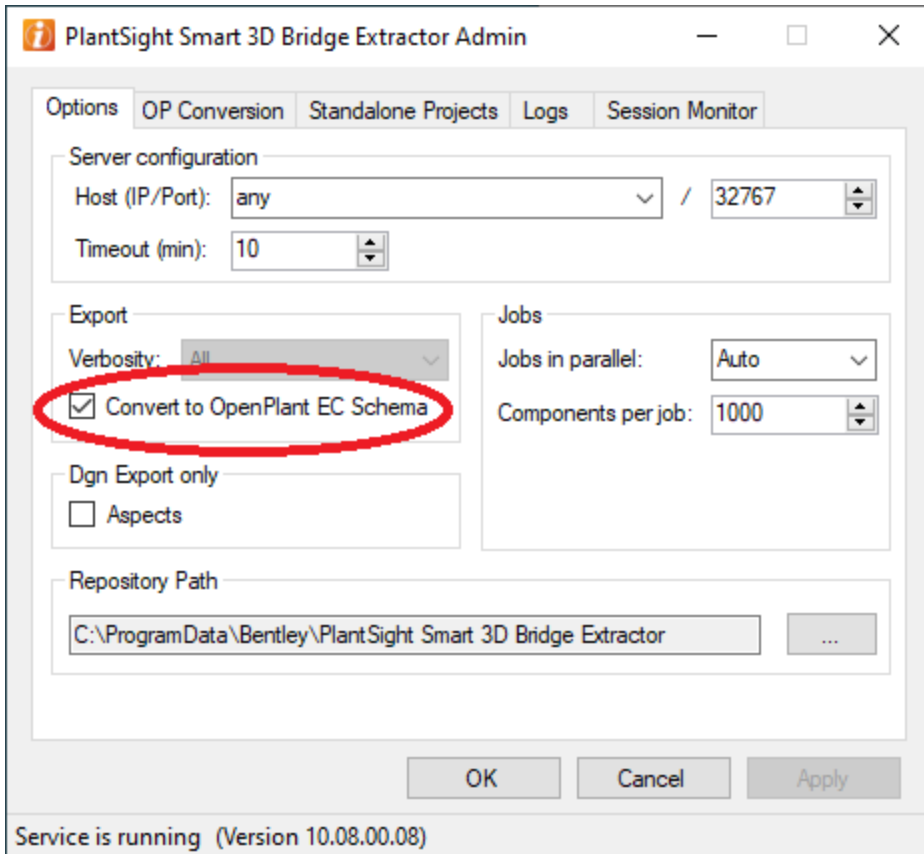


Click Yes

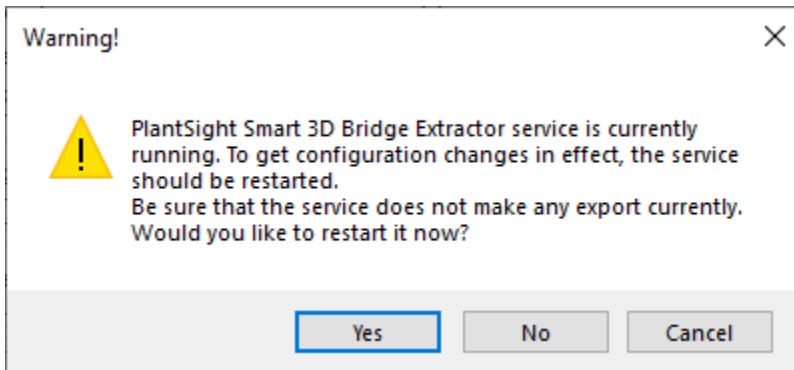

Also make sure that the Convert to OpenPlant EC Schema is set for Smart 3D Extractor as well by running the Smart 3D Extractor Admin from the start menu and setting the “Convert to OpenPlant EC Schema” option.

For Smart 3D Conversions, you should also make sure that the Target Workspace is set before you run any conversions:

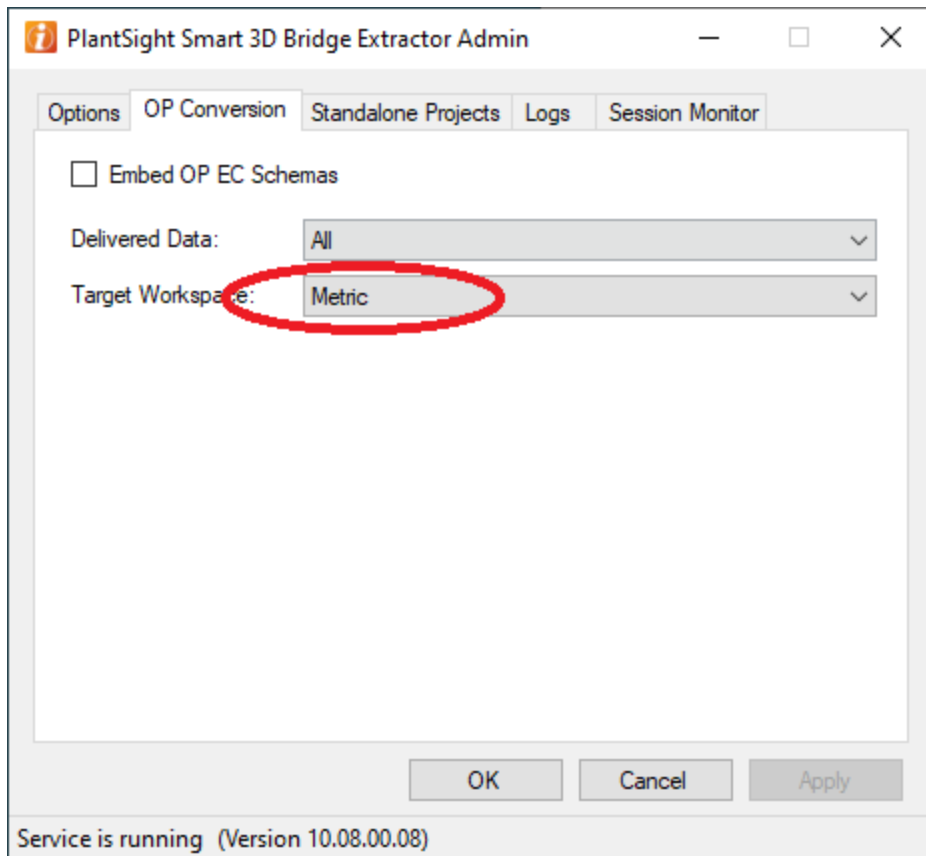

## 6. Restore Smart 3D databases

The ideal configuration is to install the Smart 3D Extractor on a machine with Smart 3D installed and running with the project(s) to be converted, but this is not required. Alternatively, we can restore a backup of the Smart 3D project when we have SQL installed on the machine with Smart 3D Extractor installed. This allows us to get data from a Smart 3D project without having Smart 3D installed and configured. In addition, since we also want to show how changes to the model can be handled, we will actually restore 2 projects. This is only to simulate how the data will be loaded.

In actual usage, instead of restoring the database, we would instead just install the Smart 3D Extractor onto a machine that has access to the Smart 3D project. Any changes made to the model on further imports would be obtained directly from the Smart 3D project.

### 6.1. Unzip sample databases for Smart 3D

You can request the location of 2 sample projects:

S3D\_Train-Original-2018-11-13.7z

S3D\_Train-Modified-2018-11-13.7z

These are backups of the same Smart 3D projects, but at different states. Unzip these projects to folders such as:

C:\S3D\_Train-modified-2018-11-13\  
And


And

C:\S3D\_Train-Original-2018-11-13\


It is recommended these folders be placed on C:\ instead of something such as your desktop because permission issues can cause errors while you are restoring the databases. Once the databases are restored, you can delete these folders to recover the space used.

## 6.2. Restore the first Smart 3D database

Run the shortcut you created for Smart 3D Extractor.

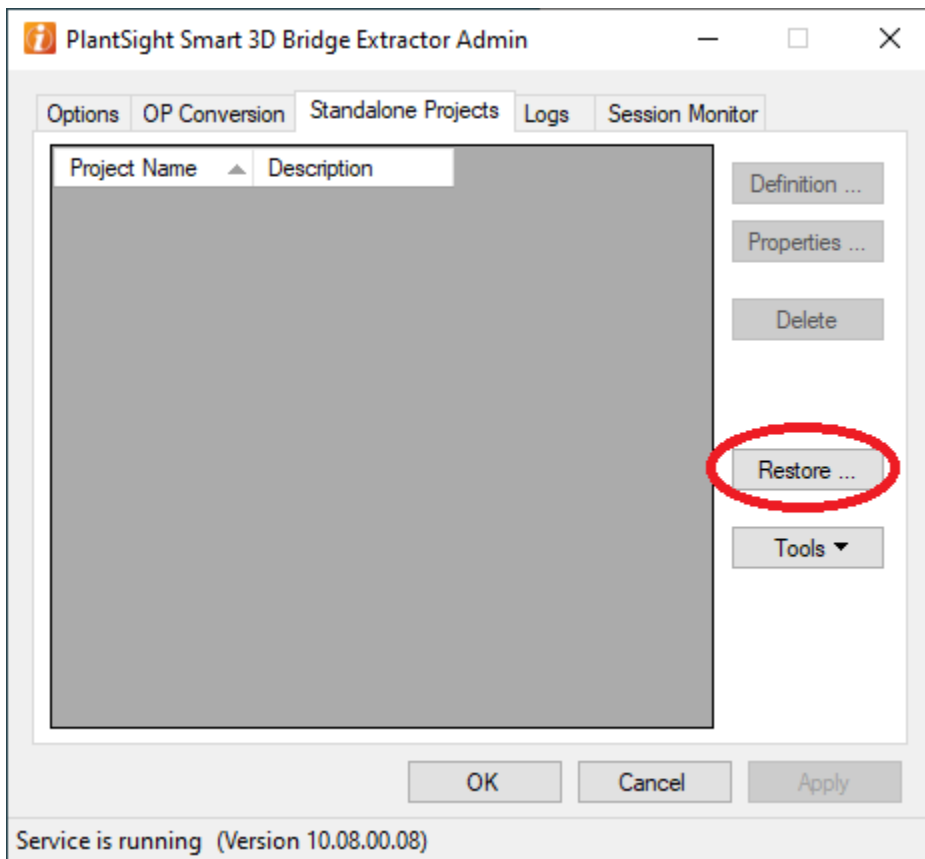


Make sure it has the Data Sources tab and then select Restore.

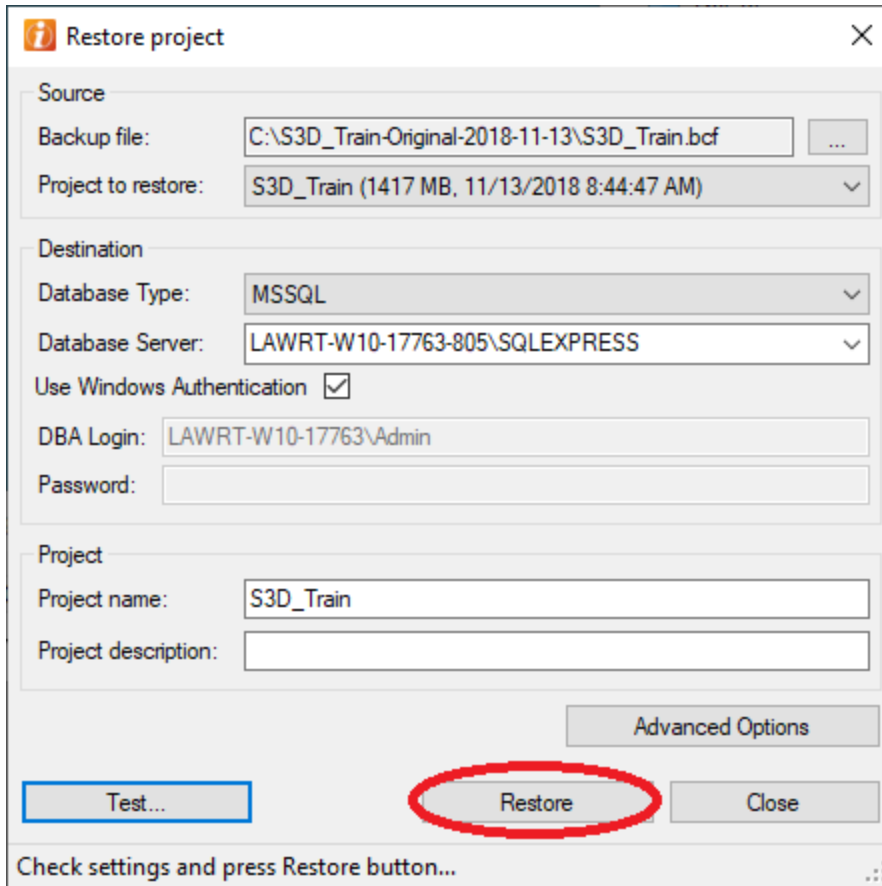


Enter the path to the original restored database along with the Database Server. Then click Restore.

When you click on Restore, you may get this message:

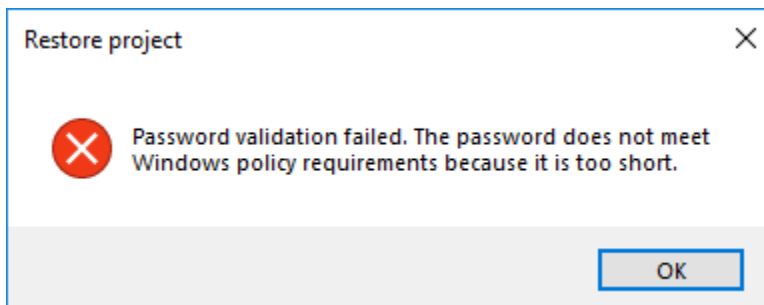

If this happens, click the advanced options, if not you should see a progress bar that reports the progress of the database restore which will probably take a few minutes.

Then update the password with one that meets the requirements specified for your machine. For example, you may require a certain length which may not be met using the default password.

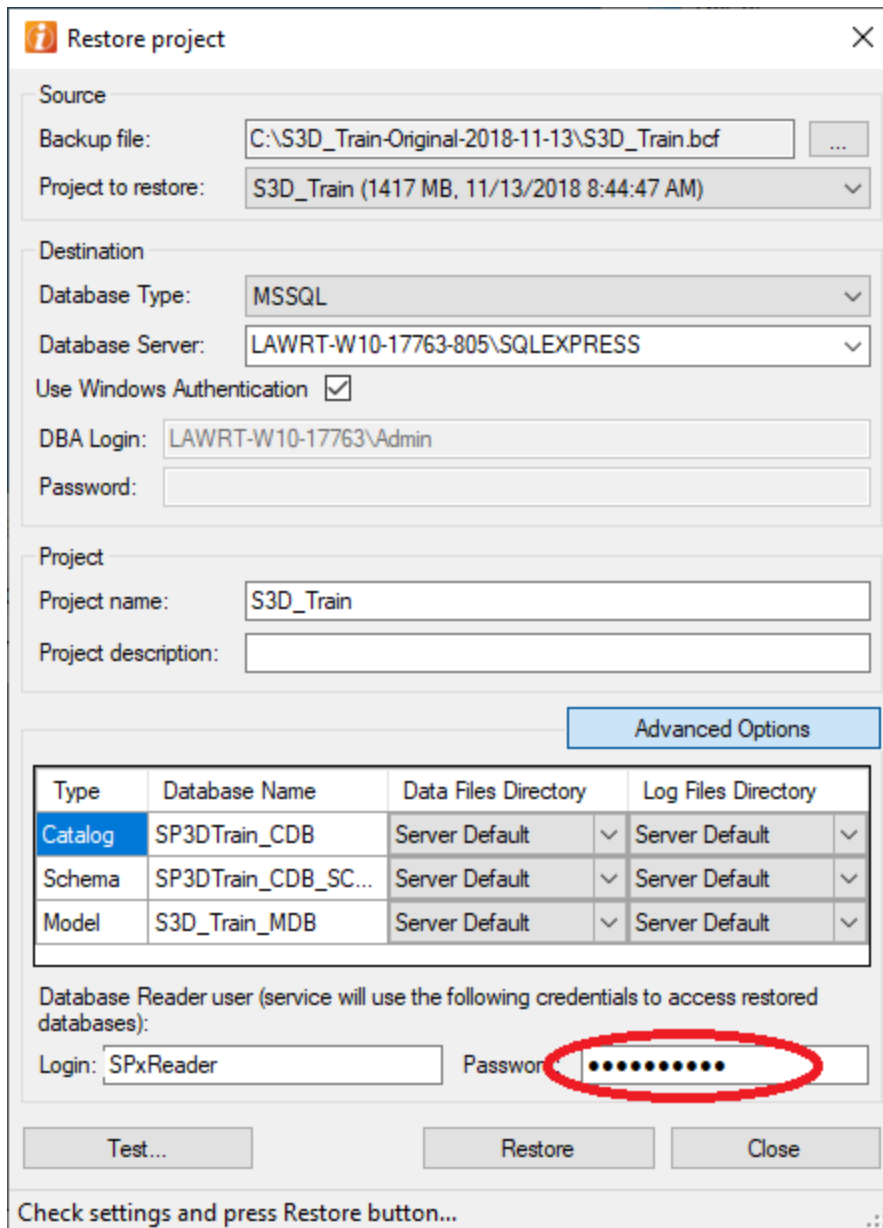


After clicking Restore again, you should get the progress bar for restoring the database.

### 6.3. After the initial restoration of the Smart 3D Database

After the restore has completed, click Apply and you will get this message:




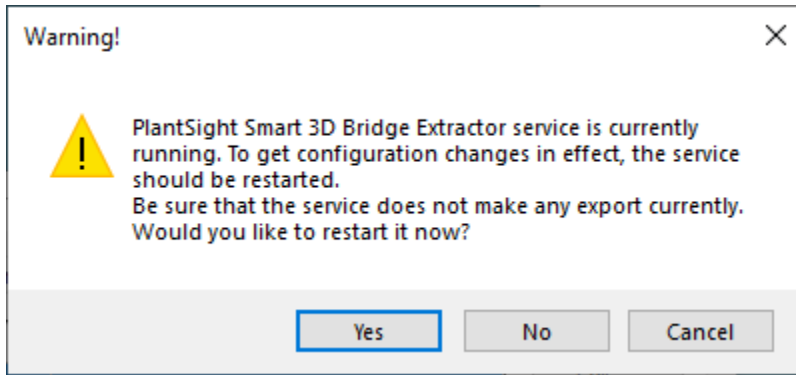

Click Yes.


## 7. Run the Open 3D Model Connector

In the start menu find PlantSight Open 3D Model Bridge.

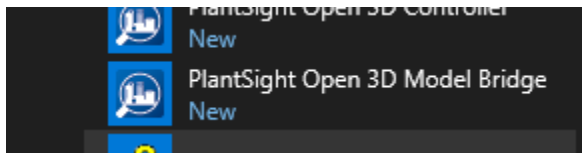


Open 3D Model Bridge and find Open3DModelBridge.exe


The first time you run it, you will need to authenticate:

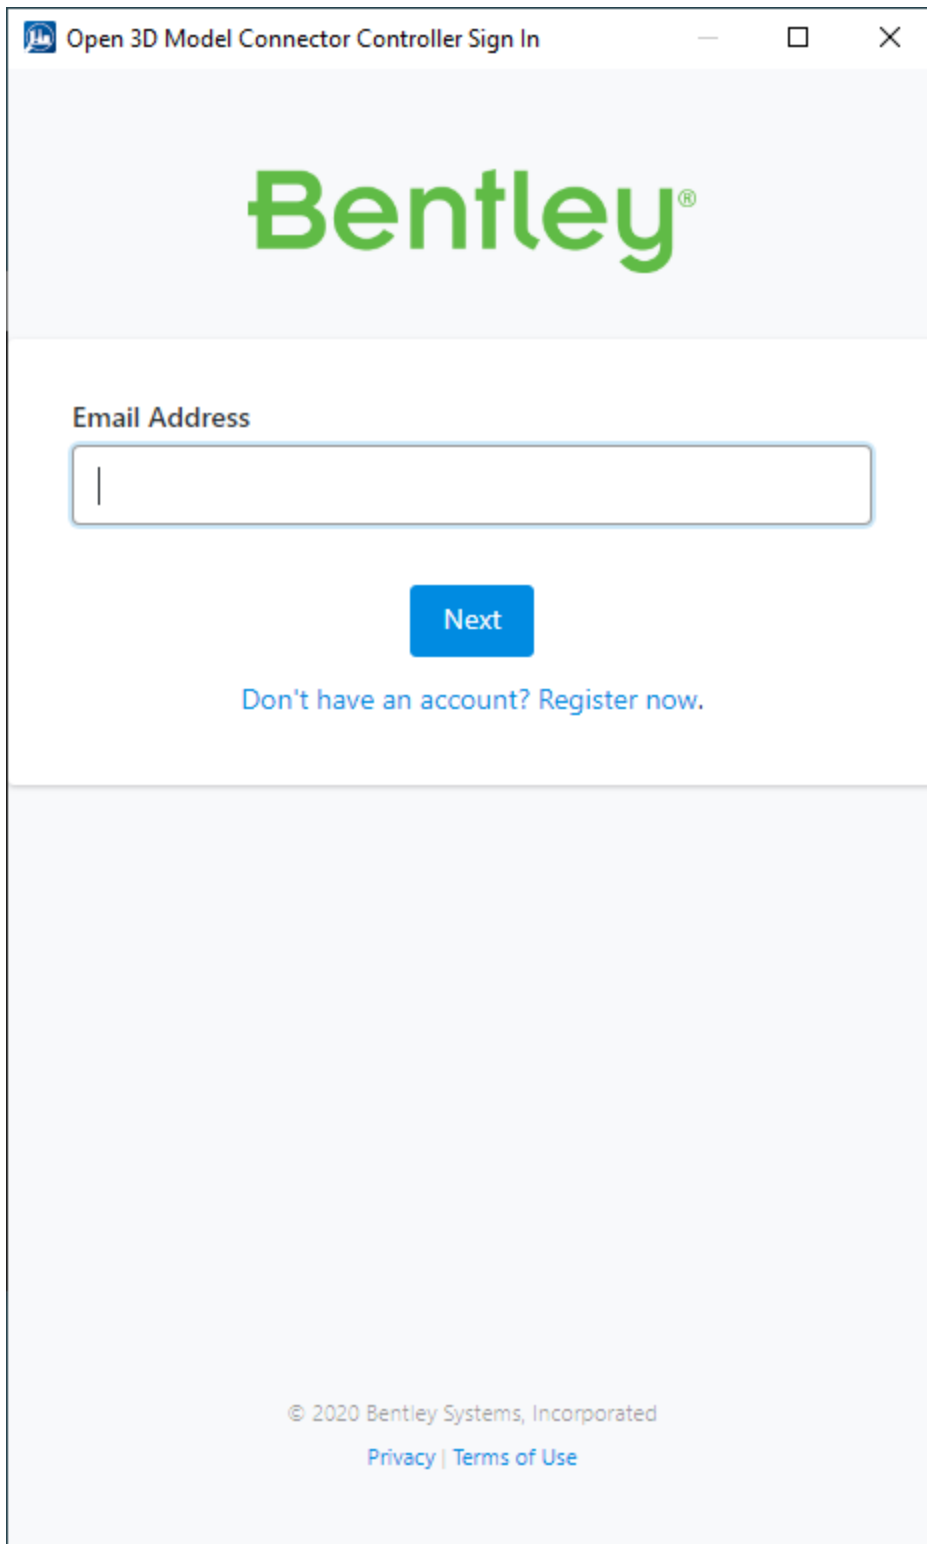

Then accept the permission request:

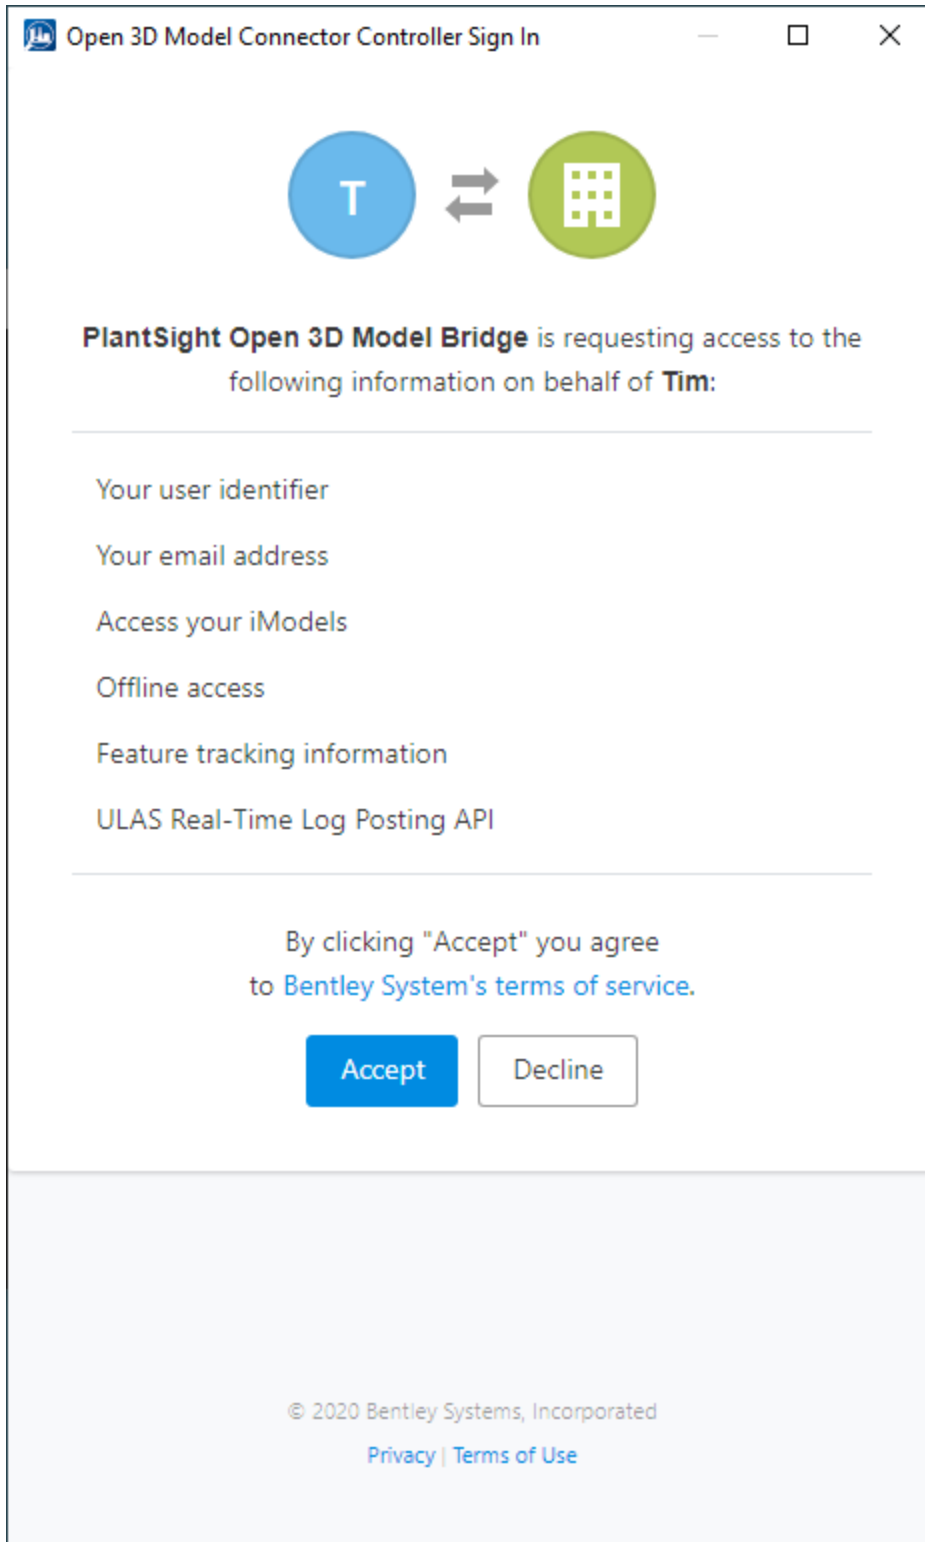

Then the bridge will appear:

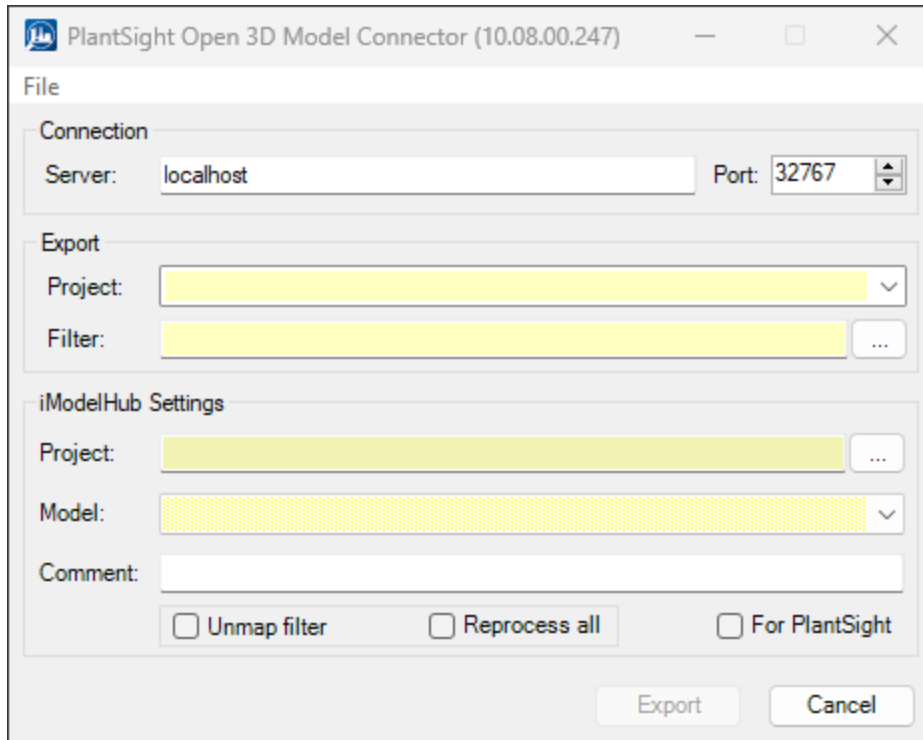

Use “local host” for the server site since the Smart 3D Extractor is running on the same machine as the controller. If this is not the case, then you can use the IP Address or the machine name instead of local host.

You also need to set the port number. The default value is set to 32767, which is the default value for the Smart 3D Extractor. You can confirm this by running the Smart 3D Admin application which displays the port number it is using.

Select the CONNECTED and the iModel, then click Export to run the iModel Bridge.

The additional check boxes are:

**Unmap filter:** This is used when you want to remove a synchronized filter from the iModel. Selecting this and running the connector will result in the content from the filter to be removed from the latest changeset in the iModel.

**Reprocess all:** In order to utilize changes in a new connector release when your source models have not changed, select this option which will force the synchronization on all elements. Normally if the source data has not changed, a connector run will skip over the synchronization.

**For PlantSight:** If you are using PlantSight for this iModel and are using the aggregation capabilities, select this option in order to have the iModel Connector create the functional staging model that is required for aggregation.