

---

# PLAXIS

---

CONNECT Edition V20.02

PLAXIS 3D - Tutorial Manual

---



Last Updated: March 06, 2020

# Table of Contents

<b>Chapter 1: Introduction .....</b>	<b>5</b>
<b>Chapter 2: Foundation in overconsolidated clay .....</b>	<b>6</b>
Case A: Rigid foundation .....	7
Create a new project .....	8
Define the soil stratigraphy .....	10
Create and assign material data sets .....	11
Define the structural elements .....	14
Generate the mesh .....	15
Define and perform the calculation .....	18
View the calculation results .....	21
Case B: Raft foundation .....	22
Create a new project .....	23
Create and assign a material data set .....	24
Define the structural elements .....	24
Generate the mesh .....	27
Define and perform the calculation .....	27
View the calculation results .....	28
Case C: Pile-Raft foundation .....	30
Create a new project .....	30
Define the structural elements: Foundation piles .....	31
Generate the mesh .....	32
Define and perform the calculation .....	33
View the calculation results .....	34
<b>Chapter 3: Excavation in sand .....</b>	<b>36</b>
Create a new project .....	37
Define the soil stratigraphy .....	38
Create and assign the material data sets .....	38
Define the structural elements .....	40
Walings and Struts .....	40
Ground anchors .....	41
Pile sheet walls and loads .....	43
Generate the mesh .....	44
Define the calculation .....	44
Execute the calculation .....	47
Results .....	47
<b>Chapter 4: Loading of a suction pile .....</b>	<b>51</b>
Create a new project .....	52
Define the soil stratigraphy .....	52
Create and assign the material data sets .....	52
Define the structural elements .....	54
Create a suction pile .....	54
Create helper objects for local mesh refinements .....	58

Generate the mesh .....	60
Define the calculation .....	60
Execute the calculation .....	61
Results .....	61
<b>Chapter 5: Construction of a road embankment .....</b>	<b>63</b>
Create a new project .....	63
Define the soil stratigraphy .....	64
Create and assign the material data sets .....	64
Definition of embankment and drains .....	67
Generate the mesh .....	69
Define the calculation .....	70
Initial phase .....	70
Consolidation analysis .....	71
Execute the calculation .....	72
Results .....	73
Safety analysis .....	77
Using drains .....	80
<b>Chapter 6: Stability of a diaphragm wall excavation .....</b>	<b>82</b>
Create a new project .....	83
Define the soil stratigraphy .....	83
Create and assign the material data sets .....	83
Definition of the diaphragm wall .....	84
Generate the mesh .....	85
Define the calculation .....	86
Execute the calculation .....	88
Results .....	89
<b>Chapter 7: Phased excavation of a shield tunnel .....</b>	<b>91</b>
Define the geometry .....	91
Define the soil stratigraphy .....	92
Create and assign the material data sets .....	93
Definition of structural elements .....	94
Create tunnel .....	95
Surface contraction .....	97
Grout pressure .....	98
Tunnel face pressures .....	98
Jack forces .....	99
Trajectory .....	99
Sequencing .....	100
Generate the mesh .....	108
Define and perform the calculation .....	108
Initial phase .....	109
Phase 1: Initial position of the TBM .....	109
Phase 2: TBM advancement 1 .....	111
Phase 3: TBM advancement 2 .....	111
Phase 4: TBM advancement 3 .....	111
Phase 5: TBM advancement 4 .....	112
Results .....	112
<b>Chapter 8: Rapid drawdown analysis .....</b>	<b>114</b>

Define the geometry .....	114
Define the soil stratigraphy .....	115
Create and assign material data sets .....	115
Define the dam .....	117
Generate the mesh .....	117
Define and perform the calculation .....	118
Initial phase: High reservoir .....	119
Phase 1: Rapid drawdown .....	120
Phase 2: Slow drawdown .....	121
Phase 3: Low level .....	122
Phase 4 to 7 .....	123
Execute the calculation .....	123
Results .....	124
<b>Chapter 9: Dynamic analysis of a generator on an elastic foundation .....</b>	<b>128</b>
Define the geometry .....	129
Define the soil stratigraphy .....	130
Create and assign material data sets .....	130
Definition of structural elements .....	131
Generate the mesh .....	132
Define and perform the calculation .....	133
Initial phase .....	133
Phase 1 .....	133
Phase 2 .....	134
Phase 3 .....	136
Execute the calculation .....	137
Additional calculation with damping .....	137
Results .....	138
<b>Chapter 10: Free vibration and earthquake analysis of a building .....</b>	<b>141</b>
Define the geometry .....	141
Define the soil stratigraphy .....	142
Create and assign material data sets .....	142
Definition of structural elements .....	146
Create a building .....	146
Create the loads .....	147
Create interfaces on the boundary .....	149
Generate the mesh .....	149
Define and perform the calculation .....	149
Initial phase .....	150
Phase 1 .....	150
Phase 2 .....	150
Phase 3 .....	150
Phase 4 .....	151
Execute the calculation .....	153
Results .....	153
Calculation scheme for initial stresses due to soil weight .....	158

# 1

## Introduction

---

PLAXIS 3D is a finite element package that has been developed specifically for the analysis of deformation, stability and flow in geotechnical engineering projects. The simple graphical input procedures enable a quick generation of complex finite element models, and the enhanced output facilities provide a detailed presentation of computational results. The calculation itself is fully automated and based on robust numerical procedures. This concept enables new users to work with the package after only a few hours of training.

Though the various tutorials deal with a wide range of interesting practical applications, this Tutorial Manual is intended to help new users become familiar with PLAXIS 3D. The tutorials and the respective material data sets should therefore not be used as a basis for practical projects.

Users are expected to have a basic understanding of soil mechanics and should be able to work in a Windows environment. It is strongly recommended that the tutorials are followed in the order that they appear in the manual. Please note that minor differences in results may be found, depending on hardware and software configuration.

The Tutorial Manual does not provide theoretical background information on the finite element method, nor does it explain the details of the various soil models available in the program. The latter can be found in the Material Models Manual, as included in the full manual, and theoretical background is given in the Scientific Manual. For detailed information on the available program features, the user is referred to the Reference Manual. In addition to the full set of manuals, short courses are organised on a regular basis at several places in the world to provide hands-on experience and background information on the use of the program.

# 2

## Foundation in overconsolidated clay

---

In this chapter a first application of PLAXIS 3D is considered, namely the settlement of a foundation in clay. This is the first step in becoming familiar with the practical use of the PLAXIS 3D program.

The general procedures for the creation of a geometry, the generation of a finite element mesh, the execution of a finite element calculation and the evaluation of the output results are described here in detail. The information provided in this tutorial will be utilised in the following tutorials. Therefore, it is important to complete this first tutorial before attempting any further tutorial examples.

### Geometry

This exercise deals with the construction and loading of a foundation of a square building in a lightly overconsolidated lacustrine clay. Below the clay layer there is a stiff rock layer that forms a natural boundary for the considered geometry. The rock layer is not included in the geometry; instead an appropriate boundary condition is applied at the bottom of the clay layer. The purpose of the exercise is to find the settlement of the foundation.

The building consists of a basement level and 5 floors above the ground level. To reduce calculation time, only one-quarter of the building is modelled, using symmetry boundary conditions along the lines of symmetry. To enable any possible mechanism in the clay and to avoid any influence of the outer boundary, the model is extended in both horizontal directions to a total width of 75 m.

The model is considered in three different cases:

- Case A: The building is considered very stiff and rough. The basement is simulated by means of non-porous linear elastic volume elements.
- Case B: The structural forces are modelled as loads on a raft foundation.
- Case C: Embedded beams are included in the model to reduce settlements.

# Foundation in overconsolidated clay

## Case A: Rigid foundation

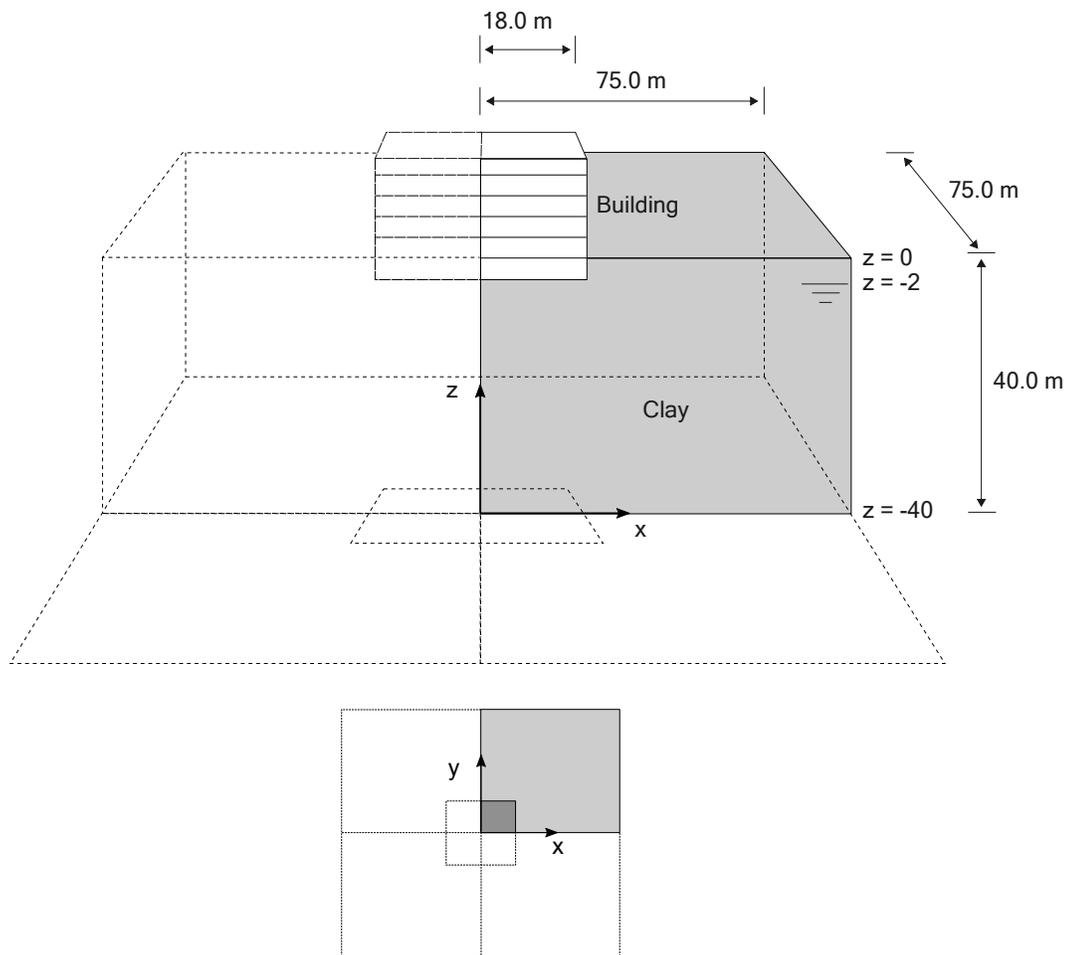


Figure 1: Geometry of a square building on a raft foundation

## Case A: Rigid foundation

In this case, the building is considered to be very stiff. The basement is simulated by means of non-porous linear elastic volume elements. The total weight of the basement corresponds to the total permanent and variable load of the building. This approach leads to a very simple model and is therefore used as a first exercise, but it has some disadvantages. For example it does not give any information about the structural forces in the foundation.

## Objectives

- Starting a new project
- Creation of soil stratigraphy using a single borehole
- Creation of material data sets
- Creation of volumes using **Create surface** and **Extrude** tools
- Assigning material
- Local mesh refinement
- Generation of the mesh

# Foundation in overconsolidated clay


Case A: Rigid foundation

- Generating initial stresses using the  $K_0$  procedure
- Defining a **Plastic** calculation

## Create a new project

1. Start PLAXIS 3D by double clicking the icon of the Input program 

The **Quick start** dialog box appears in which you can create a new project or select an existing one.

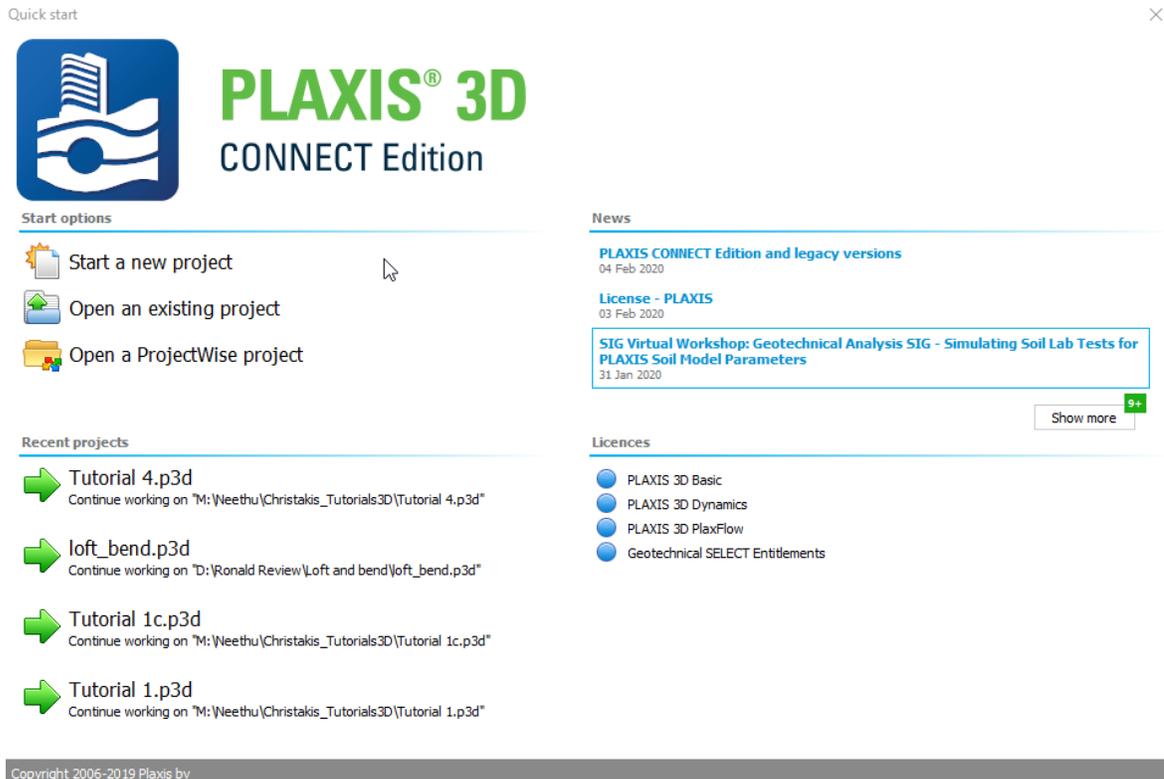


2. Click **Start a new project**.

The **Project properties** window appears with the tabsheets: **Project**, **Model** and **Cloud services**.

# Foundation in overconsolidated clay

## Case A: Rigid foundation

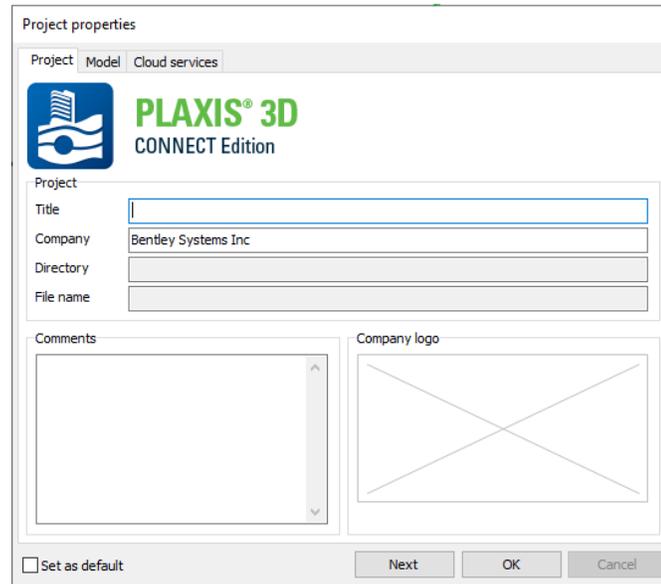


### Note:

The first step in every analysis is to set the basic parameters of the finite element model. This is done in the **Project properties** window. These settings include the description of the problem, the type of model, the basic type of elements, the basic units and the size of the drawing area.

To enter the appropriate settings for the footing calculation follow the steps below.

3. In the **Project** tabsheet, enter **Tutorial 1** in the **Title** box and type **Settlements of a foundation** in the **Comments** box.
4. Click the **Next** button at the bottom or click the **Model** tab.  
The **Model** properties are shown:

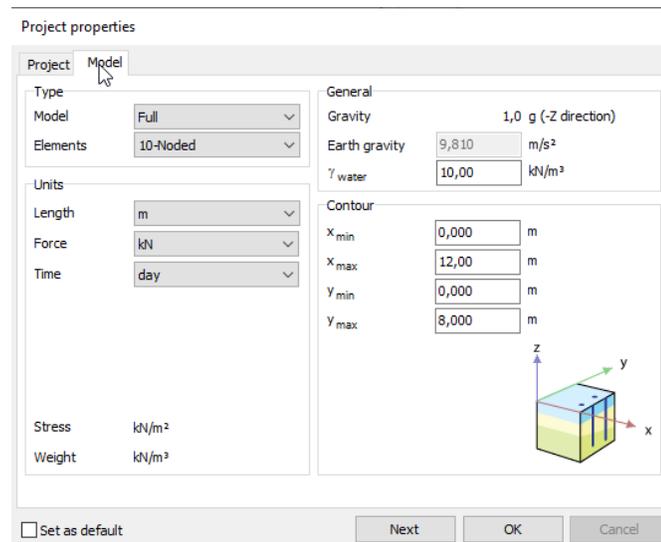

5. Keep the default units in the **Units** box (Length = m; Force = kN; Time = day).
6. The **General** box indicates a fixed gravity of 1.0 G, in the vertical downward direction (-z).
7. In the  $\gamma_{\text{water}}$  box the unit weight of water can be defined. Keep this to the default value of 10 kN/m<sup>3</sup>.

## Foundation in overconsolidated clay

### Case A: Rigid foundation

---

8. In the **Contour** group set the model dimensions to
  - a.  $x_{\min} = 0.0$  and  $x_{\max} = 75.0$ ,
  - b.  $y_{\min} = 0.0$  and  $y_{\max} = 75.0$ .
9. Click the **OK** button to confirm the settings.

The project is created with the given properties. The **Project properties** window closes and the **Soil mode** view will be shown, where the soil stratigraphy can be defined.

**Note:** The project properties can be changed later. You can access them by selecting the menu **File > Project properties ....**

## Define the soil stratigraphy

In the **Soil** mode of PLAXIS 3D the soil stratigraphy can be defined.

Information on the soil layers is entered in boreholes. Boreholes are locations in the drawing area at which the information on the position of soil layers and the water table is given. If multiple boreholes are defined, PLAXIS 3D will automatically interpolate between the boreholes and derive the position of the soil layers from the borehole information.

**Note:** PLAXIS 3D can also deal with layers that are discontinuous, i.e. only locally present in the model area. See the info on Multiple boreholes of the Reference Manual for more information.

In the current example, only one soil layer is present, and only a single borehole is needed to define the soil stratigraphy. In order to define the borehole, follow these steps:

1. Click the **Create borehole** button  in the side toolbar to start defining the soil stratigraphy.
2. Click on position (0 0 0) in the geometry.

A borehole will be located at  $(x,y) = (0\ 0)$ .

The **Modify soil layers** window will appear.
3. Add a soil layer by clicking the **Add** button in the **Modify soil layers** window.
4. Keep the top boundary of the soil layer at  $z = 0$  and set the bottom boundary to  $z = -40$  m.
5. Set the **Head** to -2.0 m.

# Foundation in overconsolidated clay

Case A: Rigid foundation

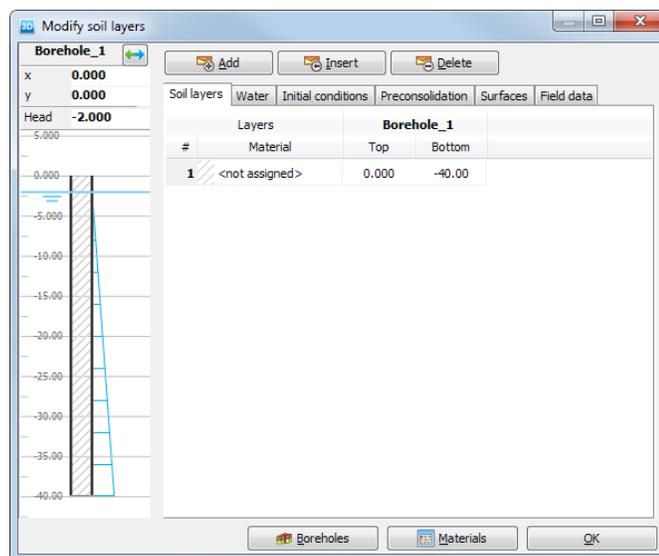


Figure 2: **Modify soil layers** window

Next, the material data sets are defined and assigned to the soil layers.

## Create and assign material data sets

In order to simulate the behaviour of the soil, a suitable material model and appropriate material parameters must be assigned to the geometry. In PLAXIS 3D soil properties are collected in material data sets and the various data sets are stored in a material database. From the database, a data set can be assigned to one or more clusters. For structures (like beams, plates, etc.) the system is similar, but different types of structures have different parameters and therefore different types of data sets.

PLAXIS 3D distinguishes between material data sets for **Soils and interfaces, Plates, Geogrids, Beams, Embedded beams** and **Anchors**.

The materials used in this tutorial have the following properties:

**Table 1: Material properties**

Parameter	Name	Lacustrine clay	Building	Unit
General				
Material model	Model	Mohr-Coulomb model	Linear Elastic model	-
Drainage type	Type	Drained	Non-porous	-
Unit weight above phreatic level	$\gamma_{unsat}$	17.0	50	kN/m <sup>3</sup>
Unit weight above phreatic level	$\gamma_{sat}$	18.0	-	kN/m <sup>3</sup>

## Foundation in overconsolidated clay

Case A: Rigid foundation

Parameter	Name	Lacustrine clay	Building	Unit
Parameters				
Young's modulus (constant)	$E'$	$1 \cdot 10^4$	$3 \cdot 10^7$	kN/m <sup>2</sup>
Poisson's ratio	$\nu'$	0.3	0.15	-
Cohesion	$c'_{ref}$	10	-	kN/m <sup>2</sup>
Young's modulus (constant)	$\phi'$	30.0	-	°
Dilatancy angle	$\psi$	0.0	-	°
Initial				
$K_0$	-	Automatic	Automatic	-
Lateral earth pressure	$K_0$	0.5000	0.5000	-

To create the material sets for this tutorial, follow these steps:

1. Click the **Materials** button  in the **Modify soil layers** window or in the side toolbar. The **Material sets** window pops up.

**Note:** If necessary the **Modify soil layers** window can be re-opened by double-clicking the borehole in the drawing area or by selecting the menu **Soil > Modify soil layers**.

### Create the Lacustrine clay material set

First create the material set for the clay:

1. Click the **New** button at the lower side of the **Material sets** window. The **Soil** window will appear. It contains five tabsheets: **General**, **Parameters**, **Groundwater**, **Interfaces** and **Initial**.
2. In the **General** tabsheet, **Material set** section, **Identification** field, type Lacustrine Clay.
3. Select Mohr-Coulomb model from the **Material model** drop-down menu and **Drained** from the **Drainage type** drop-down menu.

**Note:** To understand why a particular soil model has been chosen, see Appendix B of the Material Models Manual.

4. Enter the unit weights in the **General properties** box according to the material data as listed in [Table 1: Material properties](#) (on page 11). Keep the unmentioned **Advanced parameters** as their default values.

# Foundation in overconsolidated clay

Case A: Rigid foundation

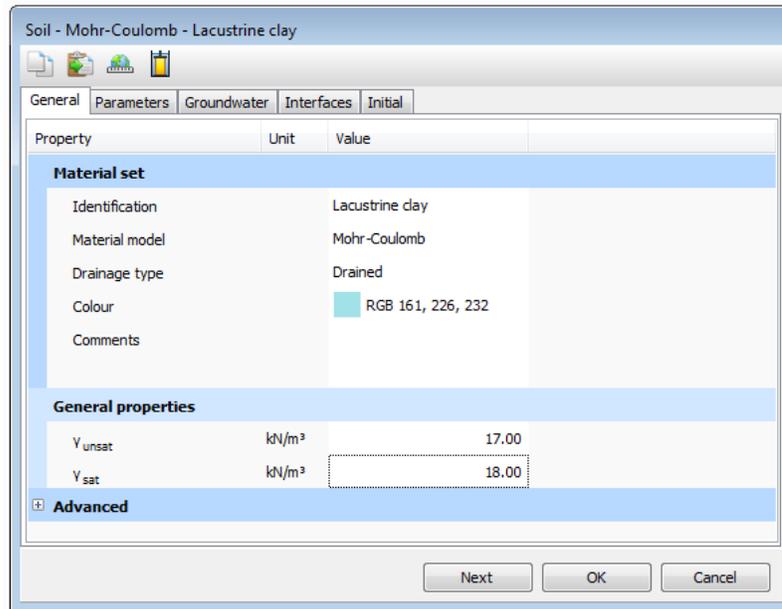


Figure 3: General tabsheet of the Soil and interfaces data set window

5. Click the **Next** button or click the **Parameters** tab to proceed with the input of model parameters. The parameters appearing on the **Parameters** tabsheet depend on the selected material model (in this case the Mohr-Coulomb model). The Mohr-Coulomb model involves only five basic parameters ( $E'$ ,  $\nu'$ ,  $c'_{ref}$ ,  $\phi'$ ,  $\psi'$ ). See the Material Models Manual for a detailed description of the different soil models and their corresponding parameters.
6. Enter the model parameters  $E'$ ,  $\nu'$ ,  $c'_{ref}$ ,  $\phi'$  and  $\psi'$  of **Lacustrine clay** according to [Table 1: Material properties](#) (on page 11) in the corresponding boxes of the **Parameters** tabsheet.

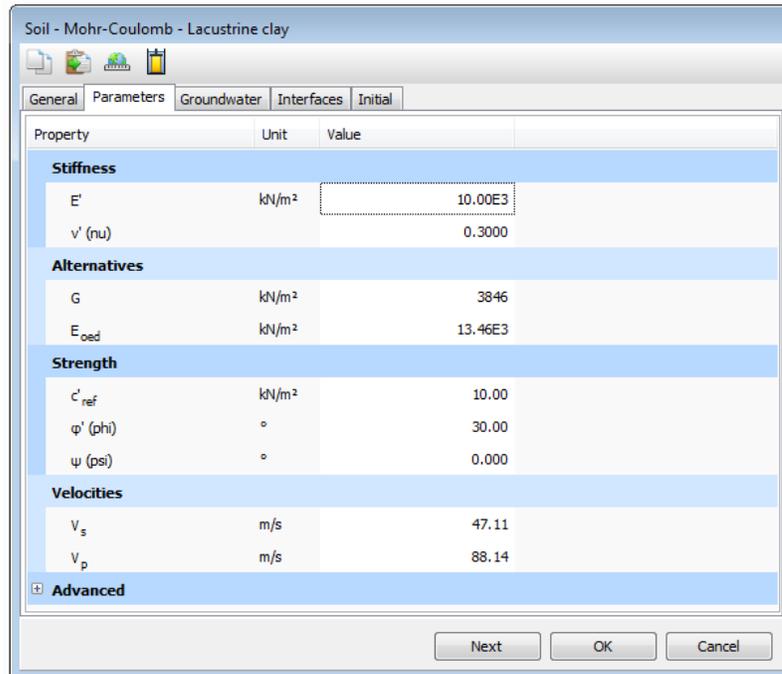


Figure 4: Parameters tabsheet of the Soil and interfaces data set window

## Foundation in overconsolidated clay

### Case A: Rigid foundation

---

7. No consolidation will be considered in this exercise. As a result, the permeability of the soil will not influence the results and the **Groundwater** window can be skipped.
8. Since the geometry model does not include interfaces, the **Interfaces** tab can be skipped.
9. Click the **Initial** tab and check that the **K0 determination** is set to **Automatic**. In that case  $K_0$  is determined from Jaky's formula:  $K_0 = 1 - \sin\phi$ .
10. Click the **OK** button to confirm the input of the current material data set.  
The created data set appears in the tree view of the **Material sets** window.
11. Drag the set **Lacustrine clay** from the **Material sets** window (select it and hold down the left mouse button while moving) to the graph of the soil column on the left hand side of the **Modify soil layers** window and drop it there (release the left mouse button).

**Note:** Notice that the cursor changes shape to indicate whether or not it is possible to drop the data set. Correct assignment of the data set to the soil layer is indicated by a change in the colour of the layer.

## Create the Building material set

The building is modelled by a linear elastic non-porous material. To define this data set, follow these steps:

1. Click the **New** button in the **Material sets** window.
2. In the **General** tabsheet, **Material set** section, **Identification** field, type Building.
3. Select Linear Elastic model from the **Material model** drop-down menu and **Non-porous** from the **Drainage type** drop-down menu.
4. Enter the unit weight in the **General properties** box according to the material data as listed in [Table 1: Material properties](#) (on page 11). This unit weight corresponds to the total permanent and variable load of the building.
5. Click the **Next** button or click the **Parameters** tab to proceed with the input of model parameters.  
The linear elastic model involves only two basic parameters ( $E'$ ,  $\nu'$ ).
6. Enter the model parameters of [Table 1: Material properties](#) (on page 11) in the corresponding edit boxes of the **Parameters** tabsheet.
7. Click the **OK** button to confirm the input of the current material data set.  
The created data set will appear in the tree view of the **Material sets** window, but it is not directly used.
8. Click the **OK** button to close the **Material sets** window.
9. Click the **OK** button to close the **Modify soil layers** window.

**Note:** PLAXIS 3D distinguishes between a project database and a global database of material sets. Data sets may be exchanged from one project to another using the global database. The global database can be shown in the **Material sets** window by clicking the **Show global** button. The data sets of all tutorials in the Tutorial Manual are stored in the global database during the installation of the program.

## Define the structural elements

The structural elements are created in the **Structures** mode of the program.

To model the building:

1. Click the **Structures** tab to proceed with the input of structural elements in the **Structures** mode.

## Foundation in overconsolidated clay

Case A: Rigid foundation

- Click the **Create surface** button . Position the cursor at the coordinate (0 0 0). Check the cursor position displayed in the cursor position indicator.  
As you click, the first surface point of the surface is defined.
- Define three other points with coordinates (0 18 0), (18 18 0), (18 0 0) respectively. Right-click or press **<Esc>** to finalize the definition of the surface.  
Note that the created surface is still selected and displayed in red.
- Click the **Extrude object** button  to create a volume from the surface.  
The **Extrude** window pops up.

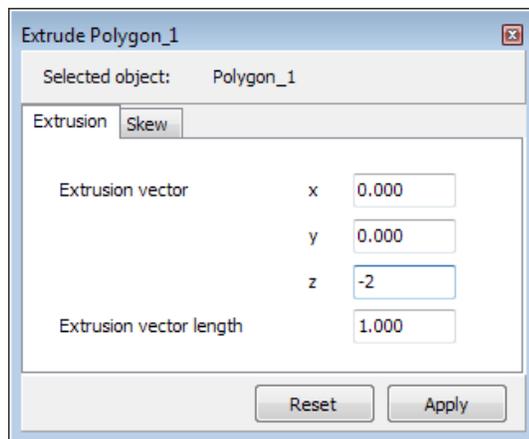


Figure 5: Extrude window

- Change the value of z to -2 and click **Apply** to close the window.
- Click the **Select** button .
- Right-click the created surface and select **Delete** from the appearing menu.  
This will delete the surface but the building volume is retained.

The building volume, as well as the corresponding material data sets have now been created.

## Generate the mesh

The model is complete. PLAXIS 3D allows for a fully automatic mesh generation procedure, in which the geometry is divided into volume elements and compatible structure elements, if applicable. The mesh generation takes full account of the position of the geometry entities in the geometry model, so that the exact position of layers, loads and structures is accounted for in the finite element mesh. A local refinement will be considered in the building volume.

### Note:

- By default, the **Element distribution** is set to **Medium**. The **Element distribution** setting can be changed in the **Mesh options** window. In addition, options are available to refine the mesh globally or locally (see Mesh Generation in the Reference Manual).
- The finite element mesh has to be regenerated if the geometry is modified.

## Foundation in overconsolidated clay

### Case A: Rigid foundation

- The automatically generated mesh may not be perfectly suitable for the intended calculation. Therefore it is recommended that the user inspects the mesh and makes refinements if necessary.

To generate the mesh, follow these steps:

1. Proceed to the **Mesh** mode by clicking the corresponding tab.
2. Click the **Refine mesh** button  in the side toolbar and click the created building volume to refine the mesh locally.  
It will colour green.

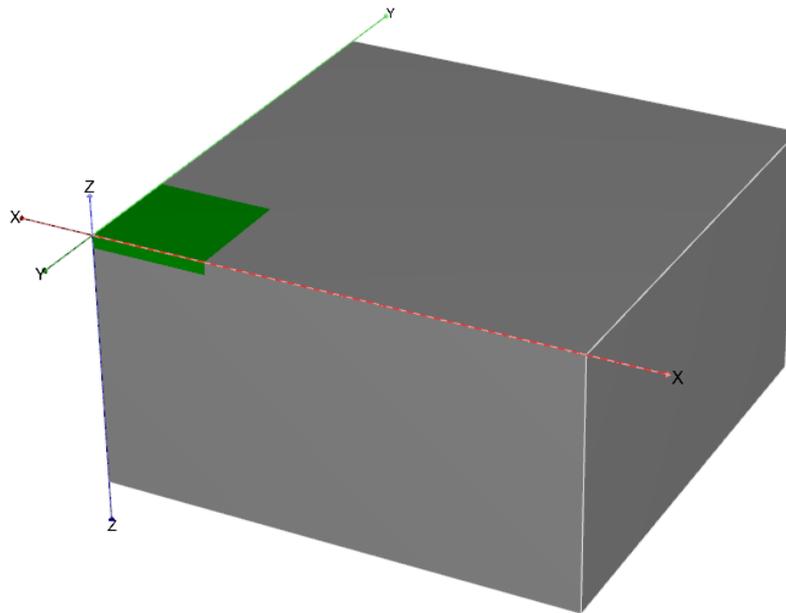


Figure 6: The indication of the local refinement in the model

3. Click the **Generate mesh** button  in the side toolbar or select the menu **Mesh > Generate mesh**.
4. Change the **Element distribution** to **Coarse** in the **Mesh options** window.

# Foundation in overconsolidated clay

Case A: Rigid foundation

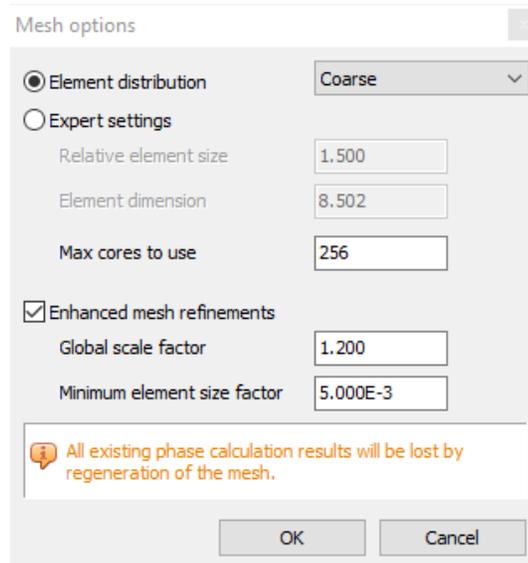


Figure 7: Mesh options window

5. Click **OK** to start the mesh generation.
6. After the mesh is generated, click the **View mesh** button . A new window is opened displaying the generated mesh.

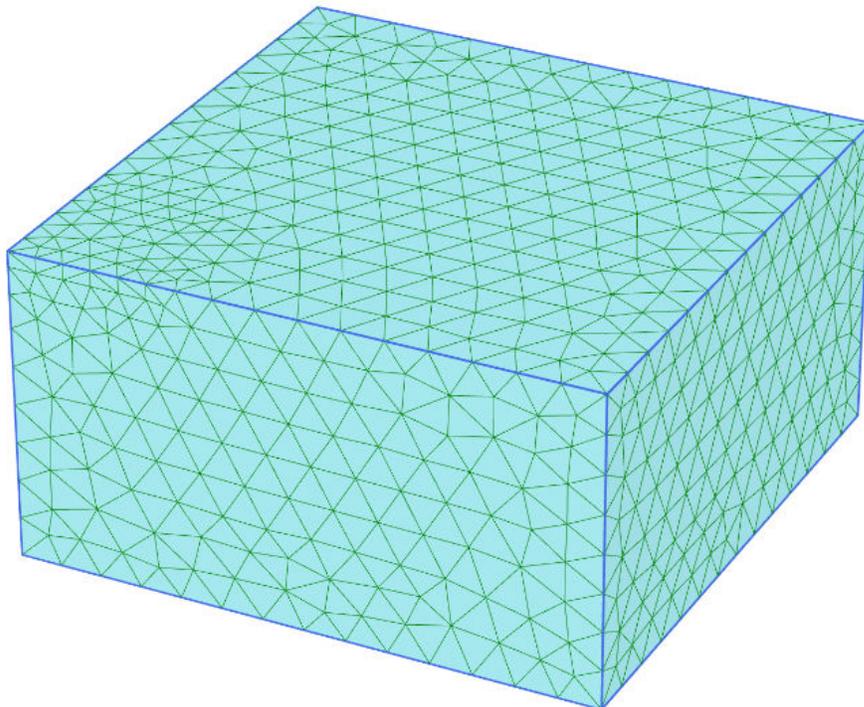


Figure 8: Generated mesh in the Output window

7. Click on the **Close** tab to close the Output program and go back to the **Mesh** mode of the **Input** program.

## Define and perform the calculation

Once the mesh has been generated, the finite element model is complete. Now the calculation phases have to be defined.

### Initial phase

The 'Initial phase' always involves the generation of initial conditions. In general, the initial conditions comprise the initial geometry configuration and the initial stress state, i.e. effective stresses, pore pressures and state parameters, if applicable. The initial water level has been entered already in the **Modify soil layers** window. This level is taken into account to calculate the initial effective stress state. It is therefore not needed to enter the **Flow conditions** mode.

In this tutorial lesson the properties of the **Initial phase** will be described. This part of the tutorial gives an overview of the options to be defined even though the default values of the parameters are used.

1. Click the **Staged construction** tab to proceed with the definition of calculation phases.

When a new project has been defined, a first calculation phase named 'Initial phase', is automatically created and selected in the **Phases explorer**:

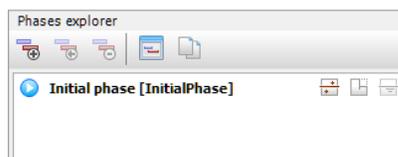


Figure 9: Phases explorer

All structural elements and loads that are present in the geometry are initially automatically switched off; only the soil volumes are initially active.

2. Click the **Edit phase** button  or double click the phase in the **Phases explorer**.

The **Phases** window is displayed.

# Foundation in overconsolidated clay

## Case A: Rigid foundation

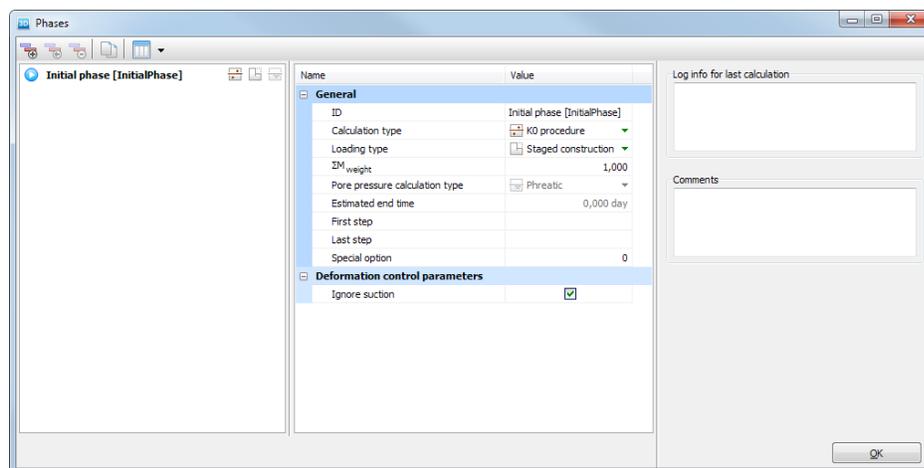


Figure 10: The Phases window for Initial phase

In this tutorial lesson the properties of the Initial phase will be described. Below an overview is given of the options to be defined even though the default values of the parameters are used.

	By default the <b>K0</b> procedure is selected as <b>Calculation type</b> in the <b>General</b> subtree of the <b>Phases window</b> . This option will be used in this project to generate the initial stresses.
	The <b>Staged construction</b> option is selected as <b>Loading type</b> . This is the only option available for the <b>K0 procedure</b>
	The <b>Phreatic</b> option is selected by default as the <b>Pore pressure calculation type</b> .

**Note:** The **K0 procedure** may only be used for horizontally layered geometries with a horizontal ground surface and, if applicable, a horizontal phreatic level. See "Types of Analysis" in the Reference Manual for more information on the **K0 procedure**.

3. The other default options in the **Phases** window will be used as well in this tutorial.
4. Click **OK** to close the **Phases** window.
5. In the **Model explorer** expand the **Model conditions** subtree.
6. Expand the **Water** subtree.  
The water level generated according to the **Head** value assigned to boreholes in the **Modify soil layers** window (BoreholeWaterLevel\_1) is automatically assigned to **GlobalWaterLevel**.
7. Make sure that all the soil volumes in the project are active and the material assigned to them is **Lacustrine clay**.

## Phase 1: Construction stage

After the definition of the initial conditions, the construction of the building can be modelled. This will be done in a separate calculation phase, which needs to be added as follows:

1. Click the **Add phase** button  in the **Phases explorer**.

## Foundation in overconsolidated clay

### Case A: Rigid foundation

A new phase, named Phase\_1 will be added in the *Phases explorer*.

**Note:** Calculation phases may be added, inserted or deleted using the *Add*, *Insert* and *Delete* buttons in the *Phases explorer* or in the *Phases* window.

2. Double click *Phase\_1* to open the *Phases* window.
3. In the *ID* box of the *General* subtree, write (optionally) an appropriate name for the new phase (for example *Building*).
4. The current phase starts from *Initial phase*, which contains the initial stress state. The default options and values assigned are valid for this phase

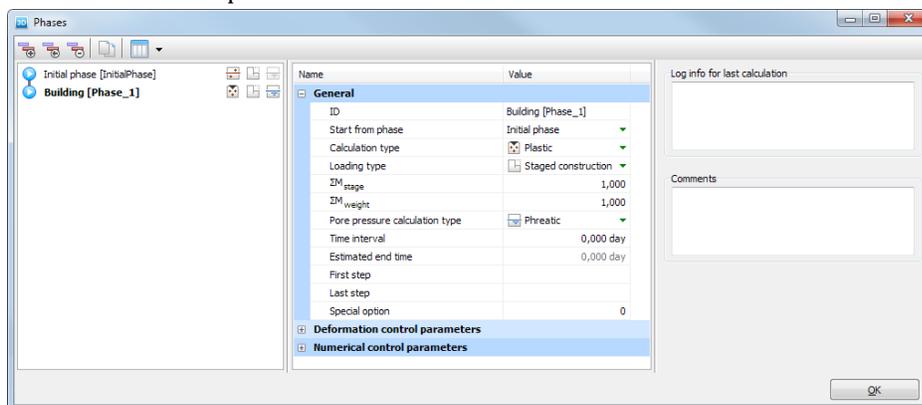


Figure 11: The Phases window for Building phase

5. Click *OK* to close the *Phases* window.
6. Right-click the building volume that was created earlier. Select the menu *Set material > Building*. The Building data set is now assigned to the building volume.

## Execute the calculation

All calculation phases (two phases in this case) are marked for calculation, indicated by a blue arrow . The execution order is controlled by the *Start from phase* parameter.

1. Click the *Calculate* button  to calculate the project. Ignore the warning that no nodes and stress points have been selected for curves. During the execution of a calculation, a window appears which gives information about the progress of the actual calculation phase.

# Foundation in overconsolidated clay

## Case A: Rigid foundation

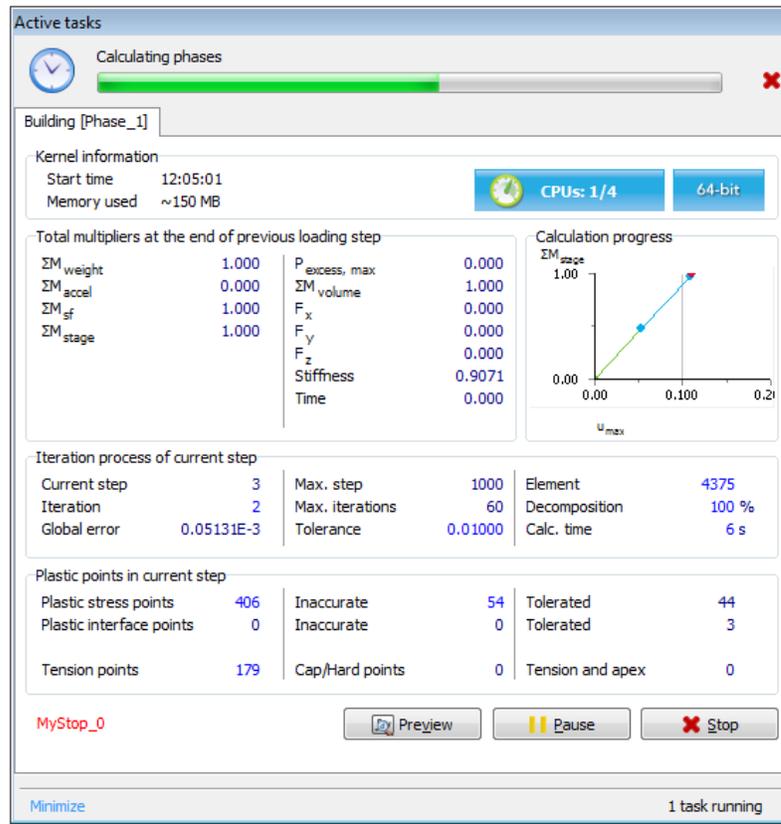


Figure 12: Active task window displaying the calculation progress

The information, which is continuously updated, shows, amongst others, the calculation progress, the current step number, the global error in the current iteration and the number of plastic points in the current calculation step. It will take a few seconds to perform the calculation. When a calculation ends, the window is closed and focus is returned to the main window.

2. The phase list in the **Phases explorer** is updated. A successfully calculated phase is indicated by a check mark inside a green circle .
3. Click the Save button  to save the project before viewing results.

## View the calculation results

Once the calculation has been completed, the results can be displayed in the **Output** program. In the **Output** program, the displacement and stresses in the full three-dimensional model as well as in cross sections or structural elements can be viewed. The computational results are also available in tabular form.

To view the current results, follow these steps:

1. Select the last calculation phase (**Building**) in the **Phases explorer** tree.
2. Click the **View calculation results** button  in the side toolbar to open the **Output** program. The **Output** program will, by default, show the three-dimensional deformed mesh at the end of the selected calculation phase. The deformations are scaled to ensure that they are clearly visible.

## Foundation in overconsolidated clay

### Case B: Raft foundation

3. Select the menu **Deformations > Total Displacements > |u|**.  
The plot shows colour shadings of the total displacements. A legend is presented with the displacement values at the colour boundaries. When the legend is not present, select the menu **View > Legend** to display it.

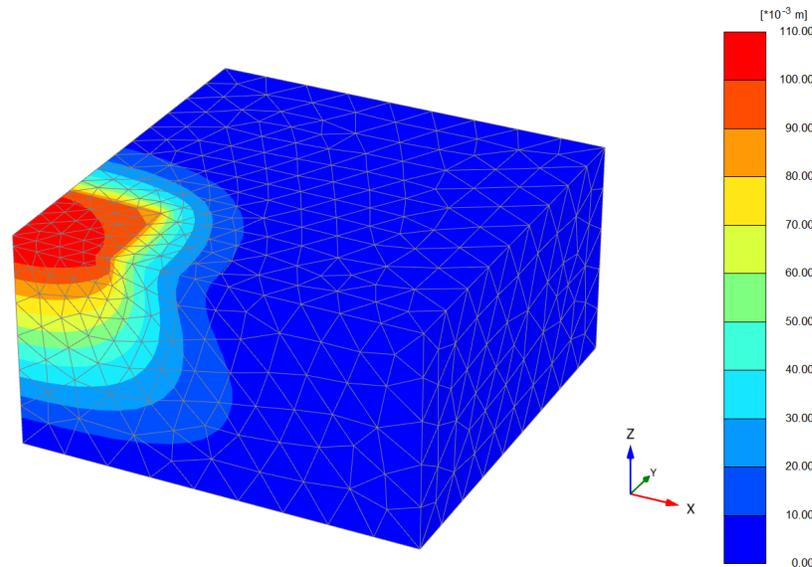


Figure 13: Shadings of Total displacements at the end of the last phase

4. In the **Output** window click the **Iso surfaces** button  to display the areas having the same displacement.

#### Note:

- The **Deformations** menu, in addition to the **Total displacements**, allows for the presentation of **Incremental displacements** and **Phase displacements**.
  - Incremental displacements are the displacements that occurred in one calculation step (in this case the final step). Incremental displacements may be helpful in visualising failure mechanisms.
  - Phase displacements are the displacements that occurred in one calculation phase (in this case the last phase). Phase displacements can be used to inspect the impact of a single construction phase, without the need to reset displacements to zero before starting the phase.

## Case B: Raft foundation

In this case, the model is modified so that the basement consists of structural elements. This allows for the calculation of structural forces in the foundation.

The raft foundation consists of a 50 cm thick concrete floor stiffened by concrete beams. The walls of the basement consist of 30 cm thick concrete. The loads of the upper floors are transferred to the floor slab by a column and by the basement walls. The column bears a load of 11650 kN and the walls carry a line load of 385 kN/m, as sketched in the following figure.

## Foundation in overconsolidated clay

Case B: Raft foundation

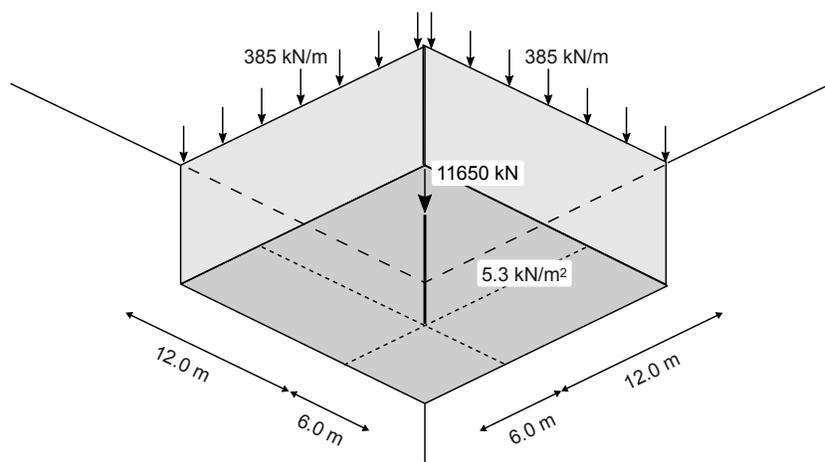


Figure 14: Geometry of the basement

In addition, the floor slab is loaded by a distributed load of  $5.3 \text{ kN/m}^2$ . The properties of the clay layer will be modified such that stiffness of the clay will increase with depth.

### Objectives

- Saving project under a different name
- Modifying existing data sets
- Defining a soil stiffness that increases with depth
- Modelling of plates and defining material data set for plates
- Modelling of beams and defining material data set for beams
- Assigning point loads
- Assigning line loads
- Assigning distributed loads to surfaces
- Deleting phases
- Activation and deactivation of soil volumes
- Activation and deactivation of structural elements
- Activation of loads
- Zooming in Output
- Drawing cross sections in Output
- Viewing structural output

### Create a new project

The geometry used in this exercise is the same as the previous one, except that additional elements are used to model the foundation. You can start from the previous project, store it under a different name and then modify it. To perform this, follow these steps:

1. Start PLAXIS 3D by double clicking the icon of the Input program .  
The **Quick select** dialog box appears.
2. In the list Recent projects select the project of Case A.

## Foundation in overconsolidated clay

Case B: Raft foundation

The previous project opens.

3. Select **File > Save project as** to save the project under a different name (e.g. Tutorial 1b).

### Create and assign a material data set

The material set for the clay layer has already been defined. To modify this material set to take into account the stiffness of the soil increasing with depth, follow these steps:

1. Click the **Materials** button  in the side toolbar. The **Material sets** window pops up.
2. Make sure that the option **Soil and interfaces** is selected as **Set type**.
3. Select the **Lacustrine clay** material set and click the **Edit** button.
4. In the **Parameters** tabsheet, change the stiffness of the soil  $E'$  to  $5000 \text{ kN/m}^2$ .
5. Enter a value of 500 in the  $E'_{inc}$  box in the **Advanced** parameters. Keep the default value of 0.0 m for  $z_{ref}$ . Now the stiffness of the soil is defined as  $5000 \text{ kN/m}^2$  at  $z=0.0 \text{ m}$  and increases with  $500 \text{ kN/m}^2$  per meter depth.
6. Click **OK** to close the **Soil** window.
7. Click **OK** to close the **Material sets** window.

### Define the structural elements

Proceed to the **Structures** mode to define the structural elements that compose the basement.

A number of material data sets will be created with the following material properties.

**Table 2: Material properties of the basement floor and basement walls**

Parameter	Name	Basement floor	Basement wall	Unit
Type of behaviour	Type	Elastic, isotropic	Elastic, isotropic	-
Thickness	d	0.5	0.3	m
Weight	$\gamma$	15	15.5	$\text{kN/m}^3$
Young's modulus	$E_1$	$3 \cdot 10^7$	$3 \cdot 10^7$	$\text{kN/m}^2$
Poisson's ratio	$\nu_{12}$	0.15	0.15	-

**Note:** When specifying a unit weight, please consider the fact that the element itself does not occupy any volume and overlaps with the soil elements. Hence, it might be considered to subtract the unit soil weight from the real unit weight of the plate, beam or embedded beam material in order to compensate for the overlap. For partially overlapping plates, beams or embedded beams the reduction of the unit weight should be proportional.

## Foundation in overconsolidated clay

Case B: Raft foundation

**Table 3: Material properties of the basement column and basement beams**

Parameter	Name	Basement column	Basement beam	Unit
Material type	Type	Elastic	Elastic	-
Young's modulus	E	$3 \cdot 10^7$	$3 \cdot 10^7$	kN/m <sup>2</sup>
Volumetric weight	$\gamma$	24.0	6.0	kN/m <sup>3</sup>
Cross section area	A	0.49	0.7	m <sup>2</sup>
Moment of Inertia	$I_2$	0.020	0.029	m <sup>4</sup>
	$I_3$	0.020	0.058	m <sup>4</sup>

1. Click the **Structures** tab to proceed with the input of structural elements in the **Structures** mode.
2. Click the **Selection** button .
3. Right-click the volume representing the building. Select the **Decompose into surfaces** option from the appearing menu.
4. Delete the top surface by selecting it and pressing **<Delete>**.
5. Select the volume representing the building. Click the visualisation toggle in the **Selection explorer** to hide the volume.
6. Right-click the bottom surface of the building. Select the **Create plate** option from the appearing menu.
7. Assign plates to the two vertical basement surfaces that are inside the model. Delete the remaining two vertical surfaces at the model boundaries.
  - Multiple entities can be selected by holding the **<Ctrl>** key pressed while clicking on the entities.
  - A feature can be assigned to multiple similar objects the same way as to a single selection.

## Foundation in overconsolidated clay

Case B: Raft foundation

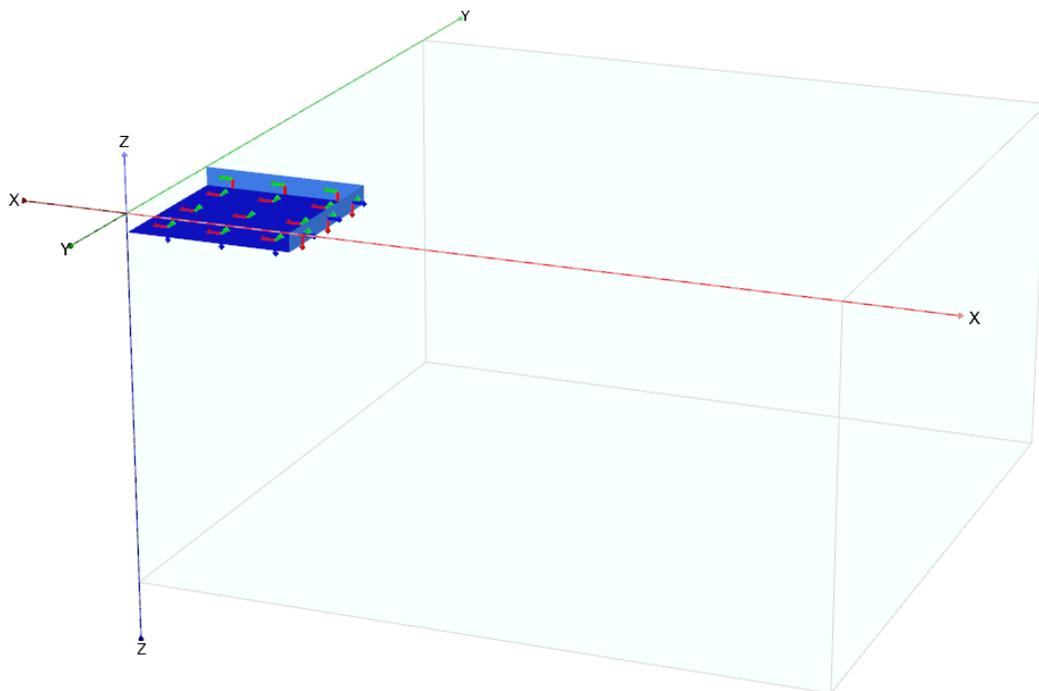


Figure 15: Location of plates in the project

8. Click the **Materials** button  to open the material data base, then set the **Set type** to **Plates**.
9. Create data sets for the basement floor and for the basement walls according to [Table 2: Material properties of the basement floor and basement walls](#) (on page 24).
10. Drag and drop the data sets to the basement floor and the basement walls accordingly. It may be needed to move the **MATERIAL SETS** window by clicking at its header and dragging it.
11. Click the **OK** button to close the **MATERIAL SETS** window.
12. Right-click the bottom of the surface of the building volume and select the **Create surface load** option from the appearing menu. The actual value of the load can be assigned in the **Structures** mode as well as when the calculation phases will be defined (**Phase definition** mode). In this example, the value will be assigned in the **Phase definition** modes.
13. Click the **Create line** button  in the side toolbar.
14. Select the **Create line load** option  from the additional tools displayed.
15. Click the command input area, type `0 18 0 18 18 0 18 0 0` and press **<Enter>**. Line loads will now be defined on the basement walls. The defined values are the coordinates of the three points of the lines. Click the right mouse button to stop drawing line loads.
16. Click the **Create line** button  in the side toolbar.
17. Select the **Create beam** option  from the additional tools displayed.
18. Click on (6 6 0) to create the first point of a vertical beam. Keep **<Shift>** pressed and move the mouse cursor to (6 6 -2). Note that while the **<Shift>** key is pressed the cursor will move only vertically. As it can be seen in the cursor position indicator, the z coordinate changes, while x and y coordinates will remain the same. Click on (6 6 -2) to define the second point of the beam. To stop drawing click the right mouse button.
19. Create horizontal beams from (0 6 -2) to (18 6 -2) and from (6 0 -2) to (6 18 -2).

## Foundation in overconsolidated clay

Case B: Raft foundation

**Note:** By default, the cursor is located at  $z=0$ . To move in the vertical direction, keep the **<Shift>** key while moving the mouse.

20. Click the **Materials** button  to open the material data base and set the **Set type** to **Beams**.
21. Create data sets for the horizontal beams according to [Table 3: Material properties of the basement column and basement beams](#) (on page 25).
22. Assign the data set to the corresponding beam elements by drag and drop.
23. Click the **Create load** button  in the side toolbar.
24. Select the **Create point load** option  from the additional tools displayed. Click at (6 6 0) to add a point load at the top of the vertical beam.

### Generate the mesh

To generate the mesh, follow these steps:

1. Proceed to the **Mesh** mode by clicking the corresponding tab.
2. Click the **Generate mesh** button . Keep the **Element distribution** as **Coarse**.
3. Click the **View mesh** button  and inspect the generated mesh.
4. Click on the **Close** tab to close the Output program and go back to the **Mesh** mode of the **Input** program.

As the geometry has changed, all calculation phases have to be redefined.

### Define and perform the calculation

Proceed to the **Staged construction** mode.

#### Initial phase

1. Click the **Staged construction** tab to proceed with the definition of calculation phases.
2. As in the previous example, the  $K_0$  procedure  will be used to generate the initial conditions.
3. All the structural elements should be inactive in the Initial Phase.
4. No excavation is performed in the Initial phase. So, the basement volume should be active and the material assigned to it should be **Lacustrine clay**.

#### Phase 1 to 3: Construction stages

Instead of constructing the building in one calculation stage, separate calculation phases will be used. In Phase 1, the construction of the walls and the excavation is modelled. In Phase 2, the construction of the floor and beams is modelled. The activation of the loads is modelled in the last phase (Phase 3).

1. The calculation type for the phases representing the construction stages is set by default to **Plastic** .
2. In the **Phases** window rename **Phase\_1** to **Excavation**.

## Foundation in overconsolidated clay

### Case B: Raft foundation

---

3. In the **Staged construction** mode deactivate the soil volume located over the foundation by selecting it and by clicking on the checkbox in front of it in the **Selection explorer**.
4. In the **Model explorer** click the checkbox in front of the plates corresponding to the basement walls to activate them.
5. In the **Phases explorer** click the **Add phase** button . A new phase (Phase\_2) is added. Double-click Phase\_2.  
The **Phases** window pops up.
6. Rename the phase by defining its **ID** as Construction. Keep the default settings of the phase and close the **Phases** window.
7. In the **Model explorer** click the checkbox in front of the plate corresponding to the basement floor to activate it.
8. In the **Model explorer** click the checkbox in front of the beams to activate all the beams in the project.
9. Add a new phase  following the **Construction** phase. Rename it to Loading.
10. In the **Model explorer** click the checkbox in front of the **Surface loads** to activate the surface load on the basement floor. Set the value of the z-component of the load to -5.3. This indicates a load of 5.3 kN/m<sup>2</sup>, acting in the negative z-direction.
11. In the **Model explorer**, click the checkbox in front of **Line loads** to activate the line loads on the basement walls. Set the value of the z-component of each load to -385. This indicates a load of 385 kN/m, acting in the negative z-direction.
12. In the **Model explorer** click the checkbox in front of **Point loads** to activate the point load on the basement column. Set the value of the z-component of the load to -11650. This indicates a load of 11650 kN, acting in the negative z-direction.

### Execute the calculation

1. Click the **Preview phase** button  to check the settings for each phase.
2. Click the Calculate button  to calculate the project. Ignore the warning that no nodes and stress points have been selected for curves.
3. Click the Save button  to save the project after the calculation.

### View the calculation results

1. Select **Construction** phase in the **Phases explorer**.
2. Click the **View calculation results** button  to open the Output program.  
The deformed mesh at the end of this phase is shown.
3. Select the last phase in the **Displayed step** drop-down menu to switch to the results at the end of the last phase.
4. In order to evaluate stresses and deformations inside the geometry, select the **Vertical cross section** tool .  
A top view of the geometry is presented and the **Cross section points** window appears. As the largest displacements appear under the column, a cross section here is most interesting.
5. Enter (0.0 6.0) and (75.0 6.0) as the coordinates of the first point (A) and the second point (A') respectively in the **Cross section points** window.

## Foundation in overconsolidated clay

Case B: Raft foundation

6. Click **OK**.

A vertical cross section is presented. The cross section can be rotated in the same way as a regular **3D** view of the geometry.

7. Select the menu **Deformations > Total displacements > u\_z**

The maximum and minimum values of the vertical displacements are shown in the caption. If the title is not visible, select this option from the **View** menu.

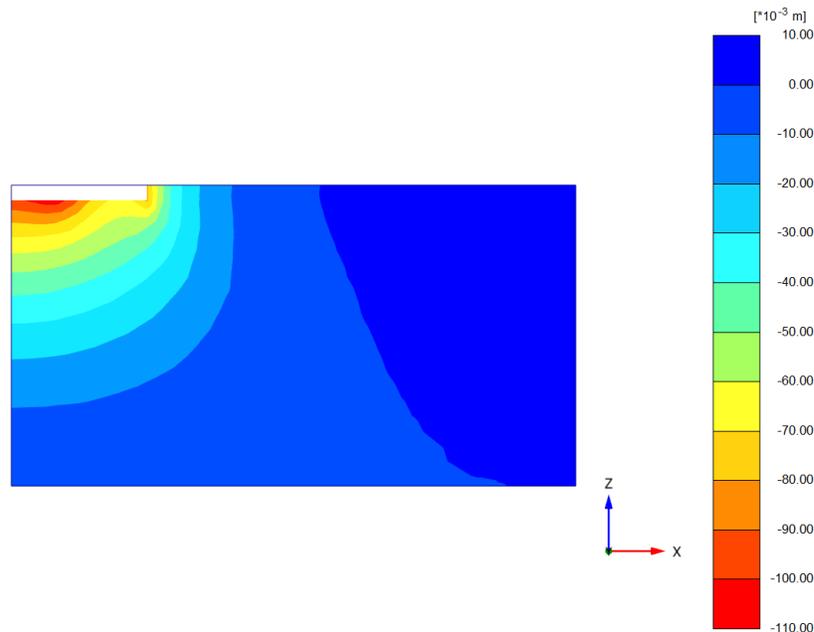


Figure 16: Cross section showing the total vertical displacement

8. Press **<CTRL+>** and **<CTRL->** to move the cross section.
9. Return to the three-dimensional of the geometry by selecting this window from the list in the **Window** menu.
10. Double-click the floor.  
A separate window will appear showing the displacements of the floor. To look at the bending moments in the floor, select the menu **Forces > M\_11**.
11. Click the **Shadings** button .  
The plot will be displayed.

## Foundation in overconsolidated clay

Case C: Pile-Raft foundation

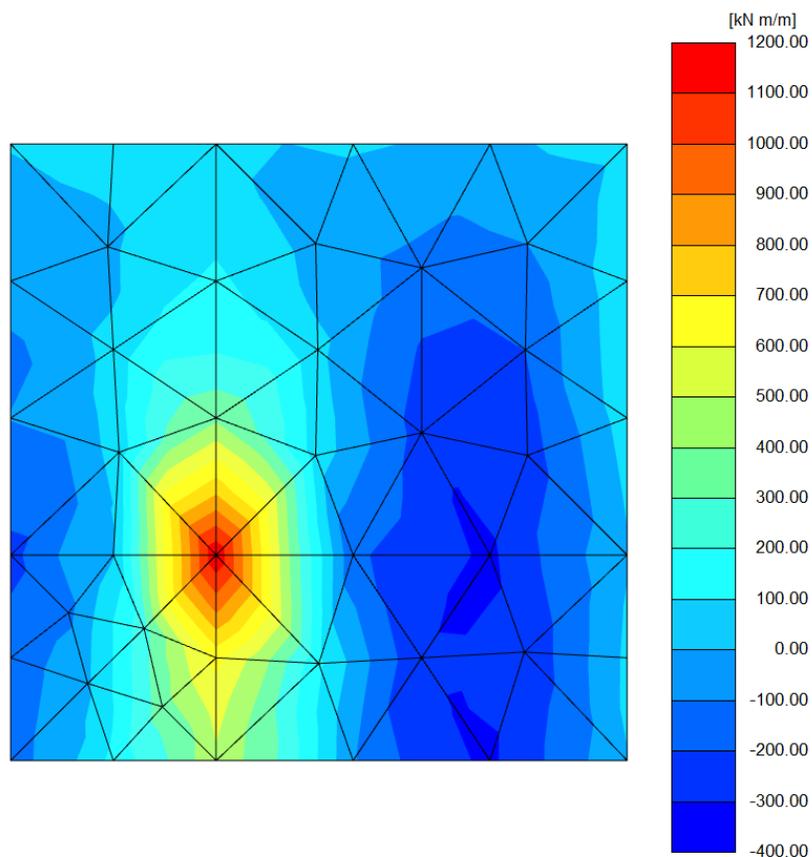


Figure 17: Bending moments in the basement floor

12. To view the bending moments in tabulated form, select **Tools > Table** . A new window is opened in which a table is presented, showing the values of bending moments in each node of the floor.

## Case C: Pile-Raft foundation

As the displacements of the raft foundation are rather high, embedded beams will be used to decrease these displacements. These embedded beams represent bored piles with a length of 20 m and a diameter of 1.5 m.

### Objectives

- Using embedded beams.
- Defining material data set for embedded beams.
- Creating multiple copies of entities.

### Create a new project

## Foundation in overconsolidated clay

### Case C: Pile-Raft foundation

The geometry used in this exercise is the same as the previous one, except for the pile foundation. It is not necessary to create a new model; you can start from the previous model, store it under a different name and modify it. To perform this, follow these steps:

1. Start PLAXIS 3D by double clicking the icon of the Input program .  
The **Quick select** dialog box appears.
2. Select the project of Case B.  
The project opens.
3. Select the menu **File > Save project as** to save the project under a different name (e.g. Tutorial 1c).

## Define the structural elements: Foundation piles

The foundation consists of piles. These will be modelled as embedded beams. A new material is needed for the piles. The material properties are as follows:

**Table 4: Material properties of embedded beam**

Parameter	Name	Pile foundation	Unit
Young's modulus	E	$3 \cdot 10^7$	kN/m <sup>2</sup>
Unit weight	$\gamma$	6.0	kN/m <sup>3</sup>
Beam type	-	Predefined	-
Predefined beam type	-	Massive circular beam	-
Diameter	Diameter	1.5	m
Axial skin resistance	Type	Linear	-
Maximum traction allowed at the top of the embedded beam	$T_{\text{skin,start,max}}$	200	kN/m
Maximum traction allowed at the bottom of the embedded beam	$T_{\text{skin,end,max}}$	500	kN/m
Base resistance	$F_{\text{max}}$	$1 \cdot 10^4$	kN

To model the foundation piles:

1. Click the **Structures** tab to proceed with the input of structural elements in the **Structures** mode.
2. Click the **Create line** button  at the side tool bar and select the **Create embedded beam** from the additional tools that appear.
3. Define a pile from (6 6 -2) to (6 6 -22).
4. Click the **Materials** button  to open the material data base and set the **Set type** to **Embedded beams**.

## Foundation in overconsolidated clay

Case C: Pile-Raft foundation

5. Create a data set for the embedded beam according to [Table 4: Material properties of embedded beam](#) (on page 31). The value for the cross section area  $A$  and the moments of inertia  $I_2$  and  $I_3$  are automatically calculated from the diameter of the massive circular pile. Confirm the input by clicking **OK**.
6. Drag and drop the **Embedded beam** data to the embedded beam in the drawing area.  
The embedded beam will change colour to indicate that the material set has been assigned successfully.
7. Click the **OK** button to close the **Material sets** window.

### Note:

A material set can also be assigned to an embedded beam by right-clicking it either in the drawing area or in the **Selection explorer** and the **Model explorer** and selecting the material from the **Set material** option in the displayed menu.

8. Click the **Select** button  and select the embedded beam.
9. Click the **Create array** button .
10. In the **Create array** window, select the **2D, in xy plane** option for shape.
11. Keep the number of columns as 2. Set the distance between the columns to  $x=12$  and  $y=0$ .
12. Keep the number of rows as 2. Set the distance between the rows to  $x=0$  and  $y=12$ .

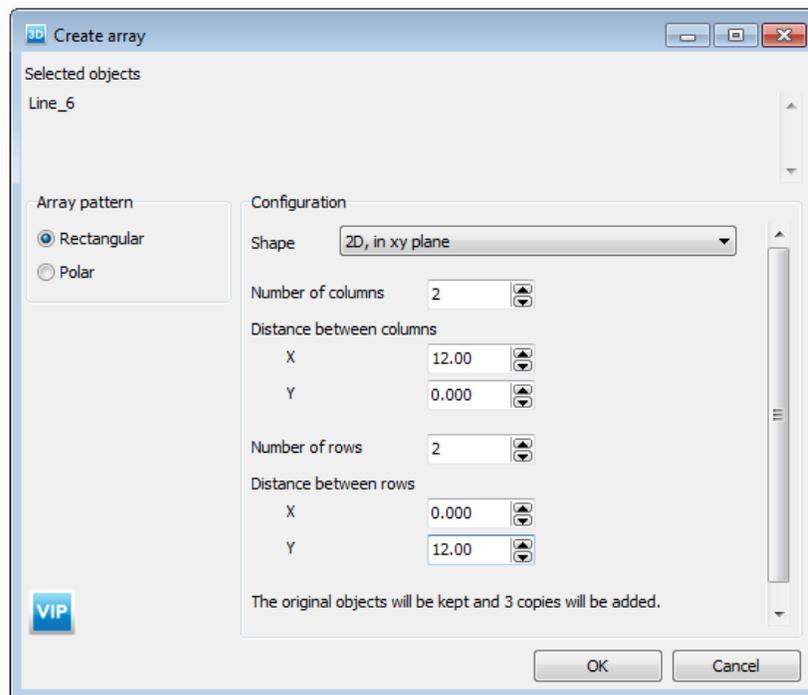


Figure 18: Create array window

13. Press **OK** to create the array. A total of  $2 \times 2 = 4$  piles will be created.

## Generate the mesh

As the geometry model is complete now, the mesh can be generated.

To generate the mesh, follow these steps:

## Foundation in overconsolidated clay

### Case C: Pile-Raft foundation

1. Proceed to the **Mesh** mode.
2. Click the **Generate mesh** button  in the side toolbar. Keep the **Element distribution** as **Coarse**
3. Click the **View mesh** button  to view the mesh.
4. Click the eye button  in front of the **Soil** subtree in the **Model explorer** to hide the soil.  
The embedded beams can be seen now:

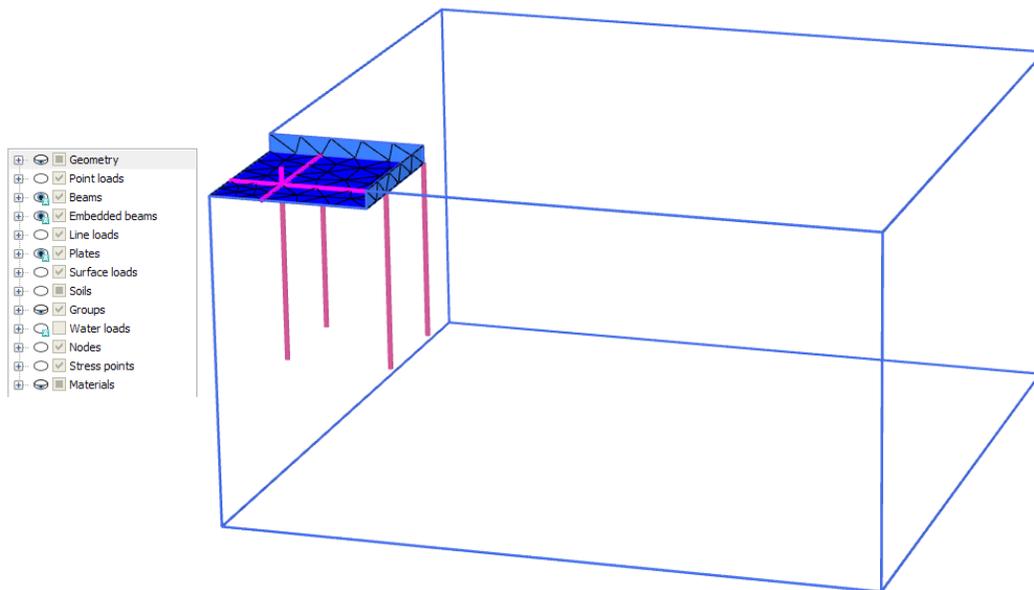


Figure 19: Partial geometry of the model in the Output

5. Click on the **Close** tab to close the Output program and go back to the **Mesh** mode of the **Input** program.

## Define and perform the calculation

After generation of the mesh, all construction stages must be redefined. Even though in practice the piles will be constructed in another construction stage than construction of the walls, for simplicity both actions will be done in the same construction stage in this tutorial. To redefine all construction stages, follow these steps:

1. Switch to the **Staged construction** mode.
2. Check if the **K0 procedure** is selected as **Calculation type** for the initial phase. Make sure that all the structural elements are inactive and all soil volumes are active.
3. In the **Phases explorer** select the **Excavation** phase.
4. Make sure that the basement soil is excavated and the basement walls are active.
5. Activate all the embedded beams.
6. In the **Phases explorer** select the **Construction** phase. Make sure that all the structural elements are active.
7. In the **Phases explorer** select the **Loading** phase. Make sure that all the structural elements and loads are active.
8. Click the Calculate button  to calculate the project.
9. Click the Save button  to save the project after the calculation.

# Foundation in overconsolidated clay

Case C: Pile-Raft foundation

## View the calculation results

Once the calculation has been completed, the results can be displayed in the **Output** program.

To view the results, follow these steps:

1. Select the **Loading** phase and view the calculation results.
2. Double-click the basement floor. Select the menu **Forces > M\_11**.  
The results are shown:

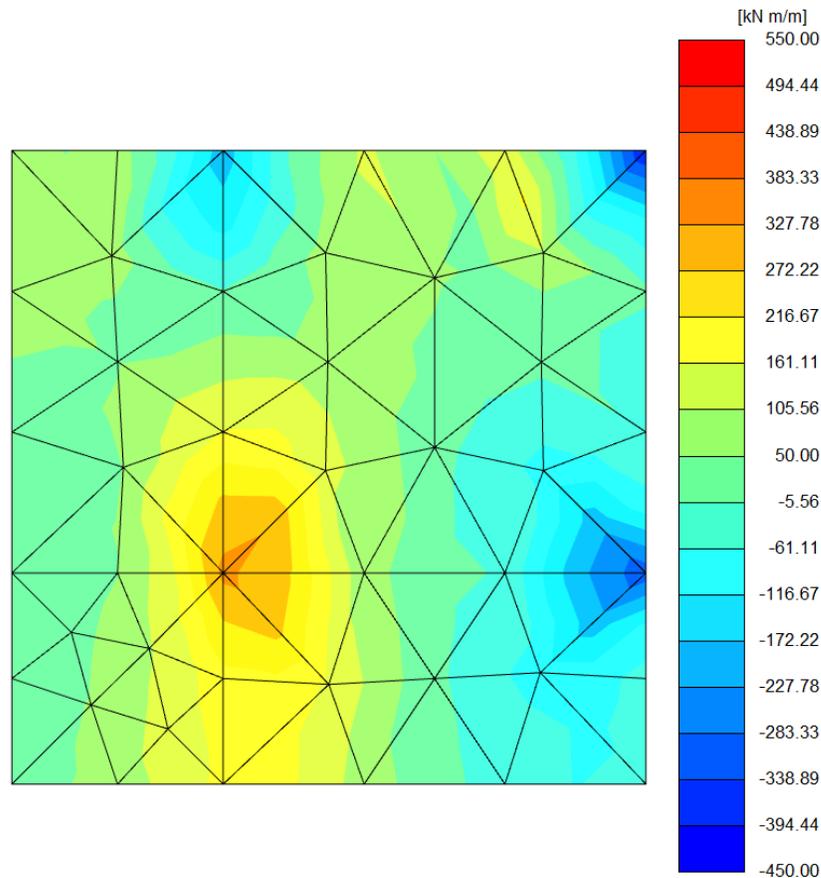


Figure 20: Bending moments in the basement floor

3. Adjust the legend by changing scaling settings into:
  - a. Scaling: manual
  - b. Minimum value: -450
  - c. Maximum value: 550
  - d. Number of intervals: 18
4. Select the view corresponding to the deformed mesh in the **Window** menu.
5. Click the **Toggle visibility** button  in the side toolbar.
6. To view the embedded beams press **<Shift>** and keep it pressed while clicking on the soil volume in order to hide it.

## Foundation in overconsolidated clay

Case C: Pile-Raft foundation

---

7. Click the **Select structures** button . To view all the embedded beams, press **<Ctrl>+<Shift>** and double click on one of the piles.
8. Select the menu **Forces > N** to view the axial loads in the embedded beams.  
The plot is shown:

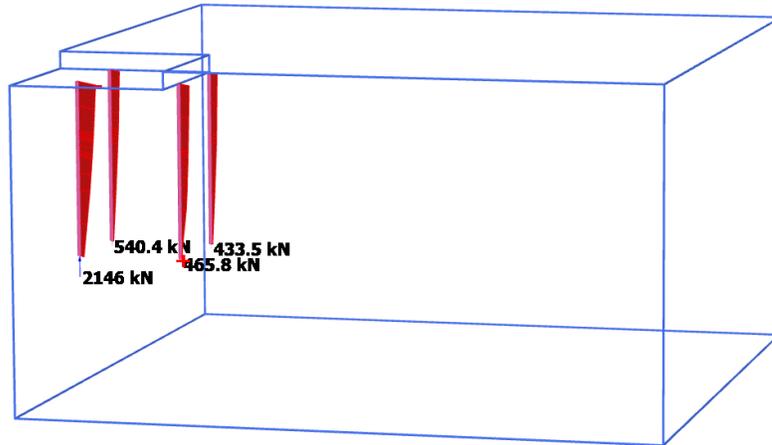


Figure 21: Resulting axial forces (N) in the embedded beams

# 3

## Excavation in sand

---

This tutorial describes the construction of an excavation pit in soft clay and sand layers. The pit is a relatively small excavation of 12 by 20 m, excavated to a depth of 6.5 m below the surface. Struts, walings and ground anchors are used to prevent the pit from collapsing. After the full excavation, an additional surface load is added on one side of the pit.

### Objectives

- Using the Hardening Soil model
- Modelling of ground anchors
- Using interface features
- Defining over-consolidation ratio (OCR)
- Prestressing a ground anchor
- Changing water conditions
- Selection of stress points to generate stress/strain curves
- Viewing plastic points

### Geometry

The proposed geometry for this exercise is 80 m wide and 50 m long. The excavation pit is placed in the center of the geometry.

# Excavation in sand

Create a new project

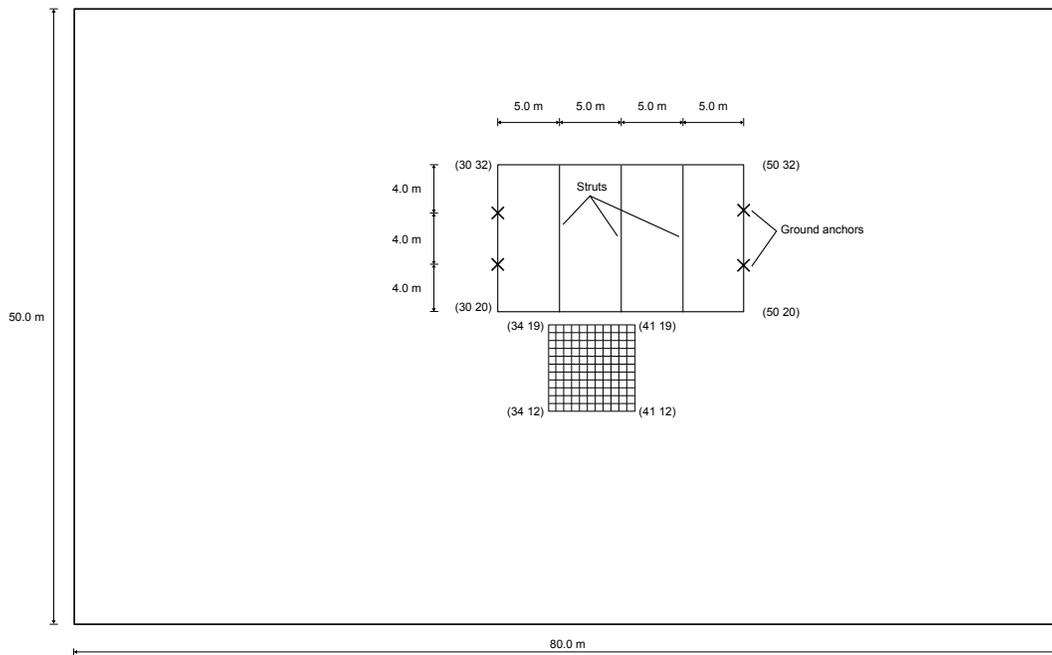


Figure 22: Top view of the excavation pit

The figure below shows a cross section of the excavation pit with the soil layers. The clay layer is considered to be impermeable.

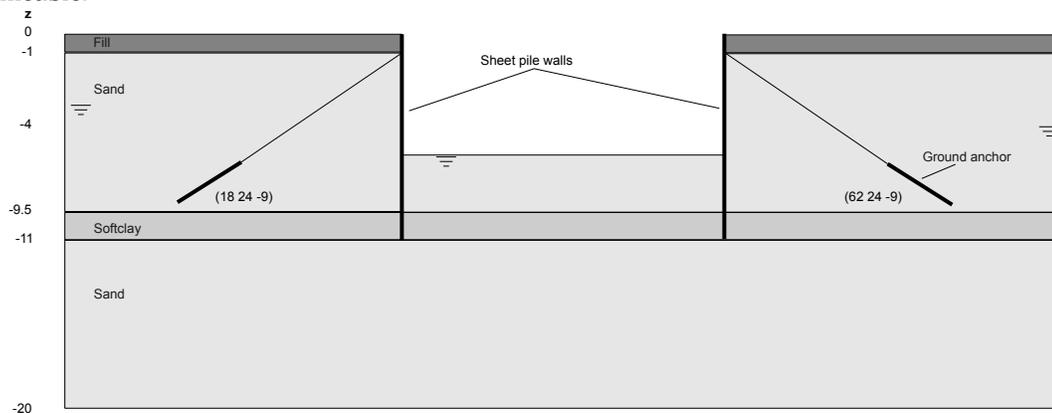


Figure 23: Cross section of the excavation pit with the soil layers

## Create a new project

To create the geometry model, follow these steps:

1. Start a new project.
2. Enter an appropriate title for the project.
3. Define the limits for the soil contour as
  - a.  $x_{\min} = 0.0$  and  $x_{\max} = 80.0$ ,
  - b.  $y_{\min} = 0.0$  and  $y_{\max} = 50.0$ .

## Excavation in sand

Define the soil stratigraphy

### Define the soil stratigraphy

In order to define the soil layers, a borehole needs to be added and material properties must be assigned. As all soil layers are horizontal, only a single borehole is needed.

1. Click the **Create borehole** button  and create a borehole at (0 0 0). The **Modify soil layers** window pops up.
2. Add 4 layers with bottom levels at -1, -9.5, -11, -20.
3. Set the **Head** in the borehole column to -4 m.

### Create and assign the material data sets

A number of materials need to be defined for the different soil layers. The material properties are shown in the table below. Linear Elastic model.

**Table 5: Material properties for the soil layers**

Parameter	Name	Fill	Sand	Soft Clay	Unit
General					
Material model	Model	Hardening Soil model	Hardening Soil model	Hardening Soil model	-
Drainage type	Type	Drained	Drained	Undrained A	-
Unit weight above phreatic level	$\gamma_{\text{unsat}}$	16.0	17.0	16.0	kN/m <sup>3</sup>
Unit weight below phreatic level	$\gamma_{\text{sat}}$	20.0	20.0	17.0	kN/m <sup>3</sup>
Parameters					
Secant stiffness for CD triaxial test	$E_{50}^{\text{ref}}$	$2.2 \cdot 10^4$	$4.3 \cdot 10^4$	$2.0 \cdot 10^3$	kN/m <sup>2</sup>
Tangent oedometer stiffness	$E_{\text{oed}}^{\text{ref}}$	$2.2 \cdot 10^4$	$2.2 \cdot 10^4$	$2.0 \cdot 10^3$	kN/m <sup>2</sup>

## Excavation in sand

Create and assign the material data sets

Parameter	Name	Fill	Sand	Soft Clay	Unit
Unloading/reloading stiffness	$E_{ur}^{ref}$	$6.6 \cdot 10^4$	$1.29 \cdot 10^5$	$1.0 \cdot 10^4$	kN/m <sup>2</sup>
Power for stress level dependency of stiffness	m	0.5	0.5	1.0	-
Cohesion	$c'_{ref}$	1	1	5	kN/m <sup>2</sup>
Friction angle	$\varphi'$	30.0	34.0	25	°
Dilatancy angle	$\psi$	0.0	4.0	0.0	°
Poisson's ratio	$\nu'_{ur}$	0.2	0.2	0.2	-
Drainage type					
Interface strength	-	Manual	Manual	Manual	-
Interface reduction factor	$R_{inter}$	0.65	0.7	0.5	-
Parameters					
$K_0$ determination	-	Automatic	Automatic	Automatic	-
Lateral earth pressure coefficient	$K_0$	0.5000	0.4408	0.7411	-
Over-consolidation ratio	OCR	1.0	1.0	1.5	-
Pre-overburden pressure	POP	0.0	0.0	0.0	-

1. Click the **Materials** button  in the side toolbar. The **Material sets** window pops up.
2. Create a new data set under **Soil and interfaces** set type.
3. Identify the new data set as **Fill**.
4. From the **Material model** drop-down menu, select **Hardening Soil** model. In contrast with the Mohr-Coulomb model, the Hardening Soil model takes into account the difference in stiffness between virgin-loading and unloading-reloading. For a detailed description of the Hardening Soil model, see the Material Models Manual.

## Excavation in sand

Define the structural elements

---

5. Define the saturated and unsaturated unit weights according to [Table 5: Material properties for the soil layers](#) (on page 38).
6. In the **Parameters** tabsheet, enter values for  $E_{50}^{ref}$ ,  $E_{oed}^{ref}$ ,  $E_{ur}^{ref}$ ,  $m$ ,  $c'_{ref}$ ,  $\varphi'_{ref}$ ,  $\psi$  and  $v'_{ur}$ . Note that Poisson's ratio is an advanced parameter.
7. As no consolidation will be considered in this exercise, the permeability of the soil will not influence the results. Therefore, the default values can be kept in the **Flow parameters** tabsheet.
8. In the **Interfaces** tabsheet, select **Manual** in the **Strength** box and enter a value of 0.65 for the parameter  $R_{inter}$ .

This parameter relates the strength of the interfaces to the strength of the soil, according to the equations:

$$c_i = R_{inter} \cdot c_{soil} \quad \text{and} \quad \tan \varphi_i = R_{inter} \cdot \tan \varphi_{soil}$$

Hence, using the entered  $R_{inter}$ -value gives a reduced interface friction and interface cohesion (adhesion) compared to the friction angle and the cohesion in the adjacent soil.

### Note:

- When the **Rigid** option is selected in the **Strength** drop-down, the interface has the same strength properties as the soil ( $R_{inter} = 1.0$ ).
- Note that a value of  $R_{inter} < 1.0$ , reduces the strength as well as the stiffness of the interface (for more information see the Reference Manual).

9. In the **Initial** tabsheet, define the OCR-value according to [Table 5: Material properties for the soil layers](#) (on page 38).
10. Click **OK** to close the window.
11. After closing the **Material sets** window, click the **OK** button to close the **Modify soil layers** window.
12. In the **Soil** mode right-click the upper soil layer. Select **Set material > Fill**.
13. In the same way assign the **Soft Clay** material to the soil layer between  $y = -9.5$  m and  $y = -11.0$  m.
14. Assign the **Sand** material to the remaining two soil layers.

**Note:** The **Tension cut-off** option is activated by default at a value of 0 kN/m<sup>2</sup>. This option is found in the **Advanced** options on the **Parameters** tabsheet of the **Soil** window. Here the **Tension cut-off** value can be changed or the option can be deactivated entirely.

## Define the structural elements

The creation of walings and struts, ground anchors, sheet pile walls and surface loads is described below.

### Walings and Struts

The material properties for the structural elements are shown in the table below. These are needed for defining the material in a later step.

## Excavation in sand

Define the structural elements

**Table 6: Material properties of waling and strut**

Parameter	Name	Strut	Waling	Unit
Material type	Type	Elastic	Elastic	-
Young's modulus	E	$2.1 \cdot 10^8$	$2.1 \cdot 10^8$	kN/m <sup>2</sup>
Unit weight	$\gamma$	78.5	78.5	kN/m <sup>3</sup>
Cross section area	A	0.007367	0.008682	m <sup>2</sup>
Moment of Inertia	$I_2$	$5.073 \cdot 10^{-5}$	$3.66 \cdot 10^{-4}$	m <sup>4</sup>
	$I_3$	$5.073 \cdot 10^{-5}$	$1.045 \cdot 10^{-4}$	m <sup>4</sup>

1. Click the **Structures** tab to proceed with the input of structural elements in the **Structures** mode.
2.  Create a surface between (30 20 0), (30 32 0), (50 32 0) and (50 20 0).
3.  Extrude the surface to  $z = -1$ ,  $z = -6.5$  and  $z = -11$ .
4. Right-click on the deepest created volume (between  $z = 0$  and  $z = -11$ ) and select **Decompose into surfaces**.
5. Delete the top surfaces (2 surfaces).  
An extra surface is created as the volume is decomposed.
6. Hide the excavation volumes (do not delete).  
The eye button in the **Model explorer** and the **Selection explorer** trees can be used to hide parts of the model and simplify the view. A hidden project entity is indicated by a closed eye.
7. Click the **Create structure** button .
8.  Create beams (walings) around the excavation circumference at level  $z = -1$ m. Press **<Shift>** and keep it pressed while moving the mouse cursor in the  $-z$ -direction. Stop moving the mouse as the  $z$ -coordinate of the mouse cursor is  $-1$  in the cursor position indicator. Note that as you release **<Shift>**, the  $z$ -coordinate of the cursor location does not change. This is an indication that you can draw only on the  $xy$ -plane located at  $z = -1$ .
9. Click on (30 20 -1), (30 32 -1), (50 32 -1), (50 20 -1), (30 20 -1) to draw the walings. Click on the right mouse button to stop drawing walings.
10.  Create a beam (strut) between (35 20 -1) and (35 32 -1). Press **<Esc>** to end defining the strut.
11.  Create data sets for the walings and struts according to [Table 6: Material properties of waling and strut](#) (on page 41) and assign the materials accordingly.
12.  Copy the strut into a total of three struts at  $x = 35$  (existing),  $x = 40$ , and  $x = 45$ .

## Ground anchors

The material properties for the structural elements are shown in the table below. These are needed for defining the material in a later step.

## Excavation in sand

Define the structural elements

**Table 7: Material properties of the node-to-node anchors**

Parameter	Name	Node-to-node anchor	Unit
Material type	Type	Elastic	-
Axial stiffness	EA	$6.5 \cdot 10^5$	kN

**Table 8: Material properties of the embedded beams (grout body)**

Parameter	Name	Grout	Unit
Young's modulus	E	$3 \cdot 10^7$	kN/m <sup>2</sup>
Unit weight	$\gamma$	24	kN/m <sup>3</sup>
Beam type	-	Predefined	-
Predefined beam type	-	Massive circular beam	-
Diameter	Diameter	0.14	m
Axial skin resistance	Type	Linear	-
Skin resistance at the top of the embedded beam	$T_{\text{skin,start,max}}$	200	kN/m
Skin resistance at the bottom of the embedded beam	$T_{\text{skin,end,max}}$	0.0	kN/m
Base resistance	$F_{\text{max}}$	0.0	kN

In PLAXIS 3D ground anchors can be modelled using the Node-to-node anchor and the Embedded beam options as described in the following:

-  First the ungrouted part of the anchor is created using the Node-to-node anchor feature. Start creating a node-to-node anchor by selecting the corresponding button in the options displayed as you click on the Create structure button.
- Click on the command line and type `30 24 -1 21 24 -7`. Press **<Enter>** and **<Esc>** to create the ungrouted part of the first ground anchor.
- Create a node-to-node anchor between the points (50 24 -1) and (59 24 -7).
-  The grouted part of the anchor is created using the Embedded beam option. Create embedded beams between (21 24 -7) and (18 24 -9) and between (59 24 -7) and (62 24 -9). Set the Behaviour to Grout body (for more information see the Reference Manual).
-  Create a data set for the embedded beam and a data set for the node-to-node anchor according to [Table 7: Material properties of the node-to-node anchors](#) (on page 42) and [Table 8: Material properties of the embedded beams \(grout body\)](#) (on page 42) respectively. Assign the data sets to the node-to-node anchors and to the embedded beams.

## Excavation in sand

Define the structural elements

**Note:** The colour indicating the material set assigned to the entities in project can be changed by clicking on the Colour box of the selected material set and selecting a colour from the **Colour** part of the window.

- The remaining grouted anchors will be created by copying the defined grouted anchor. Click on the Select button and click on all the elements composing both of the ground anchors keeping **<Ctrl>** pressed.
-  Use the Create array function to copy both ground anchors (2 embedded beams + 2 node-to-node anchors) into a total of 4 complete ground anchors located at  $y = 24$  and  $y = 28$  by selection the 1D, in y direction option in the Shape drop-down menu and define the Distance between columns as 4 m.
-  Multi-select all parts of the ground anchors (8 entities in total). While all parts are selected and **<Ctrl >** is pressed, right-click and select **Group**.
-  In the **Model explorer** tree, expand the **Groups** subtree by clicking on the (+) in front of the groups.
- Click the Group\_1 and rename it to GroundAnchors.

**Note:** The name of the entities in the project should not contain any space or special character except \_ (underscore).

## Pile sheet walls and loads

The material properties for the structural elements are shown in the table below. These are needed for defining the material in a later step.

**Table 9: Material properties of pile sheet walls**

Parameter	Name	Sheet pile wall	Unit
Type of behaviour	Type	Elastic, non-isotropic	-
Thickness	d	0.379	m
Weight	$\gamma$	2.55	kN/m <sup>3</sup>
Young's modulus	$E_1$	$1.46 \cdot 10^7$	kN/m <sup>2</sup>
	$E_2$	$7.3 \cdot 10^5$	kN/m <sup>2</sup>
Poisson's ratio	$\nu_{12}$	0.0	-
Shear modulus	$G_{12}$	$7.3 \cdot 10^5$	kN/m <sup>2</sup>
	$G_{13}$	$1.27 \cdot 10^6$	kN/m <sup>2</sup>
	$G_{23}$	$3.82 \cdot 10^5$	kN/m <sup>2</sup>

To define the sheet pile walls and the corresponding interfaces, follow these steps:

## Excavation in sand

### Generate the mesh

-  Select all four vertical surfaces created as the volume was decomposed. Keeping **<Ctrl>** pressed, right-click and select the **Create plate** option from the appearing menu.
-  Create a data set for the sheet pile walls (plates) according to [Table 9: Material properties of pile sheet walls](#) (on page 43). Assign the data sets to the four walls.
- As all the surfaces are selected, assign both positive and negative interfaces to them using the options in the right mouse button menu.

**Note:** The term 'positive' or 'negative' for interfaces has no physical meaning. It only enables distinguishing between interfaces at each side of a surface.

-  In the **Model explorer** tree expand the **Surfaces** subtree, set **AxisFunction** to Manual and set  $Axis1_z$  to -1. Do this for all the pile wall surfaces.

**Note:**

- Non-isotropic (different stiffness in two directions) sheet pile walls are defined. The local axis should point in the correct direction (which defines which is the 'stiff' or the 'soft' direction). As the vertical direction is generally the stiffest direction in sheet pile walls, local axis 1 shall point in the z-direction.
- The first local axis is indicated by a red arrow, the second local axis is indicated by a green arrow and the third axis is indicated by a blue arrow. More information related to the local axes of plates is given in the Reference Manual.

-  Create a surface load defined by the points: (34 19 0), (41 19 0), (41 12 0), (34 12 0). The geometry is now completely defined.

## Generate the mesh

- Proceed to the **Mesh** mode.
- Select the surface representing the excavation. In the **Selection explorer** set the value of **Coarseness factor** to 0.25.
- Set the element distribution to **Coarse**. Uncheck the box for **Enhanced mesh refinements**. Click the **Generate mesh** button  to generate the mesh.

**Note:** The **Enhanced mesh refinements** are automatically used in mesh generation. More information is available in the Reference Manual.

- Click the **View mesh** button  to view the mesh. Hide the soil in the model to view the embedded beams.
- Click on the **Close** tab to close the Output program and go back to the **Mesh** mode of the **Input** program.

## Define the calculation

The calculation consists of 6 phases. The initial phase consists of the generation of the initial stresses using the **K0 procedure**. The next phase consists of the installation of the sheet piles and a first excavation. Then the walings and struts will be installed. In phase 3, the ground anchors will be activated and prestressed. Further

## Excavation in sand

Define the calculation

excavation will be performed in the phase after that. The last phase will be the application of the additional load next to the pit.

1. Click on the **Staged construction** tab to proceed with definition of the calculation phases.
2. The initial phase has already been introduced. Keep its calculation type as **KO procedure**. Make sure all the soil volumes are active and all the structural elements are inactive.
3.  Add a new phase (Phase\_1). The default values of the parameters will be used for this calculation phase.
4. Deactivate the first excavation volume (from  $z=0$  to  $z=-1$ ).
5. In the **Model explorer**, activate all plates and interfaces by clicking on the checkbox in front of them.

The active elements in the project are indicated by a green check mark in the **Model explorer**

6.  Add a new phase (Phase\_2). The default values of the parameters will be used for this calculation phase.
7. In the **Model explorer** activate all the beams.
8.  Add a new phase (Phase\_3). The default values of the parameters will be used for this calculation phase.
9. In the **Model explorer** activate the **GroundAnchors** group.
10.  Select one of the node-to-node anchors.
11.  In the **Selection explorer** expand the node-to-node anchor features.
12. Click on the **Adjust prestress** checkbox. Enter a prestress force of 200 kN.

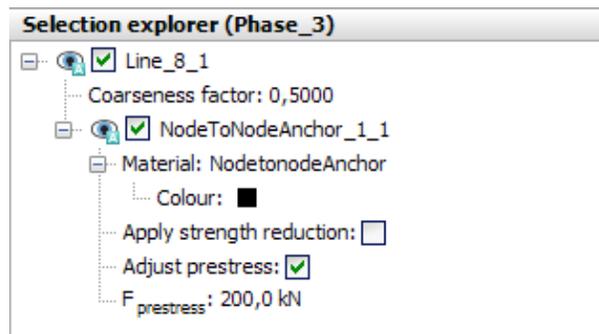


Figure 24: Node-to-node anchor in the Selection explorer

13. Do the same for all the other node-to-node anchors.
14.  Add another phase (Phase\_4). The default values of the parameters will be used for this calculation phase.
15.  Select the soil volume to be excavated in this phase (between  $z=-1$  and  $z=-6.5$ ).
16.  In the **Selection explorer** under **WaterConditions** feature, click on the **Conditions** and select the **Dry** option from the drop-down menu.

## Excavation in sand

Define the calculation

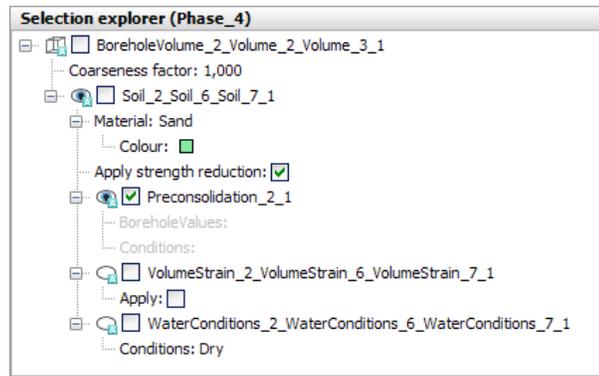


Figure 25: Water conditions in the Selection explorer

17. Deactivate the volume to be excavated (between  $z = -1$  and  $z = -6.5$ ).
18. Hide the soil and the plates around the excavation.
19.  Select the soil volume below the excavation (between  $z = -6.5$  and  $z = -9.5$ ).
20. In **Selection explorer** under **WaterConditions** feature, click **Conditions** and select **Head** from the drop-down menu. Enter  $z_{ref} = -6.5$  m.
21.  Select the soft clay volume below the excavation.
22. Set the water conditions to **Interpolate**.
23.  Preview this calculation phase.
24.  Click the **Vertical cross section** button in the **Preview** window and define the cross section by drawing a line across the excavation.

**Note:** Hold <Shift> when drawing to get a straight line.

25. Select the  $p_{steady}$  option from the **Stresses** menu.
26.  Display the contour lines for steady pore pressure distribution. Make sure that the **Legend > View** option is checked. The steady state pore pressure distribution is displayed in the figure below. Scroll the wheel button of the mouse to zoom in or out to get a better view.

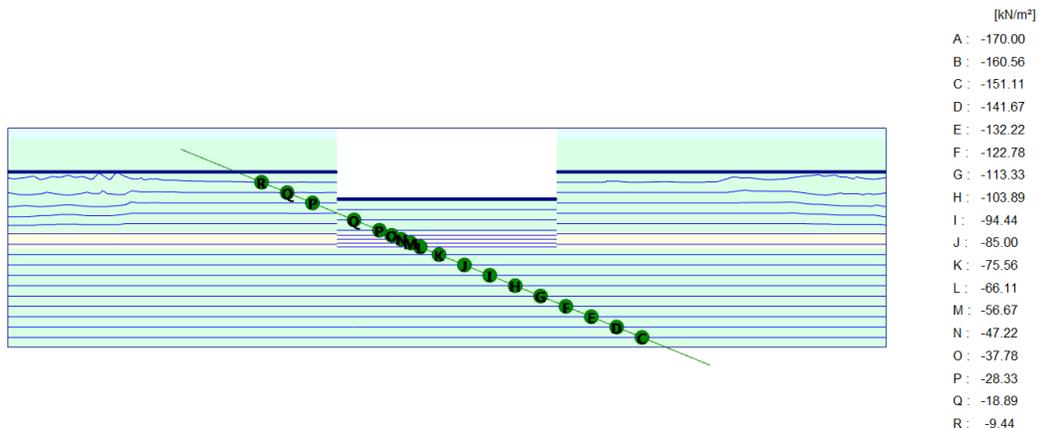


Figure 26: Preview of the steady state pore pressures in Phase\_4 in a cross section

27. Change the legend settings to:

## Excavation in sand

### Results

---

- Scaling: manual
  - Maximum value: 0
  - Number of intervals: 18
28. Click on the **Close** button to return to the Input program.
  29.  Add another phase (Phase\_5). The default values of the parameters will be used for this calculation phase.
  30. Activate the surface load and set  $\sigma_z = -20 \text{ kN/m}^2$ .

## Execute the calculation

Before starting the calculation process, some stress points next to the excavation pit and loading are selected to plot a stress strain curve later on.

1. Click the **Select points for curves** button .  
The model and **Select points** window will be displayed in the Output program.
2. Define (37.5 19 -1.5) as **Point-of-interest coordinates**.

**Note:** The visualization settings can be changed from the menu. For more information refer to Reference Manual.

3. Click the **Search closest** button.  
The number of the closest node and stress point will be displayed.
4. Click the checkbox in front of the stress point to be selected.  
The selected stress point will be shown in the list.
5. Select also stress points near the coordinates (37.5 19 -5), (37.5 19 -6) and (37.5 19 -7) and close the **Select points** window.
6. Click the **Update** button to close the Output program.
7.  Start the calculation process.
8.  Save the project when the calculation is finished.

### Note:

- Instead of selecting nodes or stress points for curves before starting the calculation, points can also be selected after the calculation when viewing the output results. However, the curves will be less accurate since only the results of the saved calculation steps will be considered.
- To plot curves of structural forces, nodes can only be selected after the calculation.
- Nodes or stress points can be selected by just clicking them. When moving the mouse, the exact coordinates of the position are given in the cursor location indicator bar at the bottom of the window.

## Results

After the calculations, the results of the excavation can be viewed by selecting a calculation phase from the **Phases** tree and pressing the **View calculation results** button.

1.  Select the final calculation phase (Phase\_5) and click the **View calculation results** button.

## Excavation in sand

### Results

The Output program will open and will show the deformed mesh at the end of the last phase.

2. The stresses, deformations and three-dimensional geometry can be viewed by selecting the desired output from the corresponding menus. For example, choose the menu **Stresses > Plastic points** to investigate the plastic points in the model.
3. In the **Plastic points** window, select all the options except the *Elastic points* and the *Show only inaccurate points* options.

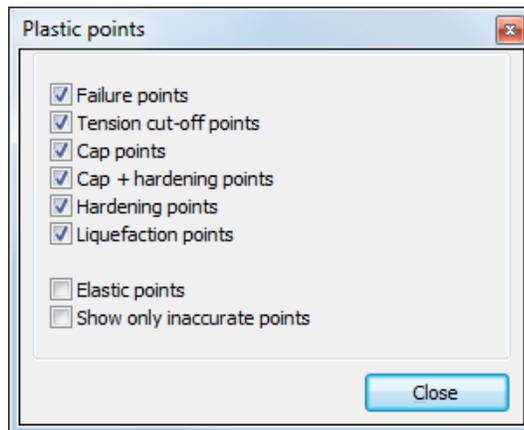


Figure 27: Plastic points window

The figure below shows the plastic points generated in the model at the end of the final calculation phase.

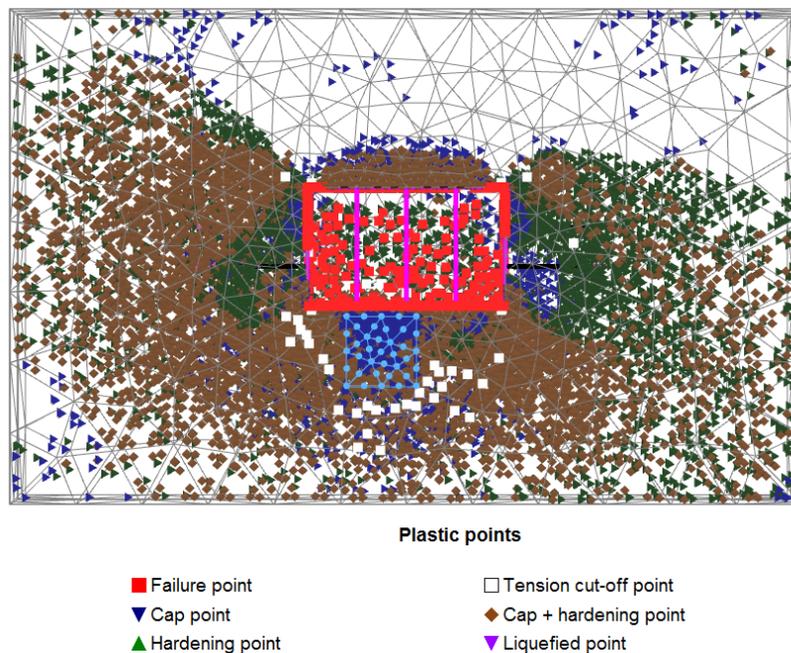


Figure 28: Plastic points at the end of the final phase

The graph will now show the major principal strain against the major principal stress. Both values are zero at the beginning of the initial conditions. After generation of the initial conditions, the principal strain is still zero whereas the principal stress is not zero anymore. To plot the curves of all selected stress points in one graph, follow these steps:

# Excavation in sand

## Results

1. Right-click and select **Add curve > From current project**.
2. Generate curves for the three remaining stress nodes in the same way.

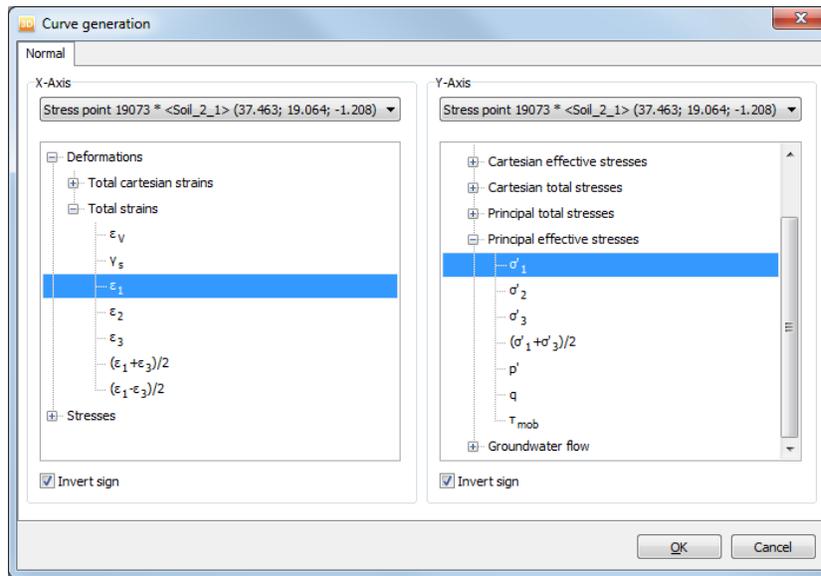


Figure 29: Curve generation window

The graph will now show the stress-strain curves of all four stress points.

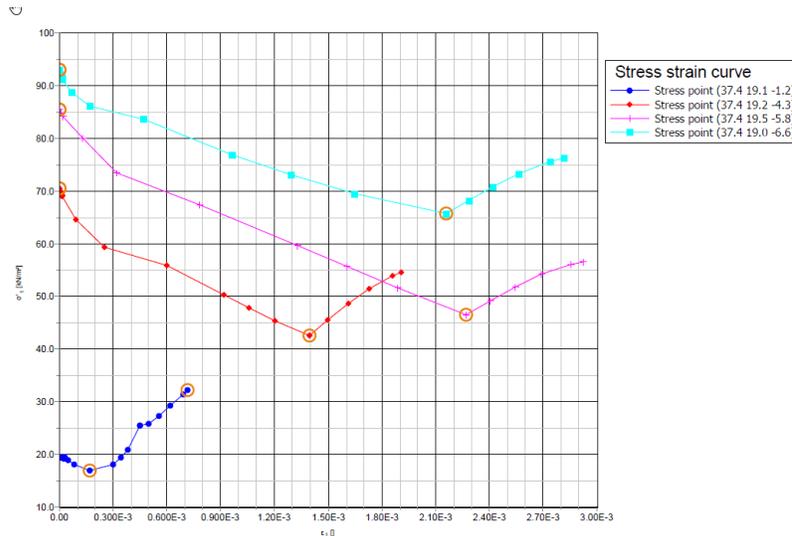


Figure 30: Stress - Strain curve

To see information about the markers, make sure the menu item **View > Value indication** is checked and hold the mouse on a marker for a while. Information about the coordinates in the graph, the number of the point in the graph, the number of the phase and the number of the step is given. Especially the lower stress points show a considerable increase in the stress when the load is applied in the last phase.

# Excavation in sand

## Results

### Note:

- To re-enter the **Curve generation** window (in the case of a mistake, a desired regeneration or a modification), select the menu item **Format > Curve settings**. As a result the **Curves settings** window appears, on which the **Regenerate** button should be clicked.
- The menu item **Format > Chart settings** menu may be used to modify the settings of the chart.

To create a stress path plot for stress node (37.5 19 -1.5) follow these steps:

1. Create a new chart.
2. In the **Curves generation** window, select node (37.5 19 -1.5) from the drop-down menu of the x-axis of the graph and  $\sigma'_{yy}$  under **Cartesian effective stresses**.
3. Select node (37.5 19 -1.5) from the drop-down menu of the y-axis of the graph. Select  $\sigma'_{zz}$  under **Cartesian effective stresses**.
4. Click **OK** to confirm the input.

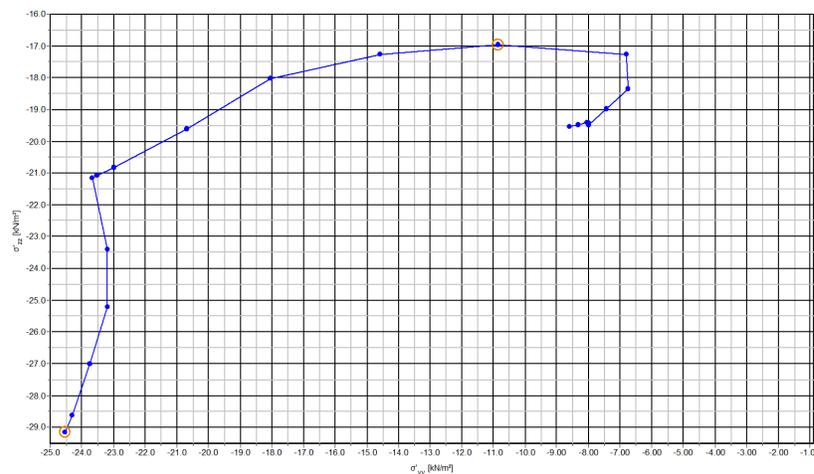


Figure 31: Vertical effective stress ( $\sigma'_{yy}$ ) versus horizontal effective stress ( $\sigma'_{zz}$ ) at stress node located near (37.5 19 -1.5)



## Loading of a suction pile

Create a new project

---

### Create a new project

An area of 30 m wide and 60 m long with half of the suction pile will be modelled in this example. With these dimensions the model is sufficiently large to avoid any influence from the model boundaries. To define the geometry for this exercise, follow these steps:

1. Start the **Input** program and select **New project** from the **Create/Open project** dialog box.
2. Enter an appropriate title for the project.
3. Keep the standard units and set the model dimensions to
  - a.  $x_{\min} = -30.0$  and  $x_{\max} = 30.0$ ,
  - b.  $y_{\min} = 0.0$  and  $y_{\max} = 30.0$ .
4. Click **OK**.

### Define the soil stratigraphy

In the current example only one horizontal soil layer is present. A single borehole is sufficient to define it.

1. Click the **Create borehole** button  and create a borehole at (0 0 0). The **Modify soil layers** window pops up.
2. In the **Modify soil layers** window add a soil layer with top boundary at  $z = 0$  m and bottom boundary at  $z = -30$  m.
3. The water depth at the considered location is 50 m. This would imply that the head is set to 50 m, but the results will be equal as long as the whole geometry is below the water level (the water above the ground is a total load and not an effective load). Hence, a head of 1.0 m is sufficient. Set the **Head** to 1.0 m.

### Create and assign the material data sets

The material properties for the data sets are shown in the table below.

**Table 10: Material properties for the soil and interface**

Parameter	Name	Clay	Interface	Unit
General				
Material model	Model	Mohr-Coulomb model	Mohr-Coulomb model	-
Drainage type	Type	Undrained B	Undrained B	-
Soil weight	$\gamma_{\text{unsat}} \cdot \gamma_{\text{sat}}$	20	20	kN/m <sup>3</sup>
Parameters				

## Loading of a suction pile

Create and assign the material data sets

Parameter	Name	Clay	Interface	Unit
Young's modulus	$E'$	1000	1000	kN/m <sup>2</sup>
Poisson's ratio	$\nu'$	0.35	0.35	-
Undrained shear strength	$s_{u,ref}$	1.0	1.0	kN/m <sup>2</sup>
Friction angle	$\varphi_u$	0.0	0.0	°
Dilatancy angle	$\psi$	0.0	0.0	°
Increase in stiffness	$E'_{inc}$	1000	1000	kN/m <sup>2</sup> /m
Reference level	$z_{ref}$	0.0	0.0	m
Increase in undrained shear strength	$s_{u,inc}$	4.0	4.0	kN/m <sup>2</sup> /m
Reference level	$z_{ref}$	0.0	0.0	m
Tension cut-off	-	Inactive	Inactive	-
Interfaces				
Interface strength	-	Manual	Rigid	-
Interface strength reduction	$R_{inter}$	0.7	1.0	-
Initial				
$K_0$ determination	-	Manual	Manual	-
Initial lateral earth pressure coeff.	$K_{0,x}, K_{0,y}$	0.5	0.5	-

1. Click the **Materials** button 
2. Create the data sets given in [Table 10: Material properties for the soil and interface](#) (on page 52). In the **Parameters** tabsheet deselect the **Tension cut-off** option in the advanced parameters for strength. In this exercise, the permeability of the soil will not influence the results. Instead of using effective strength properties, the cohesion parameter will be used in this example to model undrained shear strength. Advanced parameters can be entered after expanding the **Advanced** data tree in the **Parameters** tabsheet.

**Note:**

The **Interface** data set can be quickly created by copying the 'Clay' data set and changing the  $R_{inter}$  value.

3. Assign the 'Clay' material data set to the soil layer and close the **Material sets** window.

## Loading of a suction pile

Define the structural elements

---

### Define the structural elements

The suction pile is modelled in the **Structures** mode as half a cylindrical surface and this is then defined as a rigid body. Also, a helper object is defined for local mesh refinements.

### Create a suction pile

In the **Structures** mode the suction pile as a rigid body will be defined. This is done by creating a polycurve at the soil surface and extruding it downward.

To create the suction pile, the Rigid body functionality is used. For more information on Rigid bodies, refer to the corresponding section in the Reference Manual.

1. Click the **Structures** tab to proceed to **Structures** mode.
2. Click the **Create polycurve** button  in the side toolbar.
3. Click at (2.5 0 0) on the drawing area to define the insertion point.

**Note:** Select the menu **Options > Visualization settings** and set the **Intervals** to 2, while leaving the **Spacing** to 1 m. This allows to move the mouse with 0.5 m interval.

The **Shape designer** window pops up.

4. In the **General** tabsheet, the default option **Free** is valid for **Shape**.
5. The polycurve is drawn in the xy-plane (see the figure below). Hence the default orientation axes are valid for this example. For more information refer to "Definition of tunnel cross section geometry" in the Reference Manual.

## Loading of a suction pile

Define the structural elements

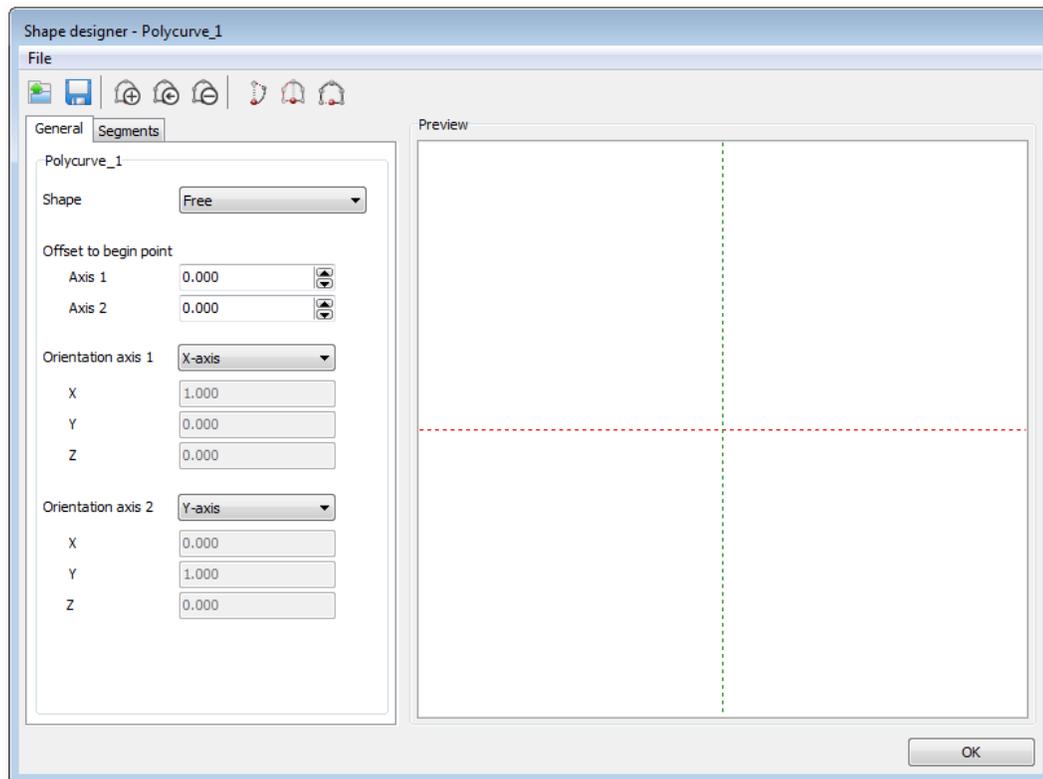


Figure 33: General tabsheet of the Shape designer

6. In the **Segments** tabsheet, click on the **Add section** button  in the top toolbar.
7. Set the **Segment type** to **Arc**, the **Relative start angle** to  $90^\circ$ , the **Radius** to 2.5 m and the **Segment angle** to  $180^\circ$ .

## Loading of a suction pile

Define the structural elements

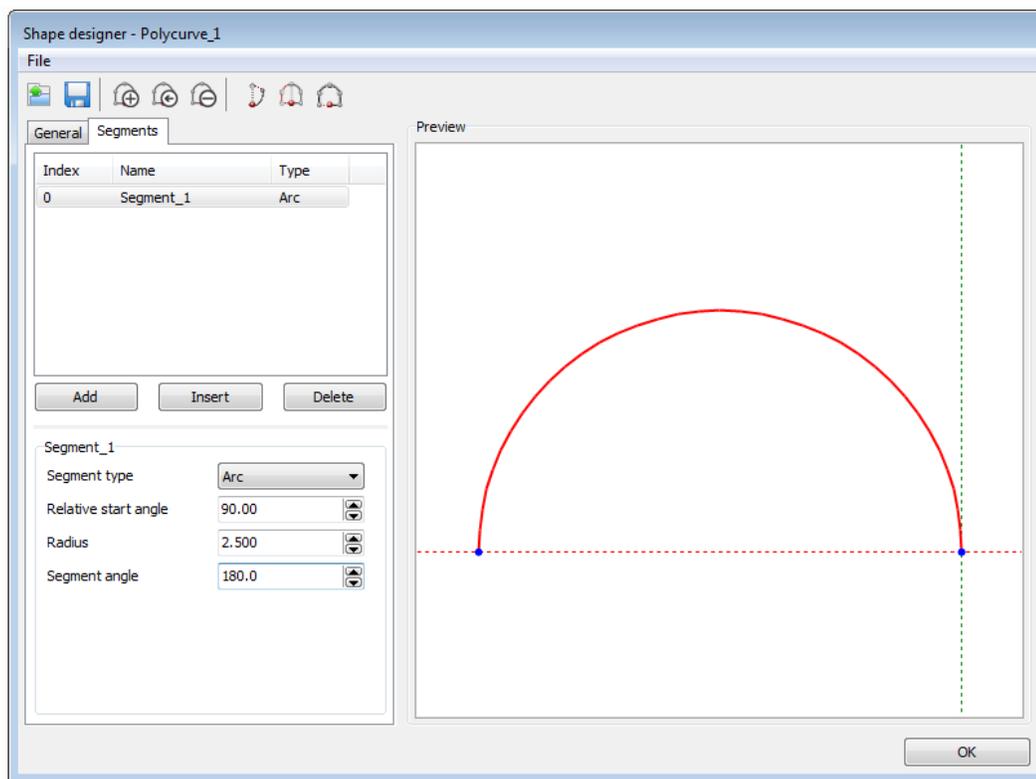


Figure 34: *Segment* tabsheet of the *Shape designer*

8. Click **OK** to add the polycurve to the geometry and to close the *Shape designer*.
9. Click on the created polycurve and select the **Extrude object**  and set the z value to -10 m.
10. Right-click the created surface, and select **Create positive interface** to create a positive interface for the suction pile. Similarly create a negative interface for the surface.
11. Right-click the polycurve and select **Close** from the appearing menu. Further, right click the closed polycurve and select **Create surface**.  
This creates the top surface of the suction pile.
12. Right-click the top surface and create a negative interface.
13. Select the **Interfaces** in the *Model explorer*. In the *Selection explorer* tree, select **Custom** for the **Material mode** from the dropdown menu.
14. Select **Interface** for the **Material** from the dropdown menu.

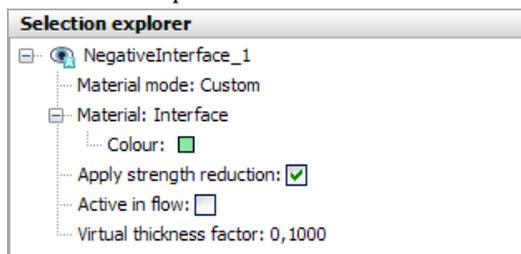


Figure 35: *Interface material assignment in Selection explorer*

15. Multi-select the top and the curved surface. Right-click on the selected surfaces and select the option **Create rigid body** from the appearing menu.

## Loading of a suction pile

Define the structural elements

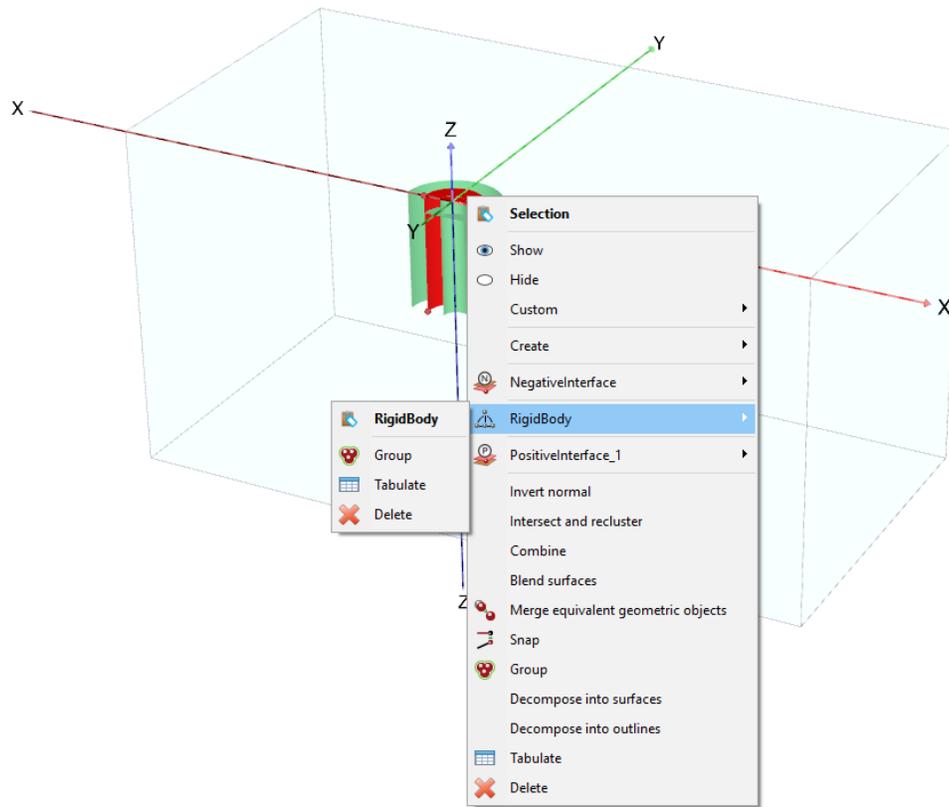


Figure 36: Rigid body creation

16. In the **Selection explorer**, set the reference point as (2.5 0 -7) for the rigid bodies by assigning the values to  $x_{ref}$ ,  $y_{ref}$  and  $z_{ref}$ .
17. Set the Translation condition<sub>y</sub> to **Displacement**, the Rotation condition<sub>x</sub> and Rotation condition<sub>z</sub> to **Rotation**. Their corresponding values are  $u_y = \varphi_x = \varphi_z = 0$ .

## Loading of a suction pile

Define the structural elements

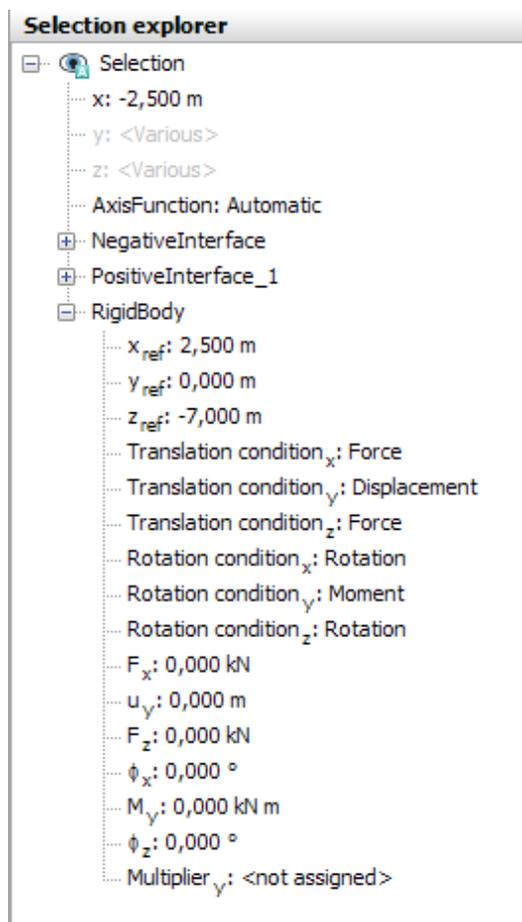


Figure 37: Rigid body in the Selection explorer

## Create helper objects for local mesh refinements

A surface is created around the suction pile to achieve better mesh refinements. This is done by creating a circular surface around the suction pile using the **Shape designer**.

1. Click the **Create polycurve** button  in the side toolbar and click on (7.5 0 0) in the drawing area.
2. In the **General** tabsheet the default option for the shape (Free) and the default orientation axes (x-axis, y-axis) are valid for this polycurve.
3. In the **Segments** tabsheet, click on the **Add segment** button  in the top toolbar. Set the **Segment type** to **Arc**, **Relative start angle** to 90°, **Radius** to 7.5 m and **Segment angle** to 180°.
4. Click **Close polycurve**  from the top toolbar to close the polycurve.
5. Click **OK** to add the polycurve to the geometry and to close the **Shape designer**.
6. Click on the created polycurve and select the **Extrude object**  and set the z value to -15 m.
7. Multi select the two created polycurves, right-click and select **Delete** from the appearing menu.

# Loading of a suction pile

Define the structural elements

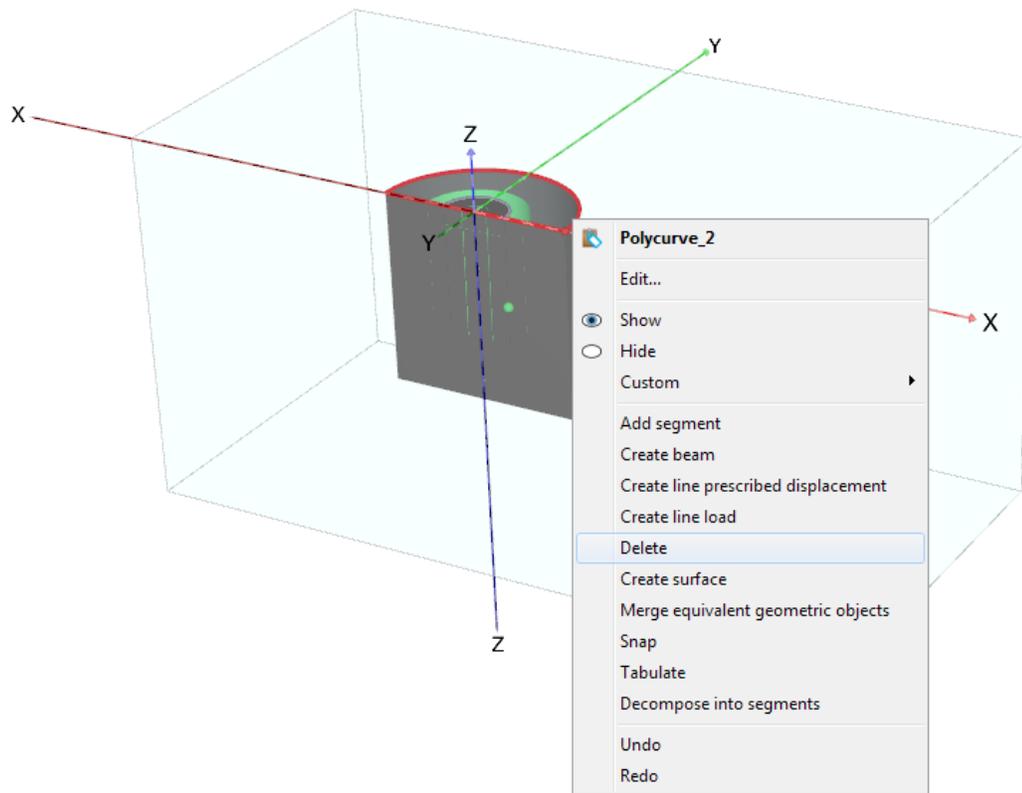


Figure 38: Deleting the two created polycurves

The geometry of the project is defined. A screenshot of the geometry is shown below.

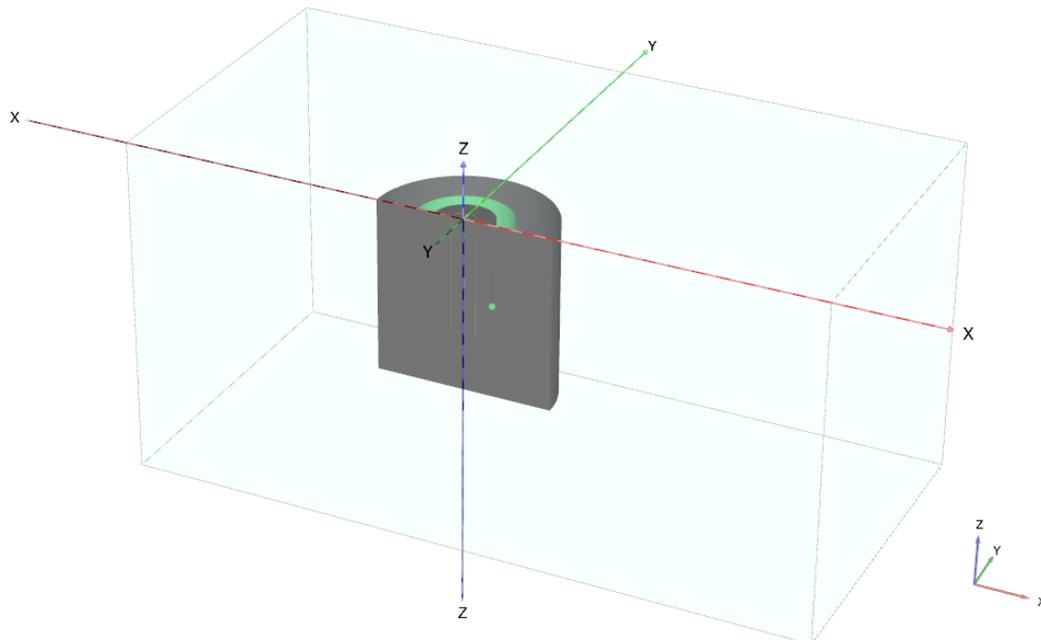


Figure 39: Geometry of the suction pile

## Loading of a suction pile

Generate the mesh

---

### Generate the mesh

In order to generate the mesh:

1. Click on the **Mesh** tab to proceed to the **Mesh** mode.
2. Hide the soil volume around the suction pile. Multi-select the suction pile, the surface around the suction pile and the top surface of the suction pile.
3. In the **Selection explorer** set the value of **Coarseness factor** to 0.25.
4. The element distribution is **Medium**. Click the **Generate mesh** button  to generate the mesh.
5. Proceed to the **Staged construction** mode.

### Define the calculation

The calculation for this exercise will consist of 6 phases. These are the determination of initial conditions, the installation of the suction pile and four different load conditions. The effect of the change of the load direction while keeping the magnitude unchanged will be analysed.

1. Click on the **Staged construction** tab to proceed with the definition of the calculation phases.
2. Keep the calculation type of the Initial phase to **K0 procedure**. Ensure that all the structures and interfaces are switched off.
3.  Add a new calculation phase and rename it as **Install pile**.
4. For this phase, we use the option of **Ignore undrained behaviour**.
5. Activate all the rigid bodies and interfaces in the project.
6.  Add a new phase and rename it as **Load pile 30 degrees**.
7. In the **Phases** window, check the **Reset displacements to zero** checkbox in the **Deformation control parameters** subtree.
8. Set the **Solver type** to **Paradiso (multicore direct)** to enable a faster calculation for this particular project.
9. In the **Numerical control parameters** subtree uncheck the **Use default iter parameters** checkbox, which allows you to change advanced settings.
10. Set the **Max load fraction per step** to 0.1.
11. Click on the **Rigid bodies** in the **Model explorer**.
12. In the **Selection explorer** tree, set  $F_x = 1949$  kN and  $F_z = 1125$  kN for the selected rigid bodies.
13. Define the remaining phases according to the information in [Table 11: Load information at the chain attachment point](#) (on page 60). For each phase select the **Reset displacements to zero** option and set **Solver type** to **Pardiso (multicore direct)** and **Max load fraction per step** to 0.1.

**Table 11: Load information at the chain attachment point**

Phase	Start from phase	$F_x$	$F_z$
Load pile 30 degrees [Phase_2]	Phase_1	1949 kN	1125 kN

## Loading of a suction pile

### Results

Phase	Start from phase	F <sub>x</sub>	F <sub>z</sub>
Load pile 40 degrees [Phase_3]	Phase_1	1724 kN	1447 kN
Load pile 50 degrees [Phase_4]	Phase_1	1447 kN	1724 kN
Load pile 60 degrees [Phase_5]	Phase_1	1125 kN	1949 kN

The order of the phases is indicated in the **Phases explorer**. Calculation of Phase\_1 starts after the calculation of Initial phase is completed. The calculation of the remaining phases starts after the calculation of the pile installation phase is completed.

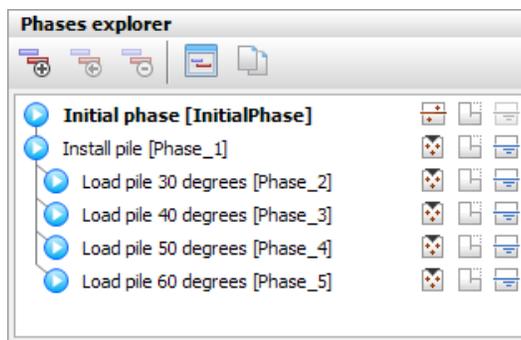


Figure 40: Phases explorer

## Execute the calculation

1.  Start the calculation process.
2.  Save the project when the calculation is finished.

## Results

To view the results:

1. View the results of the last calculation phase. The deformed mesh of the whole geometry will be shown. In particular, the displacements of the suction pile itself are of interest.
2.  Select the shadings representation and rotate the model such that the x-axis is perpendicular to the screen.
3. If the axes are not visible, select this option from the **View** menu. It is quite clear that the point force acting on the pile does not disturb the displacement field locally indicating that the pile is sufficiently thick here.
4. In the same manner, the total displacements of the suction pile under a different direction of the load can be inspected by selecting the appropriate phase from the drop-down menu. In particular, Phase\_2 is of interest, as in this phase the horizontal part of the load will have the largest value.

# Loading of a suction pile

Results

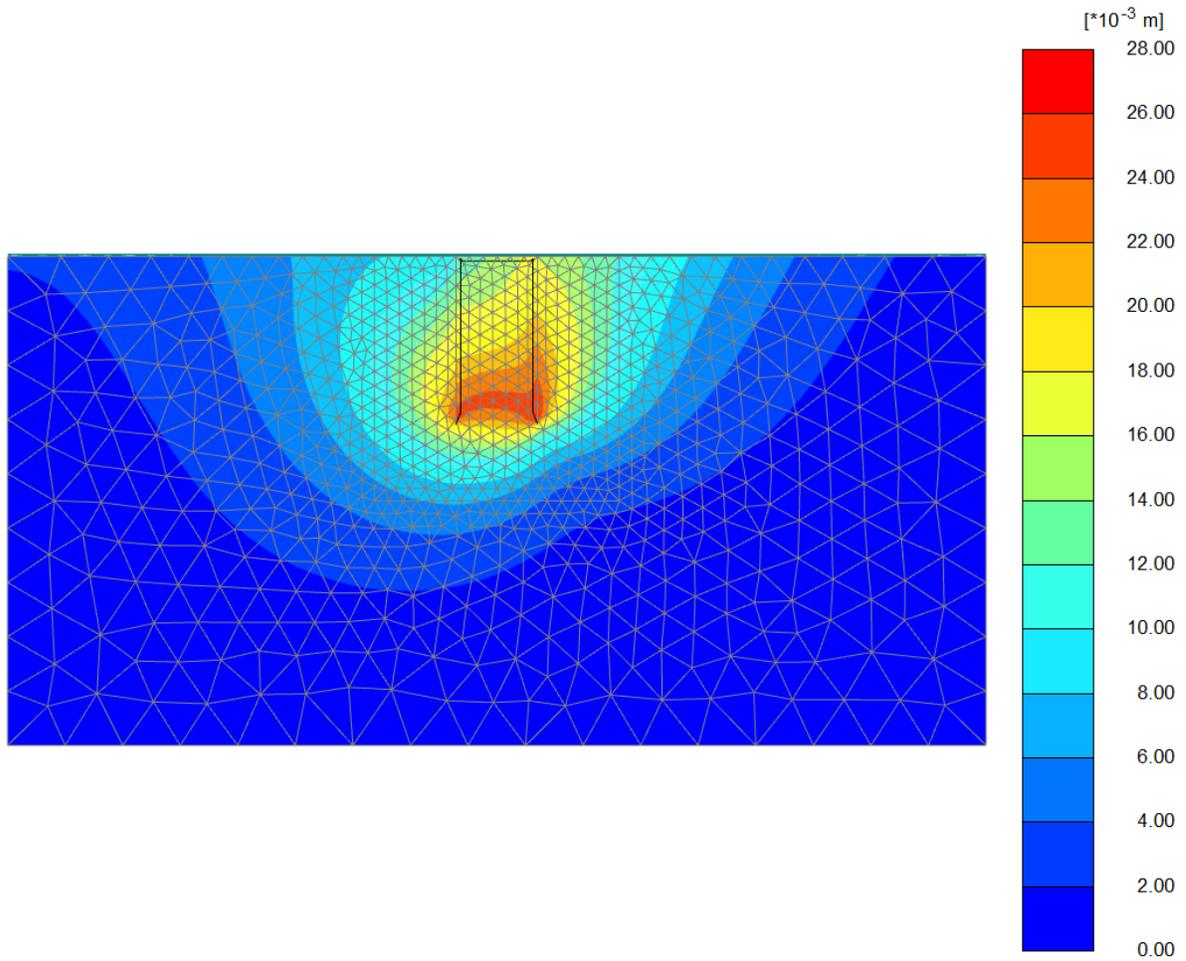


Figure 41: Total displacement of the suction pile at the end of Phase\_2

**Note:** As an alternative for true 3D finite element calculations, the online tool **SPCalc** from XG-Geotools provides a quick solution for multiple bearing capacity calculations of suction piles. For more information see [www.xg-geotools.com](http://www.xg-geotools.com).

# 5

## Construction of a road embankment

The construction of an embankment on soft soil with a high groundwater level leads to an increase in pore pressure. As a result of this undrained behaviour, the effective stress remains low and intermediate consolidation periods have to be adopted in order to construct the embankment safely. During consolidation the excess pore pressures dissipate so that the soil can obtain the necessary shear strength to continue the construction process.

This tutorial concerns the construction of a road embankment in which the mechanism described above is analysed in detail. In the analysis two new calculation options are introduced, namely a consolidation analysis and the calculation of a safety factor by means of a safety analysis ( $\phi/c$ -reduction). It also involves the modelling of drains to speed up the consolidation process.

### Objectives

- Modelling drains
- Consolidation analysis
- Change of permeability during consolidation
- Safety analysis ( $\phi$ - $c$  reduction)

### Geometry

The figure below shows a cross section of a road embankment.

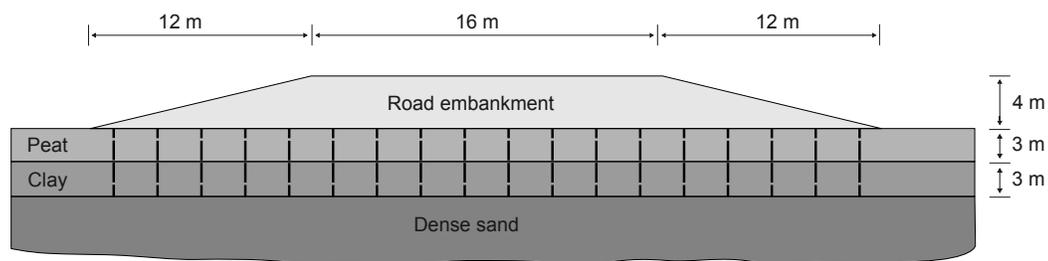


Figure 42: Situation of a road embankment on soft soil

### Create a new project

The embankment is 16 m wide. The slopes have an inclination of 1: 3. The problem is symmetric, so only one half is modelled (in this case the right half is chosen). A representative section of 2 m is considered in the project. The embankment itself is composed of loose sandy soil. The subsoil consists of 6 m of soft soil. The upper 3 m of this

## Construction of a road embankment

### Define the soil stratigraphy

soft soil layer is modelled as a peat layer and the lower 3 m as clay. The phreatic level is located 1 m below the original ground surface. Under the soft soil layers there is a dense sand layer of which 4 m are considered in the model.

1. Start the Input program and select **Start a new project** from the **Quick select** dialog box.
2. In the **Project** tabsheet of the **Project properties** window, enter an appropriate title.
3. Keep the default units and set the model dimensions to
  - a.  $x_{\min} = 0$  and  $x_{\max} = 60$
  - b.  $y_{\min} = 0$  and  $y_{\max} = 2$ .

## Define the soil stratigraphy

The soil layers comprising the embankment foundation are defined using a borehole. The embankment layers are defined in the **Structures** mode.

1. Click the **Create borehole** button  and create a borehole at (0 0 0). The **Modify soil layers** window pops up.
2. Define three soil layers as shown in [Figure 43: Soil layer distribution](#) (on page 64).
3. The water level is located at  $z = -1$  m. In the borehole column specify a value of -1 to **Head**.

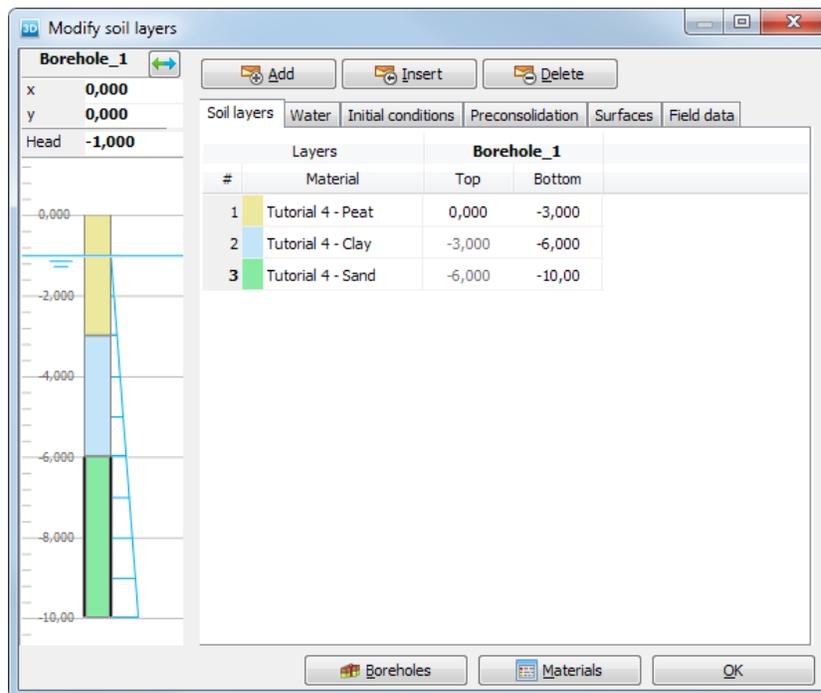


Figure 43: Soil layer distribution

## Create and assign the material data sets

The material properties for the data sets are shown in the table below.

## Construction of a road embankment

Create and assign the material data sets

**Table 12: Material properties of the road embankment and subsoil**

Parameter	Name	Embankment	Sand	Peat	Clay	Unit
General						
Material model	Model	Hardening Soil model	Hardening Soil model	Soft Soil model	Soft Soil model	-
Type of material behaviour	Type	Drained	Drained	Undrained (A)	Undrained (A)	-
Soil unit weight above phreatic level	$\gamma_{\text{unsat}}$	16	17	8	15	kN/m <sup>3</sup>
Soil unit weight below phreatic level	$\gamma_{\text{sat}}$	19	20	12	18	kN/m <sup>3</sup>
Initial void ratio	$e_{\text{init}}$	0.5	0.5	2.0	1.0	-
Parameters						
Modified compression index	$\lambda^*$	-	-	0.15	0.05	-
Modified swelling index	$\kappa^*$	-	-	0.03	0.01	-
Secant stiffness in standard drained triaxial test	$E_{50}^{\text{ref}}$	$2.5 \cdot 10^4$	$3.5 \cdot 10^4$	-	-	kN/m <sup>2</sup>
Tangent stiffness for primary oedometer loading	$E_{\text{oed}}^{\text{ref}}$	$2.5 \cdot 10^4$	$3.5 \cdot 10^4$	-	-	kN/m <sup>2</sup>

## Construction of a road embankment

Create and assign the material data sets

Parameter	Name	Embankment	Sand	Peat	Clay	Unit
Unloading / reloading stiffness	$E_{ur}^{ref}$	$7.5 \cdot 10^4$	$1.05 \cdot 10^5$	-	-	kN/m <sup>2</sup>
Power for stress-level dependency of stiffness	m	0.5	0.5	-	-	-
Cohesion (constant)	$c_{ref}'$	1.0	0.0	2.0	1.0	kN/m <sup>2</sup>
Friction angle	$\varphi'$	30	33	23	25	°
Dilatancy angle	$\psi$	0.0	3.0	0	0	°
Advanced: Set to default	Yes	Yes	Yes	Yes	Yes	-
Groundwater						
Data set	-	USDA	USDA	USDA	USDA	-
Model	-	Van Genuchten	Van Genuchten	Van Genuchten	Van Genuchten	-
Soil type	-	Loamy sand	Sand	Clay	Clay	-
> 2 $\mu$ m	-	6.0	4.0	70.0	70.0	%
2 $\mu$ m - 50 $\mu$ m	-	11.0	4.0	13.0	13.0	%
50 $\mu$ m - 2mm	-	83.0	92.0	17.0	17.0	%
Use defaults	-	From data set	From data set	None	From data set	-
Horizontal permeability (x-direction)	$k_x$	3.499	7.128	0.1	0.04752	m/day
Horizontal permeability (y-direction)	$k_y$	3.499	7.128	0.1	0.04752	m/day

## Construction of a road embankment

### Definition of embankment and drains

Parameter	Name	Embankment	Sand	Peat	Clay	Unit
Vertical permeability	$k_z$	3.499	7.128	0.05	0.04752	m/day
Change in permeability	$c_k$	$1 \cdot 10^{15}$	$1 \cdot 10^{15}$	1.0	0.2	-
Interfaces						
Interface strength	-	Rigid	Rigid	Rigid	Rigid	-
Strength reduction factor inter.	$R_{inter}$	1.0	1.0	1.0	1.0	-
Initial						
$K_0$ determination	-	Automatic	Automatic	Automatic	Automatic	-
Over-consolidation ratio	OCR	1.0	1.0	1.0	1.0	-
Pre-overburden pressure	POP	0.0	0.0	5.0	0.0	kN/m <sup>2</sup>

#### Note:

The initial void ratio ( $e_{init}$ ) and the change in permeability ( $c_k$ ) should be defined to enable the modelling of a change in the permeability due to compression of the soil. This option is recommended when using advanced models.

1. Click the **Materials** button .
2. Create soil material data sets according to [Table 12: Material properties of the road embankment and subsoil](#) (on page 65) and assign them to the corresponding layers in the borehole ([Figure 43: Soil layer distribution](#) (on page 64)).
3. Close the **Modify soil layers** window and proceed to the **Structures** mode to define the structural elements.

## Definition of embankment and drains

The embankment and the drains are defined in the **Structures** mode. To define the embankment layers:

## Construction of a road embankment

### Definition of embankment and drains

---

1.  Reorientate the model such that the front view is displayed by clicking the corresponding button in the toolbar.
2.  Create a surface by defining points at (0 0 0), (0 0 4), (8 0 4) and (20 0 0).
3.  Create a line passing through (0 0 2) and (14 0 2) to define the embankment layers.
4.  Select both the created line and surface by keeping the <Ctrl> key pressed while clicking them in the model.
5.  Click the **Extrude object** button. Assign a value of 2 to the y-component of the extrusion vector as shown in the figure below and click **Apply**.

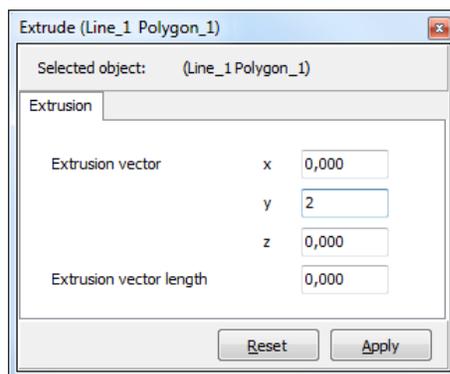


Figure 44: Extrusion window

6. Delete the surface and the line with its corresponding points that were created before the extrusion.
7. Right-click the volume created by extrusion and select the menu item **Soil\_4 > Set material > Embankment**.

In this project the effect of the drains on the consolidation time will be investigated by comparing the results with a case without drains. Drains will only be active for the calculation phases in the case with drains.

Drains are arranged in a square pattern, having a distance of 2 m between two consecutive drains in a row (or column). Only one row of drains will be considered in this tutorial. To create the drain pattern:

1.  Click the **Create hydraulic conditions** button in the side toolbar.
2.  Click the **Create line drain** button in the appearing menu. Define a line drain in the model between points (1 1 0) and (1 1 -6).
3.  Click the **Create array** button to define the drain pattern.
4. In the **Create array** window select the menu item **Shape > 1D, in x direction** in the drop-down menu and specify the pattern as shown in the figure below.

## Construction of a road embankment

Generate the mesh

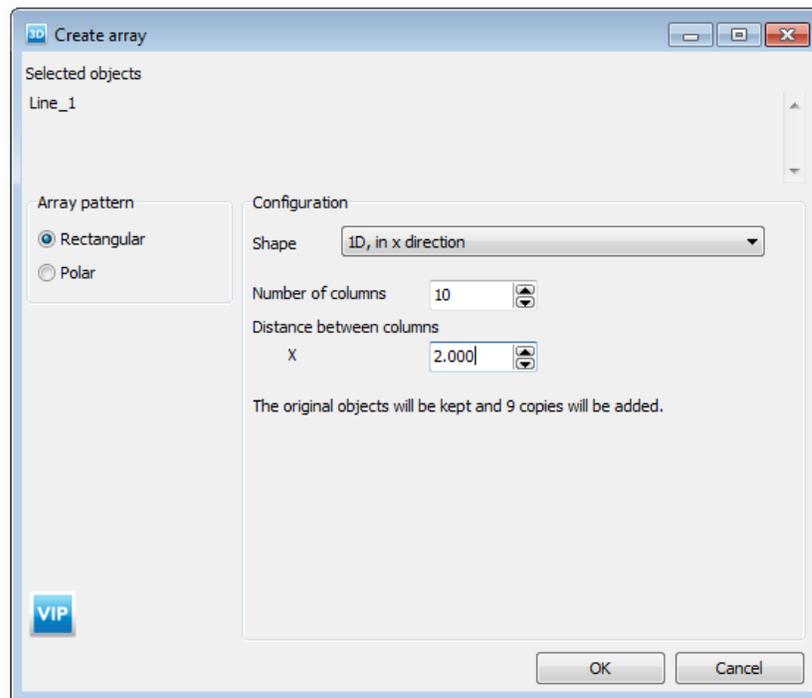


Figure 45: Settings of the drain pattern

The model geometry is shown in the following figure:

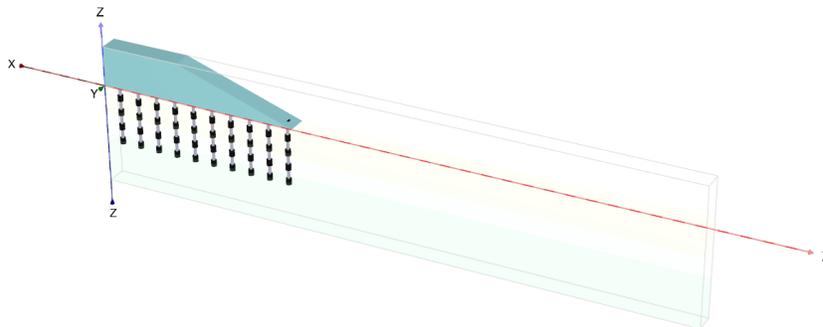


Figure 46: Model geometry

## Generate the mesh

1. Proceed to the **Mesh** mode.
2. Select all volumes, including the embankment and in the *Selection explorer* set the *Coarseness factor* to 0.3.
3.  Click the **Generate mesh** button. Set the element distribution to **Coarse**.
4.  View the generated mesh.

The resulting mesh is shown below.

# Construction of a road embankment

Define the calculation

---

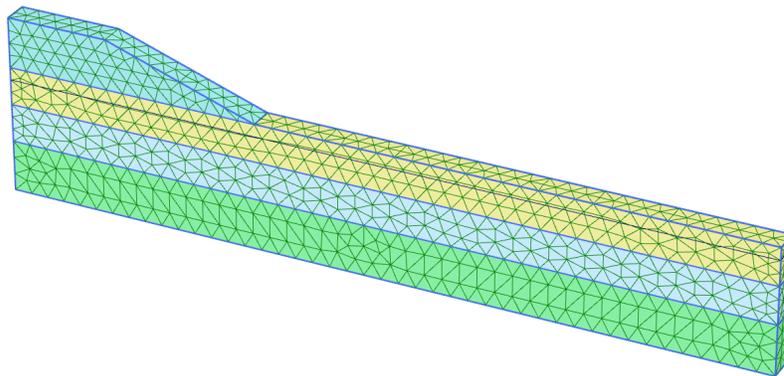


Figure 47: The generated mesh

## Define the calculation

The embankment construction process will be considered twice. In the first calculation the drains will not be considered.

### Initial phase

In the initial situation the embankment is not present. Therefore, the corresponding soil volumes are deactivated in the initial phase. The **K0 procedure** can be used to calculate the initial stresses. The initial water pressures are fully hydrostatic and based on a general phreatic level defined by the **Head** value assigned to the boreholes. For the **Initial phase**, the **Phreatic** option is selected for the pore pressure calculation type and the **Global water level** is set to **BoreholeWaterlevel\_1** corresponding to the water level defined by the heads specified for the boreholes.

The boundary conditions for flow can be specified in the **Model conditions** subtree in the **Model explorer**. In the current situation the left vertical boundary (Xmin) must be closed because of symmetry, so horizontal flow should not occur. The bottom is open because the excess pore pressures can freely flow into the deep and permeable sand layer. The upper boundary is obviously open as well. The view of the **GroundwaterFlow** subtree after the definition is given in the figure below.

## Construction of a road embankment

Define the calculation

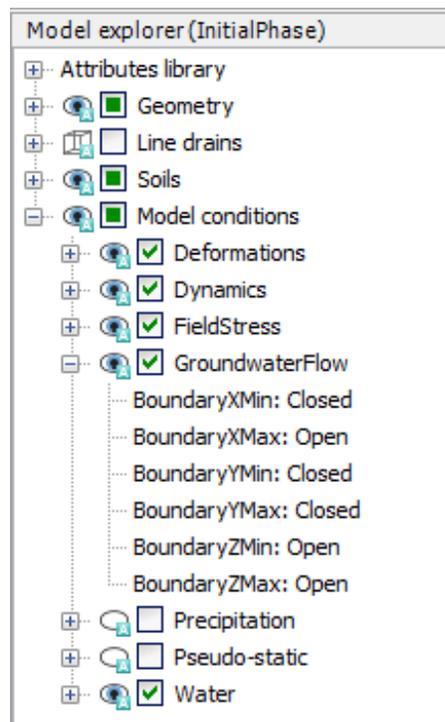


Figure 48: Boundary conditions for groundwater flow

## Consolidation analysis

A consolidation analysis introduces the dimension of time in the calculations. In order to correctly perform a consolidation analysis a proper time step must be selected. The use of time steps that are smaller than a critical minimum value can result in stress oscillations. The consolidation option in PLAXIS 3D allows for a fully automatic time stepping procedure that takes this critical time step into account. Within this procedure there are three main possibilities for the **Loading type** parameter:

- Consolidate for a predefined period, including the effects of changes to the active geometry (**Staged construction**).
- Consolidate until all excess pore pressures in the geometry have reduced to a predefined minimum value (**Minimum excess pore pressure**).
- Consolidate until the soil has reached a specified degree of consolidation (**Degree of consolidation**).

### Consolidation process - No drains

The embankment construction is divided into two phases. After the first construction phase, a consolidation period of 30 days is introduced to allow the excess pore pressures to dissipate. After the second construction phase another consolidation period is introduced from which the final settlements may be determined.

To define the calculation phases, follow these steps:

# Construction of a road embankment

Define the calculation

---

## Phase 1

1.  Click the **Add phase** button to introduce the first construction phase.
2.  In the **General** subtree select the **Consolidation** option in the **Calculation type** drop-down menu.
3.  The **Loading type** is by default set to **Staged construction**. This option will be used for this phase.
4.  The **Phreatic** option is automatically selected for the pore pressure calculation type. Note that the global water level for a calculation phase can be defined in the **Water** subtree available under the **Model conditions** in the **Model explorer**.
5. Specify a value of 2 days to the **Time interval** and click **OK** to close the **Phases** window.
6. In the **Staged construction** mode activate the first part of the embankment.

## Phase 2

The second phase is also a **Consolidation** analysis. In this phase no changes to the geometry are made as only a consolidation analysis to ultimate time is required.

1.  Click the **Add phase** button to introduce the next calculation phase.
2.  Define the calculation type as **Consolidation**.
3. Specify a value of 30 days to the **Time interval**. The default values of the other parameters are used for this phase.

## Phase 3

1.  Click the **Add phase** button to introduce the next calculation phase.
2.  Define the calculation type as **Consolidation**.
3. Specify a value of 1 day to the **Time interval**. The default values of the other parameters are used.
4. In the **Staged construction** mode activate the second part of the embankment.

## Phase 4

The fourth phase is a **Consolidation** analysis to a minimum excess pore pressure.

1.  Click the **Add phase** button to introduce the next calculation phase.
2.  Define the calculation type as **Consolidation**.
3.  Select the **Minimum excess pore pressure** option in the **Loading type** drop-down menu. The default value for the minimum pressure ( $|P\text{-stop}| = 1.0 \text{ kN/m}^2$ ) as well as the default values for other parameters are used.

The definition of the calculation phases is complete.

## Execute the calculation

# Construction of a road embankment

## Results

1.  Before starting the calculation, click the **Select points for curves** button and select the following points: As the first node, select the toe of the embankment at (20 0 0). The second node will be used to plot the development (and decay) of excess pore pressures. To this end, a point somewhere in the middle of the soft soil layers is needed, close to (but not actually on) the left boundary (e.g. (0.7 0 -3)).
2.  Start the calculation.

During a consolidation analysis the development of time can be viewed in the upper part of the calculation info window. In addition to the multipliers, a parameter  $P_{max}$  occurs, which indicates the current maximum excess pore pressure. This parameter is of interest in the case of a **Minimum excess pore pressure** consolidation analysis, where all pore pressures are specified to reduce below a predefined value.

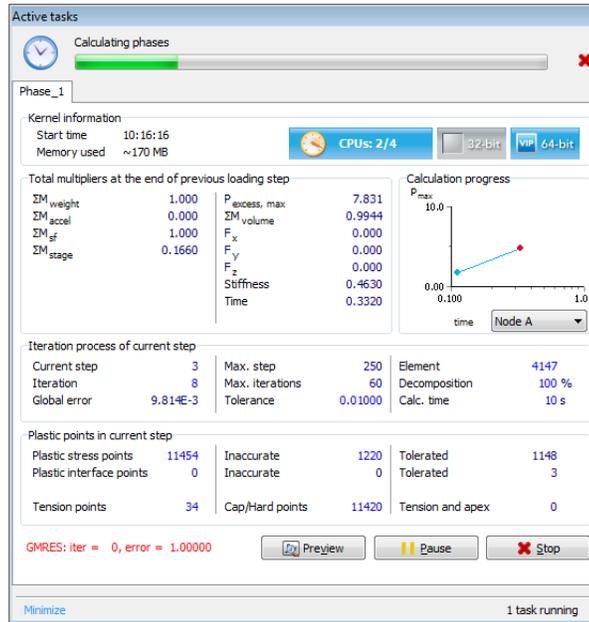


Figure 49: Calculation progress displayed in the Active tasks window

## Results

 After the calculation has finished, select the third phase and click the **View calculation results** button. The **Output** window now shows the deformed mesh after the undrained construction of the final part of the embankment. Considering the results of the third phase, the deformed mesh shows the uplift of the embankment toe and hinterland due to the undrained behaviour.

# Construction of a road embankment

## Results

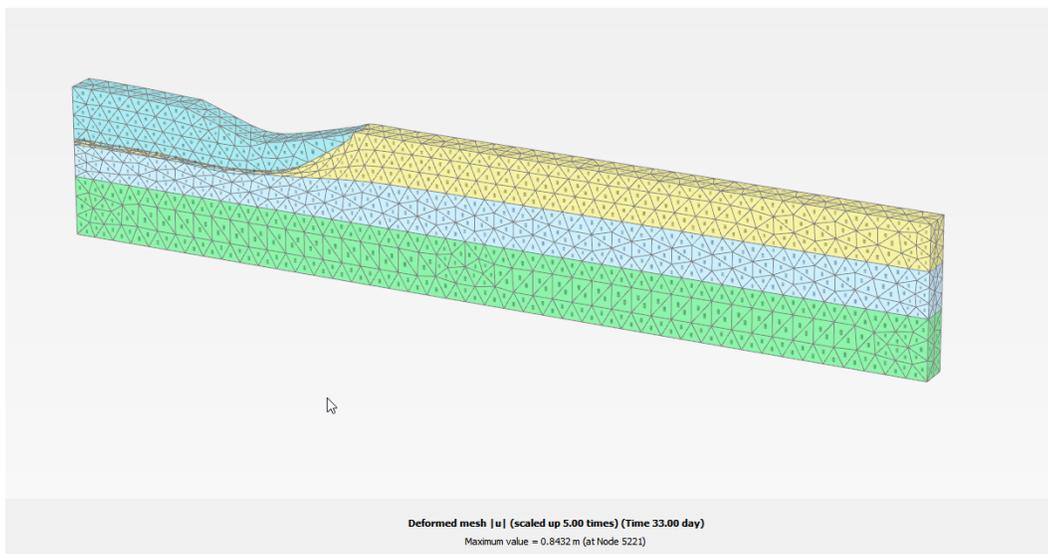


Figure 50: Deformed mesh after undrained construction of embankment (Phase 3)

1. Select the menu item **Deformations > Incremental displacements >  $|\Delta u|$** .
2.  Select the menu item **View > Arrows** or click the corresponding button in the toolbar to display the results arrows.

On evaluating the total displacement increments, it can be seen that a failure mechanism is developing:

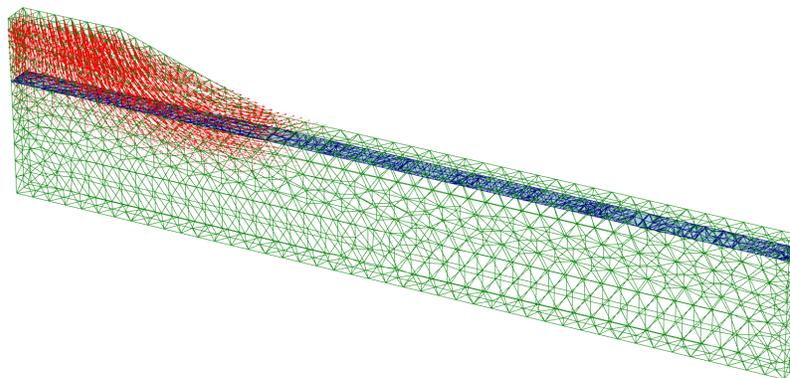


Figure 51: Displacement increments after undrained construction of embankment

1. Click **<Ctrl> + <7>** to display the developed excess pore pressures (see Appendix C of the Reference Manual for more shortcuts). They can be displayed by selecting the corresponding option in the side menu displayed as the **Pore pressures** option is selected in the **Stresses** menu.
2.  Click the **Center principal directions**. The principal directions of excess pressures are displayed at the center of each soil element. The results are displayed in the figure below. It is clear that the highest excess pore pressure occurs under the embankment centre.

## Construction of a road embankment

### Results

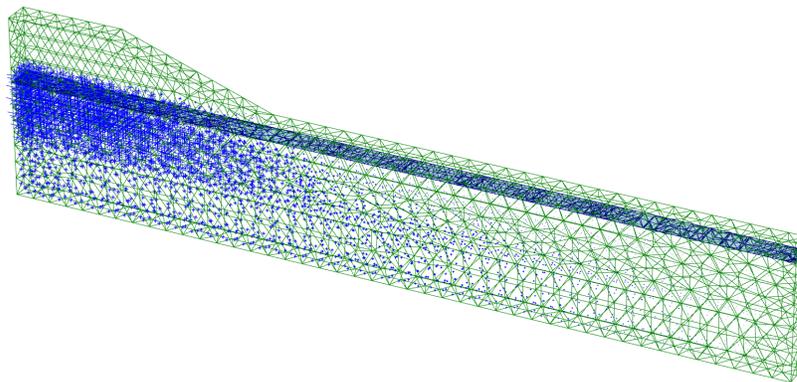


Figure 52: Excess pore pressures after undrained construction of embankment (Phase 3)

1. Select Phase 4 in the drop down menu.
2.  Define a vertical cross section passing through (0 1) and (60 1).
3.  Click the **Contour lines** button in the toolbar to display the results as contours.
4. Select the menu item **View > Viewpoint**. The corresponding window pops up.
5. In the **Viewpoint** window select the **Front view** option as shown:

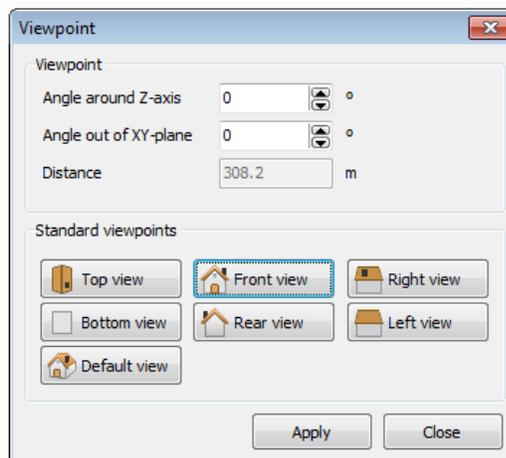


Figure 53: Viewpoint window

6.  Use the **Draw scanline** button or the corresponding option in the **View** menu to define the position of the contour line labels.

It can be seen that the settlement of the original soil surface and the embankment increases considerably during the fourth phase. This is due to the dissipation of the excess pore pressures (= consolidation), which causes further settlement of the soil. The figure below shows the remaining excess pore pressure distribution after consolidation. Check that the maximum value is below  $1.0 \text{ kN/m}^2$ .

# Construction of a road embankment

## Results

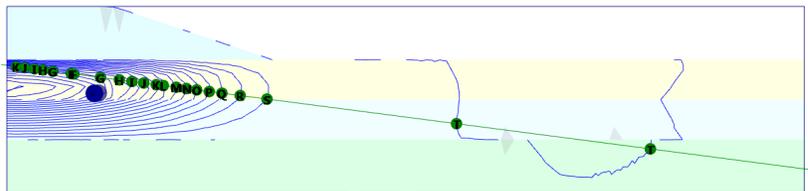


Figure 54: Excess pore pressure contours after consolidation to  $P_{excess} < 1.0 \text{ kN/m}^2$

The **Curves manager** can be used to view the development, with time, of the excess pore pressure under the embankment. In order to create such a curve, follow these steps:

1.  Click the **Curves manager** button in the toolbar. The corresponding window pops up.
2. In the **Charts** tabsheet click **New**. The **Curve generation** window pops up
3. For the x-axis, select the **Project** option from the drop-down menu and select **Time** in the tree.
4. For the y-axis, select the point in the middle of the soft soil layers (the second node (0.7 0.0 -3)) from the drop-down menu. In the tree select **Stresses > Pore pressure > p excess**.
5. Select the **Invert sign** option for y-axis.
6. Click **Ok** to generate the curve.
7.  Click the **Settings** button in the toolbar. The **Settings** window will appear displaying the tabsheet of the created curve.
8. Click the **Phases** button and select the phases 1 to 4 in the appearing window.
9. Rename the curve by typing Phases 1 - 4 in the **Curve title** cell.
10. Click **Apply** to update the plot.
11.  Save the chart in Output and save the project in Input.

**Note:** To display the legend inside the chart area right-click on the name of the chart and select the menu item **View > Legend in chart**.

The figure below clearly shows the four calculation phases. During the construction phases the excess pore pressure increases with a small increase in time while during the consolidation periods the excess pore pressure decreases with time. In fact, consolidation already occurs during construction of the embankment, as this involves a small time interval.

# Construction of a road embankment

## Safety analysis

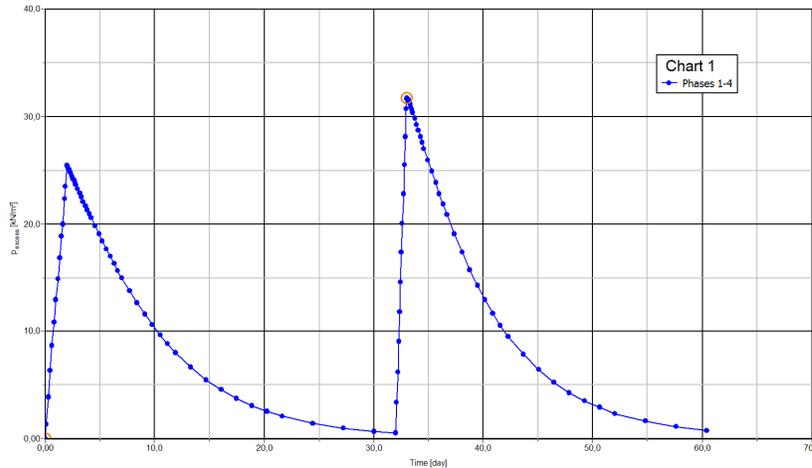


Figure 55: Development of excess pore pressure under the embankment

## Safety analysis

### General considerations

In the design of an embankment it is important to consider not only the final stability, but also the stability during the construction. It is clear from the output results that a failure mechanism starts to develop after the second construction phase.

It is interesting to evaluate a global safety factor at this stage of the problem, and also for other stages of construction.

In structural engineering, the safety factor is usually defined as the ratio of the collapse load to the working load. For soil structures, however, this definition is not always useful. For embankments, for example, most of the loading is caused by soil weight and an increase in soil weight would not necessarily lead to collapse. Indeed, a slope of purely frictional soil will not fail in a test in which the self weight of the soil is increased (like in a centrifuge test). A more appropriate definition of the factor of safety is therefore:

$$\text{Safety factor} = \frac{S_{\text{max imum available}}}{S_{\text{needed forequilibrium}}}$$

Where  $S$  represents the shear strength. The ratio of the true strength to the computed minimum strength required for equilibrium is the safety factor that is conventionally used in soil mechanics. By introducing the standard Coulomb condition, the safety factor is obtained:

$$\text{Safety factor} = \frac{c - \sigma_n \tan(\varphi)}{c_r - \sigma_n \tan(\varphi_r)}$$

Where  $c$  and  $\varphi$  are the input strength parameters and  $\sigma_n$  is the actual normal stress component. The parameters  $c_r$  and  $\varphi_r$  are reduced strength parameters that are just large enough to maintain equilibrium. The principle described above is the basis of a **Safety** analysis that can be used in PLAXIS 3D to calculate a global safety factor. In this approach the cohesion and the tangent of the friction angle are reduced in the same proportion:

$$\frac{c}{c_r} = \frac{\tan(\varphi)}{\tan(\varphi_r)} = \Sigma M s f$$

# Construction of a road embankment

## Safety analysis

The reduction of strength parameters is controlled by the total multiplier  $\Sigma Msf$ . This parameter is increased in a step-by-step procedure until failure occurs. The safety factor is then defined as the value of  $\Sigma Msf$  at failure, provided that at failure a more or less constant value is obtained for a number of successive load steps.

The **Safety** calculation option is available in the **Calculation type** drop-down menu in the **Phases** window.

## Define the calculation

To calculate the global safety factor for the road embankment at different stages of construction, follow these steps:

1. In the **Phases** window and select Phase 1 in the **Start from phase** drop-down menu.
2.  Add a new calculation phase.
3.  In the **General** subtree, select **Safety** as calculation type.
4.  The **Loading type** is automatically changed to **Incremental multipliers**.
5. The first increment of the multiplier that controls the strength reduction process, **Msf**, is set automatically to 0.1. This value will be used in this tutorial.
6.  Note that the **Use pressures from the previous phase** option in the **Pore pressure calculation type** drop-down menu is automatically selected and grayed out indicating that this option cannot be changed
7. In order to exclude existing deformations from the resulting failure mechanism, select the **Reset displacements to zero** option in the **Deformation control parameters** subtree. The default values of all the remaining parameters will be used. The first safety calculation has now been defined.
8. Follow the same steps to create new calculation phases that analyse the stability at the end of each consolidation phase. In addition to selecting **Safety** as calculation type, select the corresponding consolidation phase as the **Start from phase** parameter. The **Phases** explorer displaying the **Safety** calculation phases is shown below.

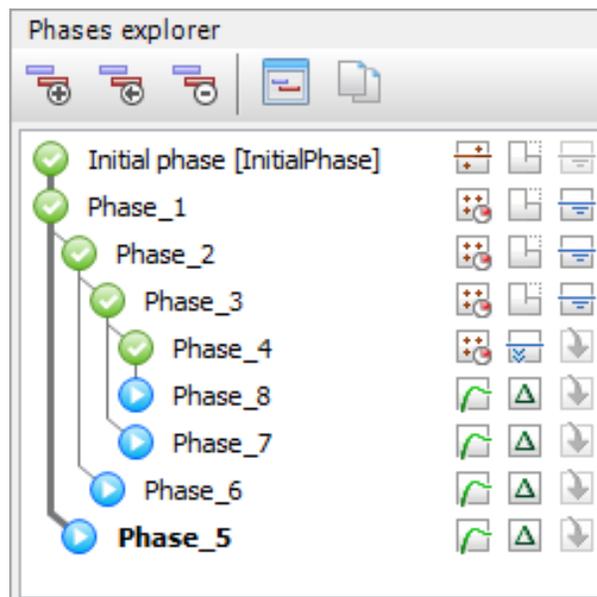


Figure 56: Phases explorer displaying the Safety calculation phases

9.  Calculate the safety phases.

# Construction of a road embankment

## Safety analysis

### Note:

- The default value of **Max steps** in a Safety calculation is 100. In contrast to an **Staged construction** calculation, the specified number of steps is always fully executed. In most **Safety** calculations, 100 steps are sufficient to arrive at a state of failure. If not, the number of steps can be increased to a maximum of 10000.
- For most Safety analyses  $Msf = 0.1$  is an adequate first step to start up the process. During the calculation process, the development of the total multiplier for the strength reduction,  $\Sigma Msf$ , is automatically controlled by the load advancement procedure.

## Evaluation of the results - Safety

Additional displacements are generated during a Safety calculation. The total displacements do not have a physical meaning, but the incremental displacements in the final step (at failure) give an indication of the likely failure mechanism.

In order to view the mechanisms in the three different stages of the embankment construction:

1.  Select the last **Safety** phase (Phase\_8) and click the **View calculation results** button.
2. Select the menu item **Deformations > Incremental displacements >  $|\Delta u|$** .
3.  Change the presentation from **Arrows** to **Shadings**. The resulting plots give a good impression of the failure mechanisms. The magnitude of the displacement increments is not relevant.

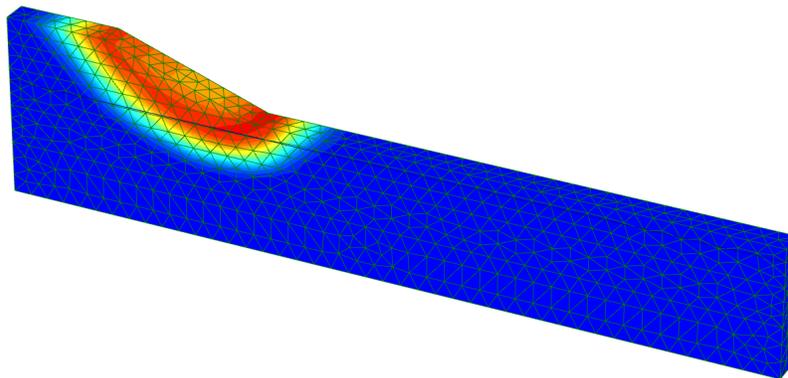


Figure 57: Shadings of the total displacement increments indicating the most applicable failure mechanism of the embankment in the final stage

The safety factor can be obtained from the **Calculation info** option of the **Project** menu. The value of  $\Sigma Msf$  represents the safety factor, provided that this value is indeed more or less constant during the previous few steps.

The best way to evaluate the safety factor, however, is to plot a curve in which the parameter  $\Sigma Msf$  is plotted against the displacements of a certain node. Although the displacements are not relevant, they indicate whether or not a failure mechanism has developed.

In order to evaluate the safety factors for the three situations in this way, follow these steps:

1. Click the **Curves manager** button in the toolbar.
2. Click **New** in the **Charts** tabsheet.

## Construction of a road embankment

### Using drains

3. In the **Curve generation** window, select the embankment toe (the first node) for the x-axis. Select the menu item **Deformations > Total displacements > |u|**.
4. For the y-axis, select **Project** and then select **Multiplier >  $\Sigma$  Msf**. The **Safety** phases are considered in the chart. As a result, the curve of appears.
5. Set x-axis interval maximum to 1 in **Chart** tab.

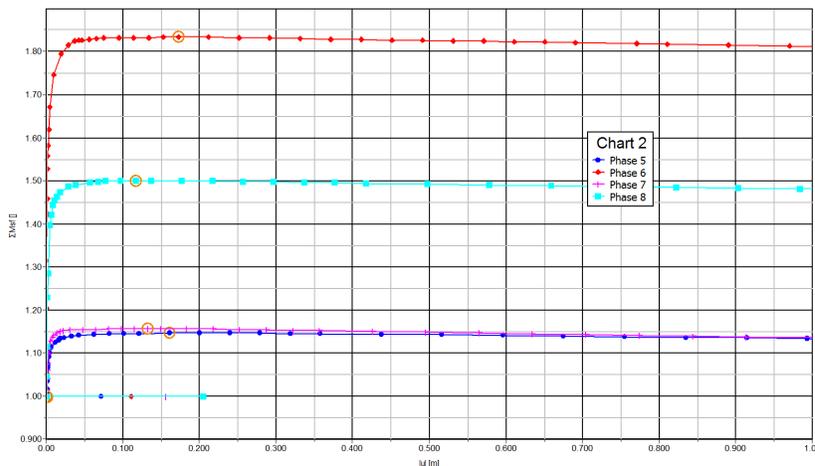


Figure 58: Evaluation of safety factor

The maximum displacements plotted are not relevant. It can be seen that for all curves a more or less constant value of  $\Sigma$  Msf is obtained. Hovering the mouse cursor over a point on the curves, a box showing the exact value of  $\Sigma$  Msf can be obtained.

## Using drains

In this section the effect of the drains in the project will be investigated. The embankment constructions will be redefined by introducing four new phases having the same properties as the first four consolidation phases. The differences in the new phases are:

- The drains should be active in all the new phases.
  - The **Time interval** in the first three of the consolidation phases (1 to 3) is 1 day. The last phase is set to **Minimum excess pore pressure** and a value of 1.0 kN/m<sup>2</sup> is assigned to the minimum excess pressure ([P-stop]).
1.  After the calculation is finished, select the last phase and click the **View calculation results** button. The **Output** window now shows the deformed mesh after the drained construction of the final part of the embankment. In order to compare the effect of the drains, the excess pore pressure dissipation in node (0.7 0 -3) can be used.
  2.  Open the **Curves manager**
  3. In the **Chart** tabsheet double click Chart 1 ( $p_{\text{excess}}$  of node (0.7 0 -3) versus time). Select the displaying phases to Phases 1-4. Close the **Curves manager**.
  4.  Click the **Settings** button in the toolbar. The **Settings** window pops up.
  5. Click the **Add curve** button and select the **Add from current project** option in the appearing menu. The **Curve generation** window pops up.

# Construction of a road embankment

## Using drains

**Note:** Instead of adding a new curve, the existing curve can be regenerated using the corresponding button in the **Curves settings** window.

6. Select the **Invert sign** option for y-axis.
7. Click **OK** to accept the selected options and close the **Curve generation** window.
8. In the chart a new curve is added and a new tabsheet corresponding to it is opened in the **Settings** window.
9. Click the **Phases** button. From the displayed window select the **Initial phase** and the last four phases (drains) and click **OK**.
10. In the **Settings** click **Apply** to preview the generated curve.
11. Click **OK** to close the **Settings** window. The chart gives a clear view of the effect of drains in the time required for the excess pore pressures to dissipate.

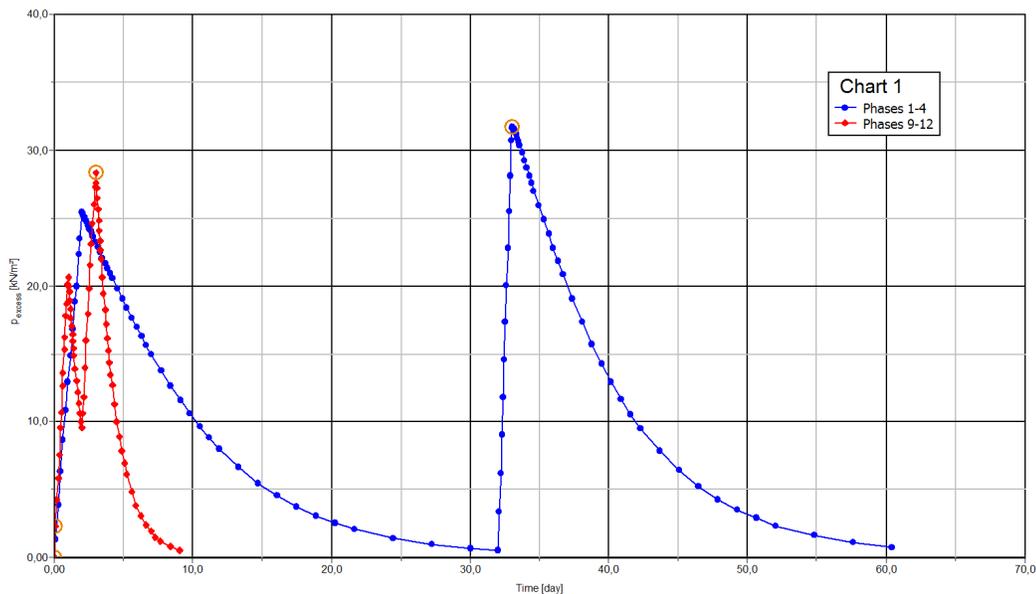


Figure 59: Effect of drains



# Stability of a diaphragm wall excavation

Create a new project

---

## Create a new project

The diaphragm wall considered in this exercise is 30 m deep and 1.2 m thick. One section is 7.0 m wide and consists of three excavation parts; part I and II are 2.5 m wide and part III is 2.0 m wide. The wall is symmetric about its central plane, so only one half of the thickness needs to be modelled. The interaction between the wall and the soil is considered to be fully rough, therefore interfaces are not required.

To define the geometry for this exercise, follow these steps:

1. Start the **Input** program and select **New project** from the **Create/Open project** dialog box.
2. Enter an appropriate title for the project.
3. Keep the standard units and set the model dimensions to
  - a.  $x_{\min} = 0$  and  $x_{\max} = 20$ ,
  - b.  $y_{\min} = 0$  and  $y_{\max} = 10$ .
4. Click **OK**.

## Define the soil stratigraphy

In the current example only one horizontal soil layer is present. A single borehole is sufficient to define it.

1. Click the **Create borehole** button  and create a borehole at (0 0 0). The **Modify soil layers** window pops up.
2. In the **Modify soil layers** window add a soil layer with top boundary at  $z = 40$  m and bottom boundary at  $z = 0$  m.
3. Set the **Head** to 39 m.

## Create and assign the material data sets

The material properties for the data sets are shown in the table below.

**Table 13: Material properties for the soil and concrete**

Parameter	Name	Stiff sandy clay	Concrete	Unit
General				
Material model	Model	Mohr-Coulomb model	Linear Elastic model	-
Drainage type	Type	Drained	Non-porous	-
Soil unit weight above phreatic level	$\gamma_{\text{unsat}}$	15	24	kN/m <sup>3</sup>

## Stability of a diaphragm wall excavation

Definition of the diaphragm wall

Parameter	Name	Stiff sandy clay	Concrete	Unit
Soil unit weight below phreatic level	$\gamma_{sat}$	20	-	kN/m <sup>3</sup>
Parameters				
Young's modulus	$E'$	$50 \cdot 10^3$	$2.6 \cdot 10^7$	kN/m <sup>2</sup>
Poisson's ratio	$\nu'$	0.3	0.2	kN/m <sup>2</sup>
Cohesion	$c'_{ref}$	15	-	kN/m <sup>2</sup>
Friction angle	$\varphi'$	30	-	°
Dilatancy angle	$\psi$	0.0	-	°
Interfaces				
Interface strength	-	Rigid	Rigid	-
Initial				
$K_0$ determination	-	Automatic	Automatic	-

1. Click the **Materials** button .
2. Create the data sets for the soil layer and the concrete as specified in [Table 13: Material properties for the soil and concrete](#) (on page 83).
3. Assign the 'Stiff sandy clay' material data set to the soil layer and close the **Material sets** window.

## Definition of the diaphragm wall

The diaphragm wall is modelled in the **Structures** mode. The volume elements composing the diaphragm wall are generated by extruding rectangular surfaces.

The coordinates for the surfaces are given in the following table:

**Table 14: Surfaces composing the diaphragm wall**

Segment	Point coordinates
I	(6.5 0 40) (9 0 40) (9 0.6 40) (6.5 0.6 40)
II	(11 0 40) (13.5 0 40) (13.5 0.6 40) (11 0.6 40)
III	(9 0 40) (11 0 40) (11 0.6 40) (9 0.6 40)

1.  Click the **Create surface** button in the side toolbar and create three surfaces accordingly to [Table 14: Surfaces composing the diaphragm wall](#) (on page 84).

## Stability of a diaphragm wall excavation

Generate the mesh

2.  Select the created surfaces by keeping the **<Ctrl>** key pressed while clicking them in the model.
3.  Click the **Extrude object** button in the side toolbar. Set the extrusion vector to (0 0 -30) and the extrusion vector length to 30.

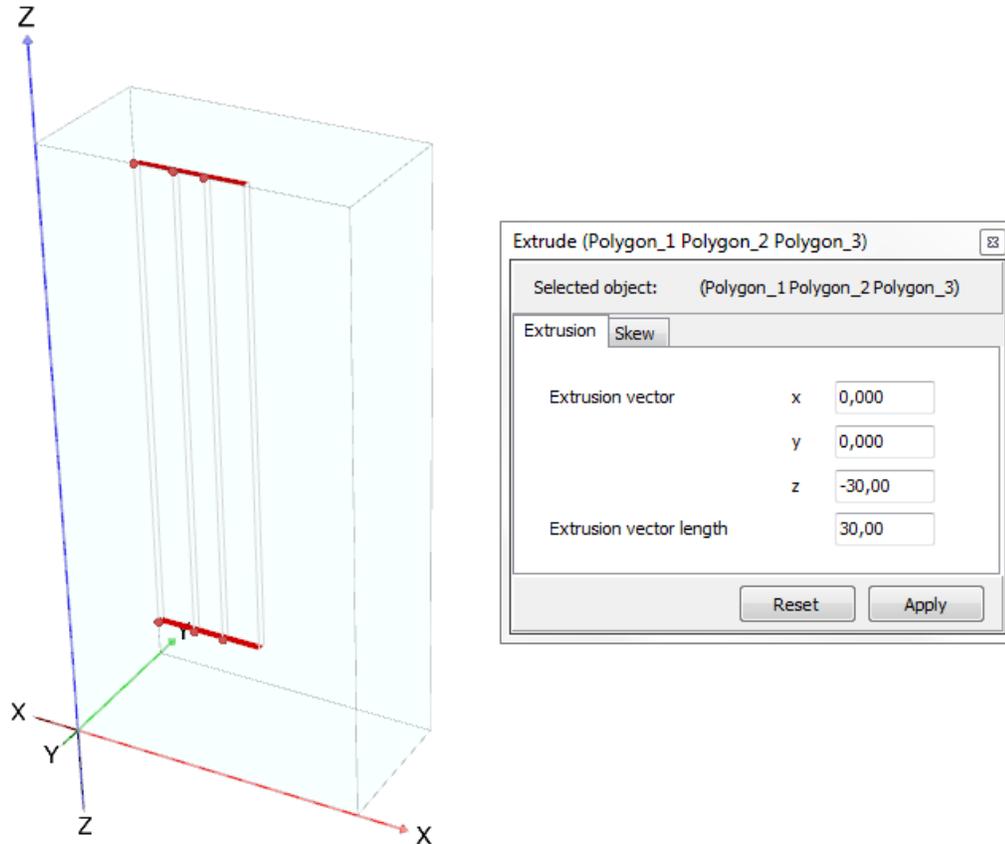


Figure 61: Extrude surfaces

4. Delete the surfaces.

## Generate the mesh

In order to generate the mesh:

1. Click on the **Mesh** tab to proceed to the **Mesh** mode.
2. Multi-select all the volume elements of the diaphragm wall.
3. In the **Selection explorer** set the value of **Coarseness factor** to 0.50.
4.  Click the **Generate mesh** button. The default option (**Medium**) is used to generate the mesh.
5.  Click the **View mesh** button to inspect the generated mesh.

# Stability of a diaphragm wall excavation

Define the calculation

---

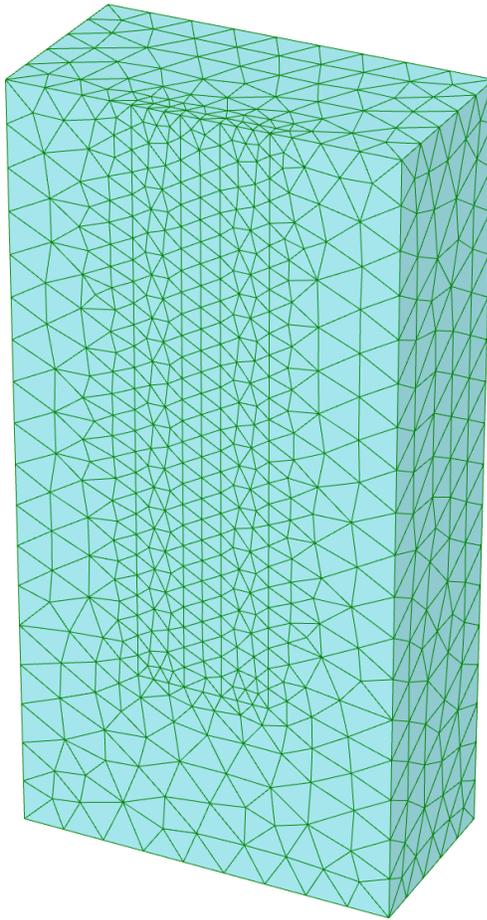


Figure 62: The generated mesh

6. Proceed to the **Staged construction** mode.

## Define the calculation

The calculation consists of five phases. In the first phase, part I of the excavation is removed and simultaneously filled with bentonite. The bentonite, with a unit weight of  $11 \text{ kN/m}^3$ , is simulated employing an artificial 'water' pressure that increases linearly with depth. This pressure replaces the original water pressure inside the excavation. In the second and third phases of the excavation parts, II and III are removed and filled with bentonite. In the fourth phase, the entire excavated trench is filled with fluid concrete. The fluid concrete with a unit weight of  $24 \text{ kN/m}^3$  is simulated by a change in the artificial 'water' pressure. In phase 5, the hardening of the concrete is simulated by removing the artificial pressures, reactivating the excavated clusters and assigning the concrete material set to these clusters.

### Initial phase

The initial phase consists of the generation of the initial stresses using the **K0 procedure**. The default settings for the initial phase are valid.

## Stability of a diaphragm wall excavation

Define the calculation

### Phase 1 - Excavation of part I

1.  Add the first calculation phase.
2. Select the first excavation volume (part I).
3. In the selection explorer, deactivate the soil volume. Set the water condition to **User-defined** and enter  $z_{ref} = 40$  m,  $p_{ref} = 0.0$  kN/m<sup>2</sup> and  $p_{inc} = -11$  kN/m<sup>2</sup>/m.

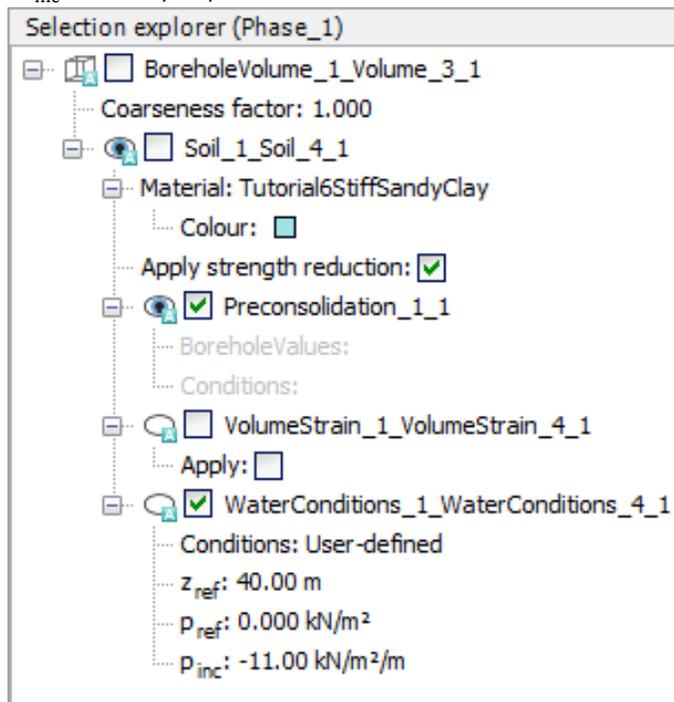


Figure 63: User-defined water condition in part I

A bentonite pressure is now defined in part I of the excavation, starting at 0 kN/m<sup>2</sup> at the reference level of 40 m and increasing at 11 kN/m<sup>2</sup> per m depth, resulting in 330 kN/m<sup>2</sup> at the bottom of the excavation.

4.  Click the **Preview phase** button to check the settings for the current phase.

### Phase 2 - Excavation of part II

1.  Add a new phase.
2. Select the second excavation volume (part II).
3. In the selection explorer, deactivate the soil volume. Set the water condition to **User-defined** and enter  $z_{ref} = 40$  m,  $p_{ref} = 0.0$  kN/m<sup>2</sup> and  $p_{inc} = -11$  kN/m<sup>2</sup>/m.

### Phase 3 - Excavation of part III

1.  Add a new phase.
2. Select the third excavation volume (part III).

## Stability of a diaphragm wall excavation

Define the calculation

---

3. In the selection explorer, deactivate the soil volume. Set the water condition to **User-defined** and enter  $z_{\text{ref}} = 40$  m,  $p_{\text{ref}} = 0.0$  kN/m<sup>2</sup> and  $p_{\text{inc}} = -11$  kN/m<sup>2</sup>/m.

### Phase 4 - Fluid concrete

The bentonite in the excavation is now replaced by fluid concrete with a weight of 24.0 kN/m<sup>3</sup>.

1.  Add a new phase.
2. Select the three excavation volumes.
3. In the selection explorer, change the **User-defined** water conditions and enter  $p_{\text{inc}} = -24$  kN/m<sup>2</sup>/m. The other parameters must be kept at their original values ( $z_{\text{ref}} = 40$  m,  $p_{\text{ref}} = 0.0$  kN/m<sup>2</sup>).

### Phase 5 - Cured concrete

1.  Add a new phase.
2. Select the three excavation volumes.
3. In the selection explorer, reactivate the soil volumes and set the material to concrete.
4. Set the water condition to **Dry**.

#### Note:

Although the concrete is non-porous and the calculation program will automatically assume zero pore pressures in these elements, it is a good practise to regenerate the water pressures such that the generated pore pressures correspond to those used in the calculation program.

### Phase 6 to 9 - Safety analysis

In Phases 6 to 9, stability calculations are defined for the previous phases respectively except for the fluid concrete phase (less critical than the bentonite phase thanks to the higher unit weight). Phase 3 should be the most critical because the support pressure from the bentonite is low. Also, the excavation is at its full width, which reduces the possibility for lateral arching. A check on whether Phase 3 is the most critical stage can be carried out by calculating the safety factors for the first three phases through a **Safety** analysis.

1. Select Phase\_1 in the **Phases explorer**.
2.  Add a new calculation phase and proceed to the **Phases** window.
3.  Set **Calculation type** to **Safety**. The **Incremental multipliers** option is valid as **Loading type**.
4. Select the **Reset displacements to zero** option in the **Deformation control** subtree.
5. In the **Numerical control parameters** subtree set the **Max steps** parameter to 40.
6. Follow the same procedure to add **Safety** analysis phases following phases 2, 3 and 5.

### Execute the calculation

1.  In the **Staged construction** mode select some nodes near (10 1 40) and (10 4.5 40) for curves.
2.  Start the calculation process.

# Stability of a diaphragm wall excavation

## Results

3.  Save the project when the calculation is finished.

## Results

The stability of the excavation can be evaluated from the calculated safety factor after each excavation stage. Use the Curves program to plot  $\Sigma$  Msf (the safety factor) as a function of the displacements  $|u|$  (see [Figure 64:  \$\Sigma\$ Msf \(safety factor\) as a function of the total displacement](#) (on page 89)). In Phase 3, the stability is the lowest. However,  $\Sigma$  Msf remains greater than 1 and so collapse would not be expected.

In order to evaluate the safety factors for the three situations in this way, follow these steps:

1. Click the **Curves manager** button in the toolbar.
2. Click **New** in the **Charts** tabsheet.
3. In the **Curve generation** window, select one of the two nodes for the x-axis. Select **Deformations > Total displacements >  $|u|$** .
4. For the y-axis, select **Project** and then select **Multiplier >  $\Sigma$  Msf**. The Safety phases are considered in the chart. As a result, the curve of [Figure 64:  \$\Sigma\$ Msf \(safety factor\) as a function of the total displacement](#) (on page 89) appears.
5. Set x-axis interval maximum to 0.1 in **Chart** tab.

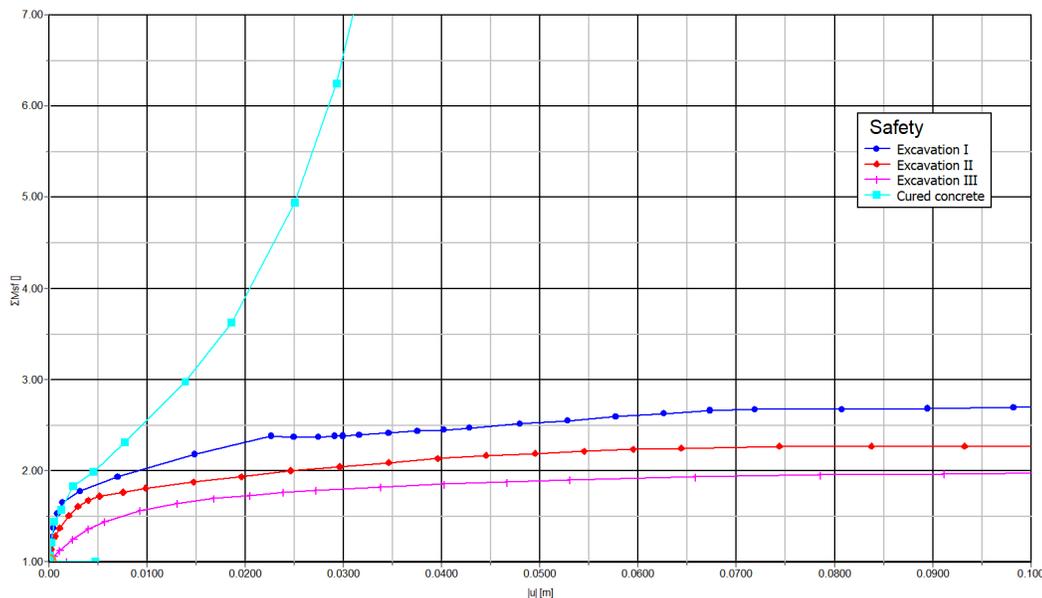


Figure 64:  $\Sigma$ Msf (safety factor) as a function of the total displacement

An important phenomenon that keeps the excavation stable is arching in the soil. This phenomenon is shown in the three figures below. To see the principal stresses directions at a chosen depth, make a horizontal cross section by clicking the **Horizontal cross section** button.

1.  To create such plots, make a horizontal cross-section by clicking the **Horizontal cross section** button in the side bar.
2. In the window that appears fill in a cross section height of 25 m (at the mid-height of the diaphragm wall).
3. Select the menu item **Stresses > Principal total stresses > Total principal stresses**.

# Stability of a diaphragm wall excavation

## Results

4.  Select the top view in **View > Viewpoint** to reorientate the model in order to obtain a clearer view of the arch effect.

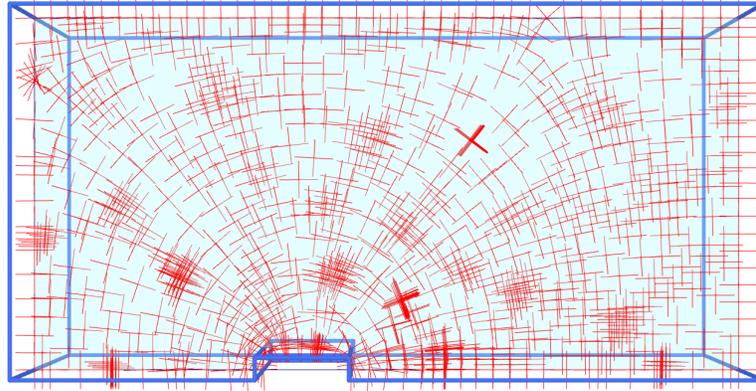


Figure 65: Principal stresses directions at  $z = 25$  m at the end of Phase\_1

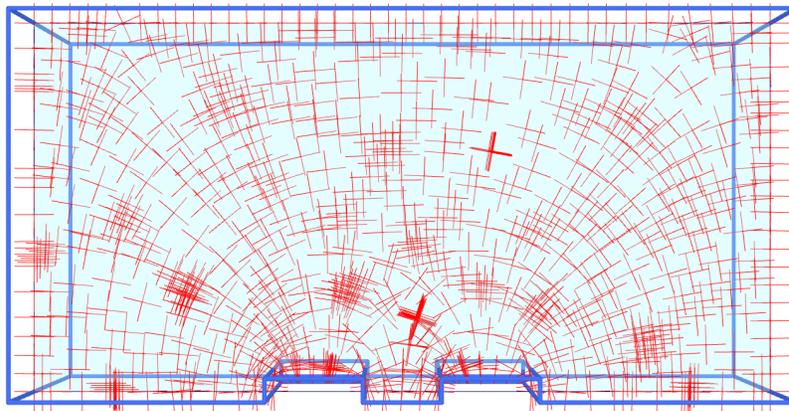


Figure 66: Principal stresses directions at  $z = 25$  m at the end of Phase\_2

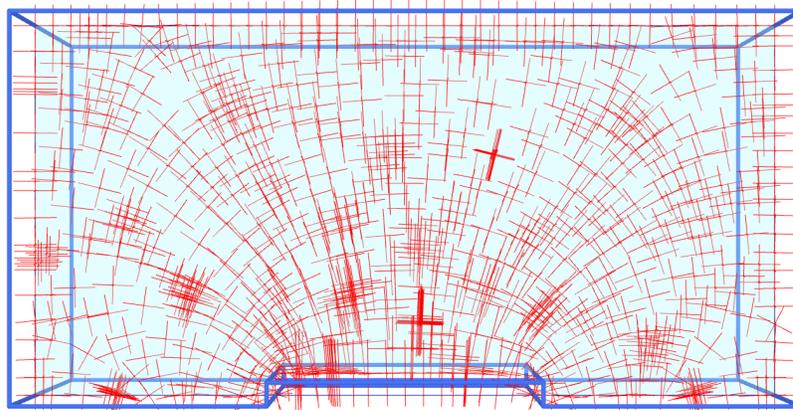


Figure 67: Principal stresses directions at  $z = 25$  m at the end of Phase\_4

## Phased excavation of a shield tunnel

The lining of a shield tunnel is often constructed using prefabricated concrete ring segments, which are bolted together within the tunnel boring machine to form the tunnel lining. During the erection of the tunnel lining the tunnel boring machine (TBM) remains stationary. Once a tunnel lining ring has been fully erected, excavation is resumed, until enough soil has been excavated to erect the next lining ring. As a result, the construction process can be divided into construction stages with a length of a tunnel ring, often about 1.5 m long. In each of these stages, the same steps are repeated over and over again.

In order to model this, a geometry consisting of slices each 1.5 m long can be used. The calculation consists of a number of *Plastic* phases, each of which models the same parts of the excavation process: the support pressure at the tunnel face needed to prevent active failure at the face, the conical shape of the TBM shield, the excavation of the soil and pore water within the TBM, the installation of the tunnel lining and the grouting of the gap between the soil and the newly installed lining. In each phase the input for the calculation phase is identical, except for its location, which will be shifted by 1.5 m each phase.

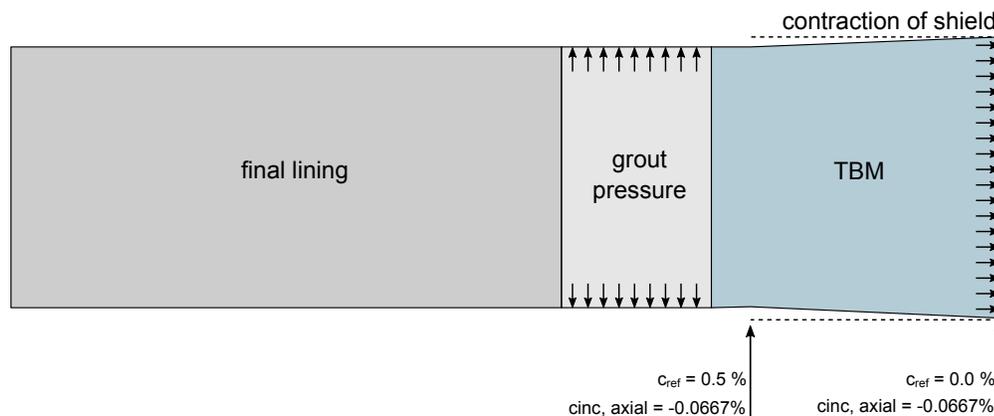


Figure 68: Construction stages of a shield tunnel model

### Objectives

- Modelling of the tunnel boring process with a TBM
- Modelling of the cone shape of the TBM
- Using **Tunnel designer** to define geometry, trajectory and sequencing of the tunnel

### Define the geometry

# Phased excavation of a shield tunnel

## Define the soil stratigraphy

In the model, only one symmetric half is included. The model is 20 m wide, it extends 80 m in the y-direction and it is 20 m deep. These dimensions are sufficient to allow for any possible collapse mechanism to develop and to avoid any influence from the model boundaries.

1. Start the Input program and select **Start a new project** from the **Quick select** dialog box.
2. In the **Project** tabsheet of the **Project properties** window, enter an appropriate title.
3. Keep the default units and set the model dimensions to
  - a.  $x_{\min} = -20$  and  $x_{\max} = 0$ ,
  - b.  $y_{\min} = 0$  and  $y_{\max} = 80$ .

## Define the soil stratigraphy

The subsoil consists of three layers. The soft upper sand layer is 2 m deep and extends from the ground surface to Mean Sea Level (MSL). Below the upper sand layer, there is a clay layer of 12 m thickness and this layer is underlain by a stiff sand layer that extends to a large depth. Only 6 m of the stiff sand layer is included in the model. Hence, the bottom of the model is 18 m below MSL. Soil layer is assumed to be horizontal throughout the model and so just one borehole is sufficient to describe the soil layers. The present groundwater head corresponds to the MSL.

1. Press the **Create borehole** button  and click at the origin of the system of axis to create a borehole at (0 0). The **Modify soil layers** window will open.
2. Define 3 layers: Upper sand with the top at 2 m and the bottom at 0 m, Clay with the bottom at -12 m and Stiff sand with the bottom at -18 m.

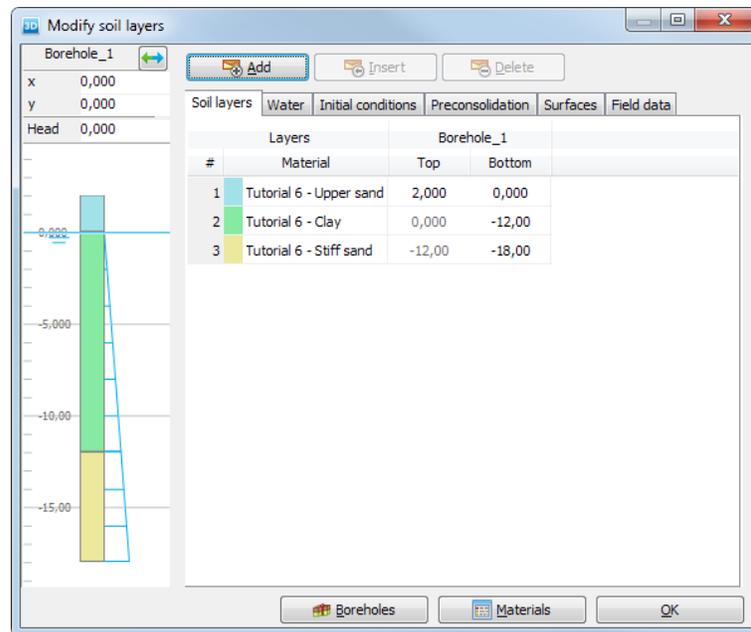


Figure 69: Soil layer distribution

## Phased excavation of a shield tunnel

Create and assign the material data sets

### Create and assign the material data sets

The material properties for the data sets are shown in the table below.

**Table 15: Material properties for the soil layers**

Parameter	Name	Upper sand	Clay	Stiff sand	Concrete	Unit
General						
Material model	Model	Mohr-Coulomb	Mohr-Coulomb	Mohr-Coulomb	Linear elastic	-
Drainage type	Type	Drained	Drained	Drained	Non porous	-
Unit weight above phreatic level	$\gamma_{\text{unsat}}$	17.0	16.0	17.0	27.0	kN/m <sup>3</sup>
Unit weight below phreatic level	$\gamma_{\text{sat}}$	20.0	18.0	20.0	-	kN/m <sup>3</sup>
Parameters						
Young's modulus	$E'$	$1.3 \cdot 10^4$	$1.0 \cdot 10^4$	$7.5 \cdot 10^4$	$3.1 \cdot 10^7$	kN/m <sup>2</sup>
Poisson's ratio	$\nu'$	0.3	0.35	0.3	0.1	-
Cohesion	$c'_{\text{ref}}$	1.0	5.0	1.0	-	kN/m <sup>2</sup>
Friction angle	$\varphi'$	31	25	31	-	°
Dilatancy angle	$\psi$	0	0	0	-	°
Interfaces						
Interface strength	-	Rigid	Rigid	Rigid	Rigid	-
Initial						

## Phased excavation of a shield tunnel

Definition of structural elements

Parameter	Name	Upper sand	Clay	Stiff sand	Concrete	Unit
$K_0$ determination	-	Automatic	Automatic	Automatic	Automatic	-

1. Open the materials database by clicking the **Materials** button  and create the data sets for the soil layers and the final concrete lining in the tunnel as specified in the [Table above](#) (on page 93).
2. Assign the material data sets to the corresponding soil layers ([Figure 69: Soil layer distribution](#) (on page 92)) and close the **Modify soil layers** window. The concrete data set will be assigned later.

## Definition of structural elements

The tunnel excavation is carried out by a tunnel boring machine (TBM) which is 9.0 m long and 8.5 m in diameter. The TBM already advanced 25 m into the soil. Subsequent phases will model an advancement by 1.5 m each.

**Note:** In the tunnel, as considered here, the segments do not have a specific meaning as the tunnel lining is homogeneous and the tunnel will be constructed at once. In general, the meaning of segments becomes significant when:

- It is desired to excavate or construct the tunnel (lining) in different stages.
- Different tunnel segments have different lining properties.
- One would consider hinge connections in the lining (hinges can be added after the design of the tunnel in **Staged construction** mode, Reference Manual - *Chapter 7 - Definition of connections.*)
- The tunnel shape is composed of arcs with different radii (e.g. NATM tunnels).

**Table 16: Material properties of the plate representing the TBM**

	Name	TBM	Unit
Type of behaviour	-	Elastic; Isotropic	-
Thickness	d	0.17	m
Material weight	$\gamma$	247	kN / m <sup>3</sup>
Young's modulus	$E_1$	$200 \cdot 10^6$	kN / m <sup>2</sup>
Poisson's ratio	$\nu_{12}$	0	-
Shear modulus	$G_{12}$	$100 \cdot 10^6$	kN / m <sup>2</sup>

**Note:** A tunnel lining consists of curved plates (shells). The lining properties can be specified in the material database for plates. Similarly, a tunnel interface is nothing more than a curved interface.

# Phased excavation of a shield tunnel

## Definition of structural elements

### Create tunnel

In **Structures** mode both the geometry of the tunnel and the TBM will be defined.

1.  Click the **Start designer** button in the side toolbar.
2.  Click the **Create tunnel** button from the list.
3. Click anywhere on the drawing area to define the insertion point. The **Tunnel designer** window pops up.
4. In the **Selection explorer** set the insertion point of the tunnel to (0 0 -13.25)

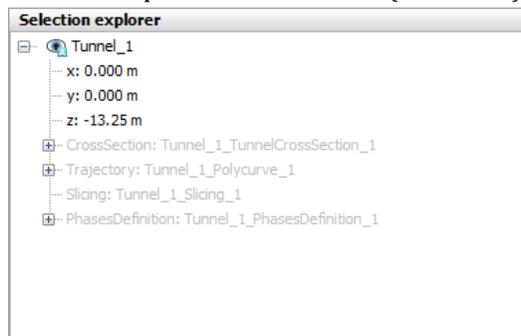


Figure 70: Insertion point of the tunnel

5. In the **General** tabsheet select the *Circular* option in the drop-down menu for the **Shape type**.
6. The left half of the tunnel is generated in this example. Select the **Define left half** option in the drop-down menu for the *Whole or half tunnel*. A screenshot of the **General** tabsheet after the proper assignment is given in [Figure 71: General tabsheet of the Tunnel designer](#) (on page 96).
7. Click the **Segments** tabsheet to proceed to the corresponding tabsheet. A segment is automatically created. A new box is shown under the segment list where the properties of the segment can be defined.
8. In the **Segment** box set *Radius* to 4 m. This is the inner radius of the tunnel.
9. Proceed to the **Subsections** tabsheet.
10. Click the **Generate thick lining** button  in the side toolbar. The **Generate thick lining** window pops up.
11. Assign a value of 0.25 m and click **OK**. A screenshot of the **Cross section** tabsheet after the proper assignment is given in [Figure 72: The Cross section tabsheet of the Tunnel designer](#) (on page 96)
12. Proceed to the **Properties** tabsheet. Here we define the properties for the tunnel such as grout pressure, surface contraction, jack forces and the tunnel face pressure.
13. In the **Slice** tabsheet, right-click the outer surface and select **Create plate** from the appearing menu ([Figure 73: The Properties tabsheet of the Tunnel designer for the creation of a Plate](#) (on page 97)).
14. Click on the **Material** in the lower part of the explorer. Create a new material dataset. Specify the material parameters for the TBM according to [Table 16: Material properties of the plate representing the TBM](#) (on page 94).

# Phased excavation of a shield tunnel

## Definition of structural elements

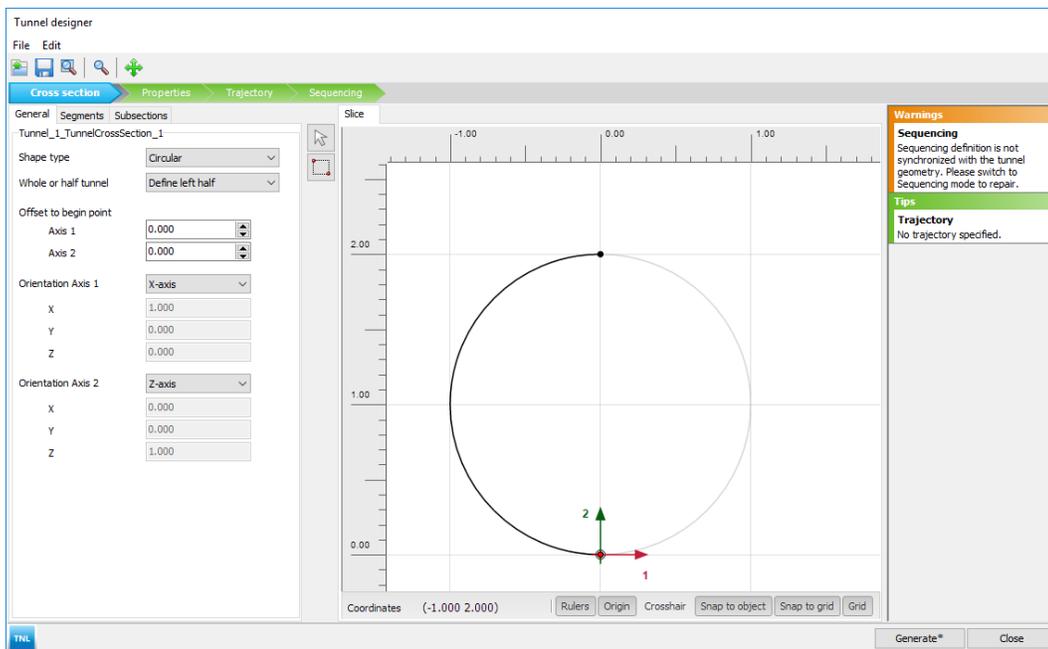


Figure 71: General tabsheet of the Tunnel designer

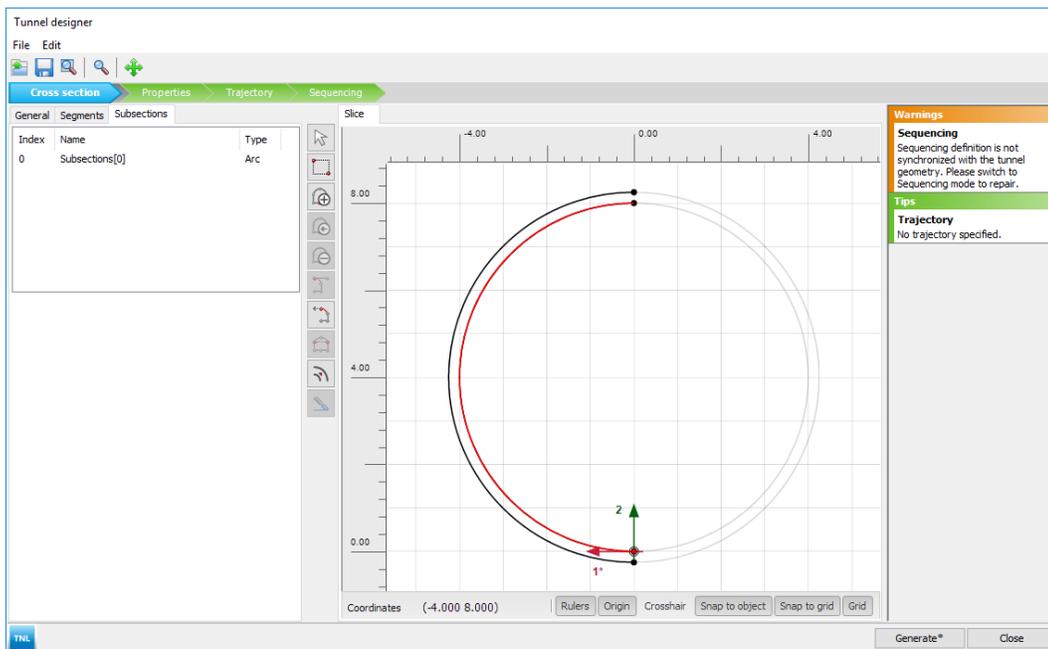


Figure 72: The Cross section tabsheet of the Tunnel designer

# Phased excavation of a shield tunnel

## Definition of structural elements

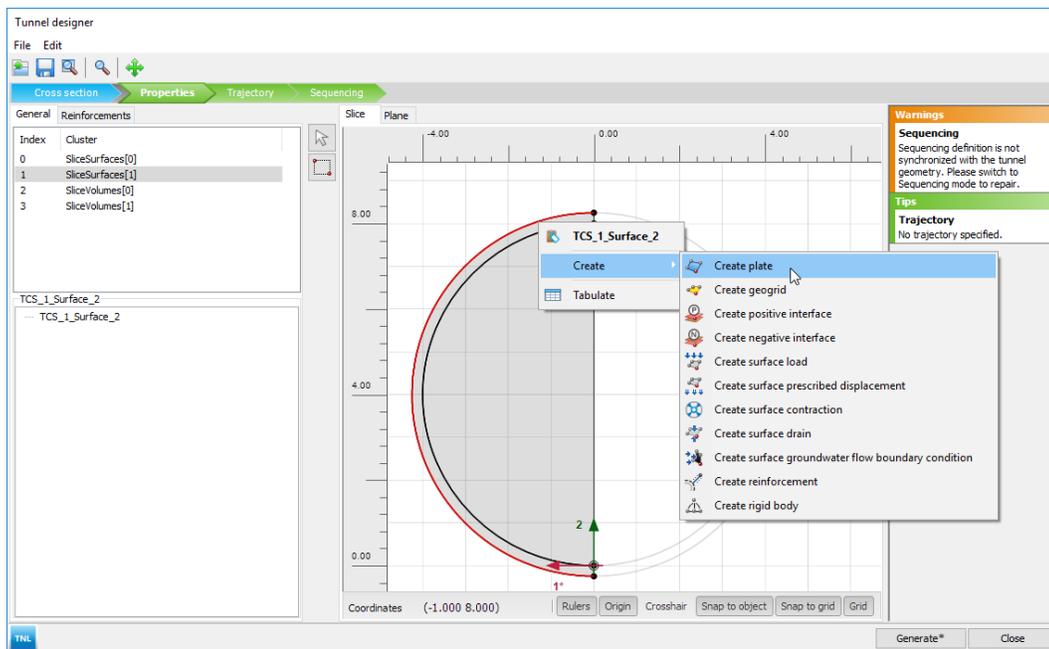


Figure 73: The Properties tabsheet of the Tunnel designer for the creation of a Plate

## Surface contraction

A soil-structure interaction has to be added on the outside of the tunnel due to the slight cone shape of the TBM. Typically, the cross-sectional area at the tail of the TBM is about 0.5% smaller than the front of the TBM. The reduction of the diameter is realised over the first 7.5 m length of the TBM while the last 1.5 m to the tail has a constant diameter. This means that the section tail has a uniform contraction of 0.5% and the remaining 5 sections have a linear contraction with a reference value  $C_{ref} = 0.5\%$  and an increment  $C_{inc,axial} = -0.0667\%$ . The reference is set on the front surface of the excavated slice in the tunnel during the tunnel construction. This is done while setting the Sequencing steps. The  $C_{inc,axial} = -0.0667\%/m$  and remains the same in every step (1\_1 to 1\_5). For further information on **Surface contraction** refer to the Reference Manual.

1. Right-click the same outer surface and select **Create negative interface** from the appearing menu to create a negative surface around the entire tunnel.
2. Next step is to create **Surface contraction** for the tunnel. Right-click the outer surface and select **Create surface contraction**.
3. In the properties box, select the **Axial increment** option for the contraction distribution and define  $C_{ref} = 0.5\%$  and  $C_{inc,axial} = -0.0667\%/m$ . The increment must be a negative number because the contraction decreases in the direction of the positive local  $1$ -axis.

### Note:

- A surface contraction of the tunnel contour of 0.5% corresponds approximately to a volume loss of 0.5% of the tunnel volume (applicable only for small values of surface contractions).
- The entered value of contraction is not always fully applied, depending on the stiffness of the surrounding clusters and objects.

# Phased excavation of a shield tunnel

## Definition of structural elements

### Grout pressure

The surface load representing the grout pressure is constant during the building process. In the specifications of the tunnel boring process, it is given that the grout pressure should be  $-100 \text{ kN/m}^2$  at the top of the tunnel ( $z = -4.75\text{m}$ ) and should increase with  $-20 \text{ kN/m}^2/\text{m}$  depth. To define the grout pressure:

1. Right-click the outer surface and select **Create surface load** from the appearing menu to create a surface load around the entire tunnel.
2. In the properties box, select **Perpendicular, vertical increment** from the drop-down menu for *Distribution*.
3. Set the  $\sigma_{n,ref}$  to  $-100$  and  $\sigma_{n,inc}$  to  $-20$  and define  $(0 \ 0 \ -4.75)$  as the reference point for the load by assigning the values to  $x_{ref}$ ,  $y_{ref}$  and  $z_{ref}$  ([Figure 74: Slice tabsheet in the Tunnel designer](#) (on page 98))

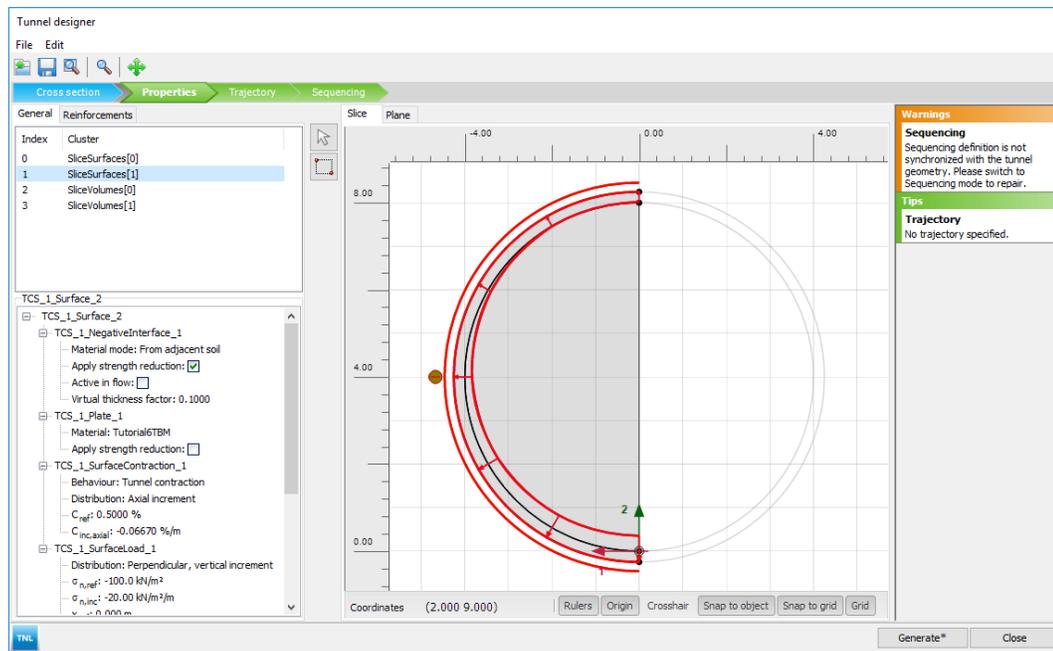


Figure 74: Slice tabsheet in the Tunnel designer

### Tunnel face pressures

The tunnel face pressure is a bentonite pressure (Bentonite Slurry, BS) or an earth pressure (Earth Pressure Balance, EPB) that increases linearly with depth. For the initial position of the TBM and the successive four positions when simulating the advancement of the TBM, a tunnel face pressure has to be defined.

1. Select the **Plane** tabsheet above the displayed tunnel cross section.
2. Multi-click both the surfaces, right-click and select **Create surface load** from the appearing menu to create a surface load around the entire tunnel.
3. In the properties box, select **Perpendicular, vertical increment** from the drop-down menu for *Distribution*.
4. Set the  $\sigma_{n,ref}$  to  $-90$  and  $\sigma_{n,inc}$  to  $-14$  and define  $(0 \ 0 \ -4.75)$  as the reference point for the load by assigning the values to  $x_{ref}$ ,  $y_{ref}$  and  $z_{ref}$  ([Figure 75: Plane tabsheet in the Tunnel designer](#) (on page 99))

# Phased excavation of a shield tunnel

## Definition of structural elements

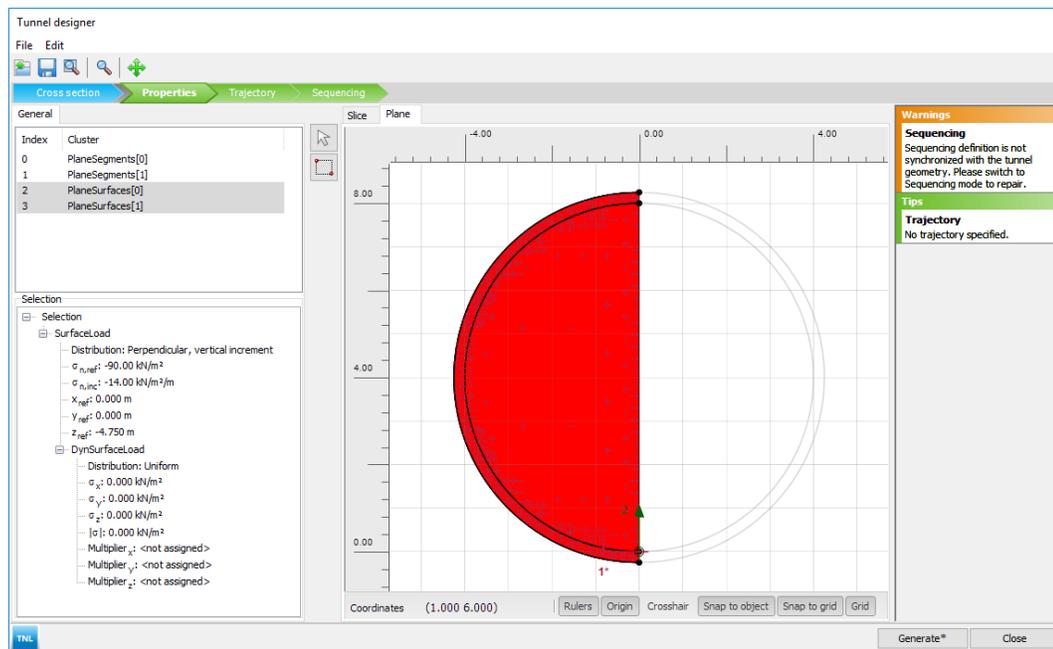


Figure 75: Plane tabsheet in the **Tunnel designer**

## Jack forces

In order to move forward during the boring process, the TBM has to push itself against the existing tunnel lining. This is done by hydraulic jacks. The force applied by the jacks on the final tunnel lining has to be taken into account. This will be assigned to the tunnel lining in **Sequencing** tab.

## Trajectory

The next step is to create the path of the boring process. The TBM already advanced 25m into the soil and then proceeds from 25m to 41.5m excavating slices of 1.5m each:

1. Click the **Trajectory** tab to proceed to the corresponding tabsheet.
2.  In the **Segments** tabsheet, click on the **Add segment** on the left toolbar.
3. In the properties box set the length to 25.
4. Add the next segment and set the length to 16.5.
5. To create the slices, proceed to the **Slices** tabsheet.
6. Click on the second created segment. In the properties box, select *Length* as the **Slicing method** and set the **Slice length** as 1.5m ([Figure 76: Trajectory tabsheet in the Tunnel designer](#) (on page 100)).

# Phased excavation of a shield tunnel

## Definition of structural elements

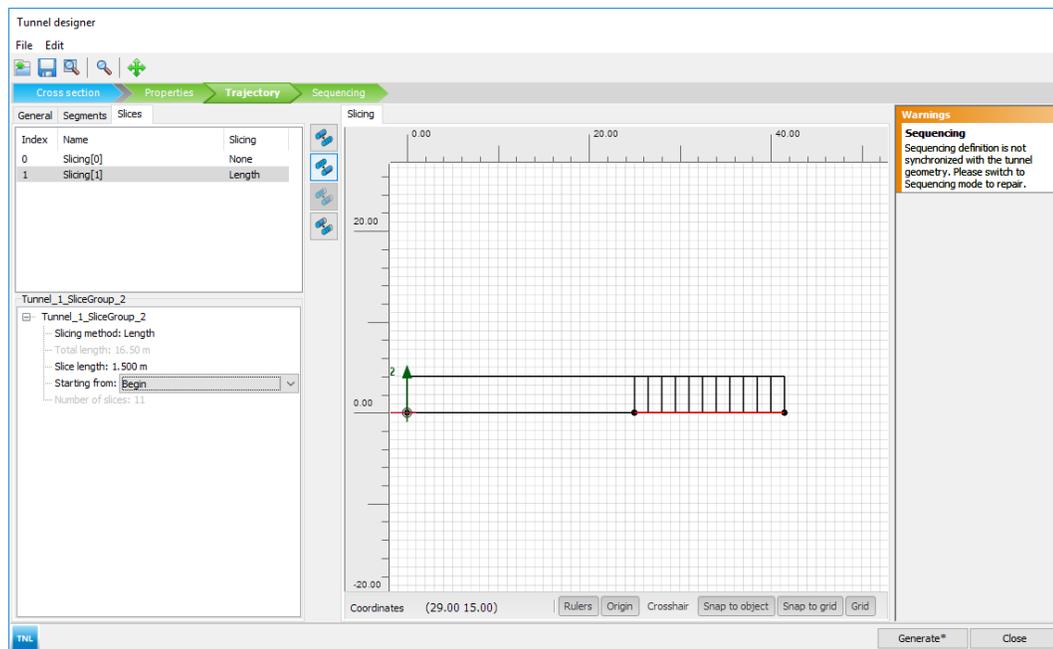


Figure 76: Trajectory tabsheet in the **Tunnel designer**

## Sequencing

In order to simplify the definition of the phases in **Staged construction** mode, the sequencing of the tunnel is defined. The soil in front of the TBM will be excavated, a support pressure will be applied to the tunnel face, the TBM shield will be activated and the conicity of the shield will be modelled, at the back of the TBM the pressure due to the back fill grouting will be modelled as well as the force the hydraulic jacks driving the TBM exert on the already installed lining, and a new lining ring will be installed.

1. Click the **Sequencing** tab to proceed to the corresponding tabsheet.
2. In the **Sequencing** tabsheet, set the **Excavation method** as **TBM**.

a.  **<Step\_1\_1, face excavation>**

Select the **Slice** tabsheet above the displayed tunnel cross section and select the volumes inside the tunnel. In the **Selection explorer**, deactivate the soil and set the **WaterConditions** to **Dry**.

In the **Slice** tabsheet as well, select the outer surface. In the **Selection explorer**, activate the negative interface, the plate and the surface contraction ([Figure 77: Slice tabsheet in the Tunnel designer for Step\\_1\\_1](#) (on page 101)).

Set  $C_{ref} = 0\%$  for the surface contraction (since this is on the front of the excavation).

Go to the **Plane Front** tabsheet and select all the surfaces. Activate the surface load corresponding to the face pressure ([Figure 78: Plane Front tabsheet in the Tunnel designer for Step\\_1\\_1](#) (on page 101))

# Phased excavation of a shield tunnel

## Definition of structural elements

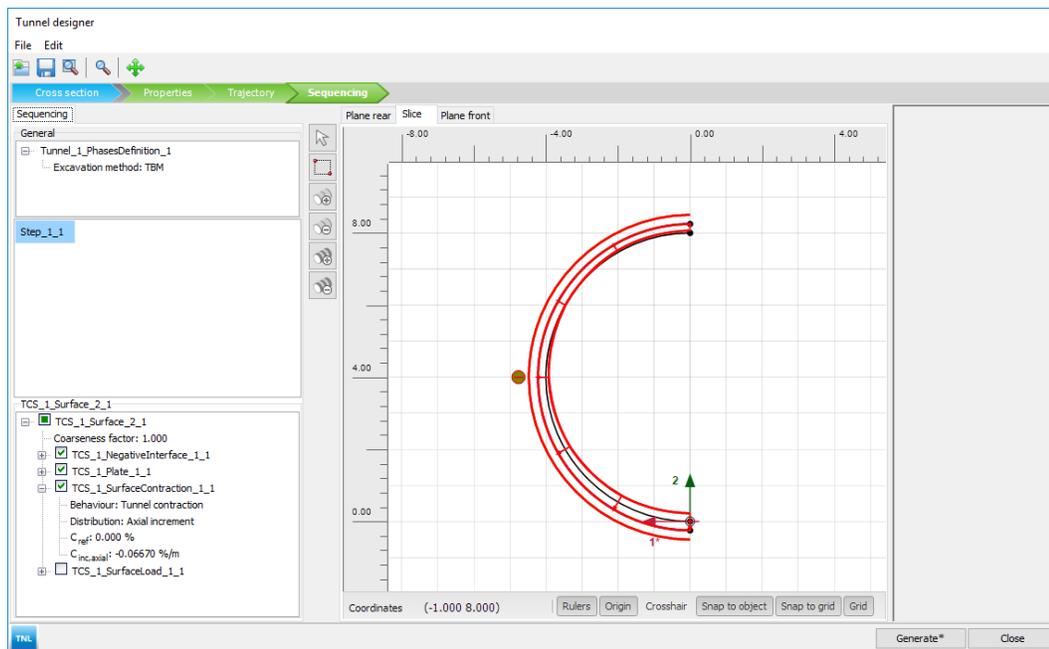


Figure 77: Slice tabsheet in the **Tunnel designer** for Step\_1\_1

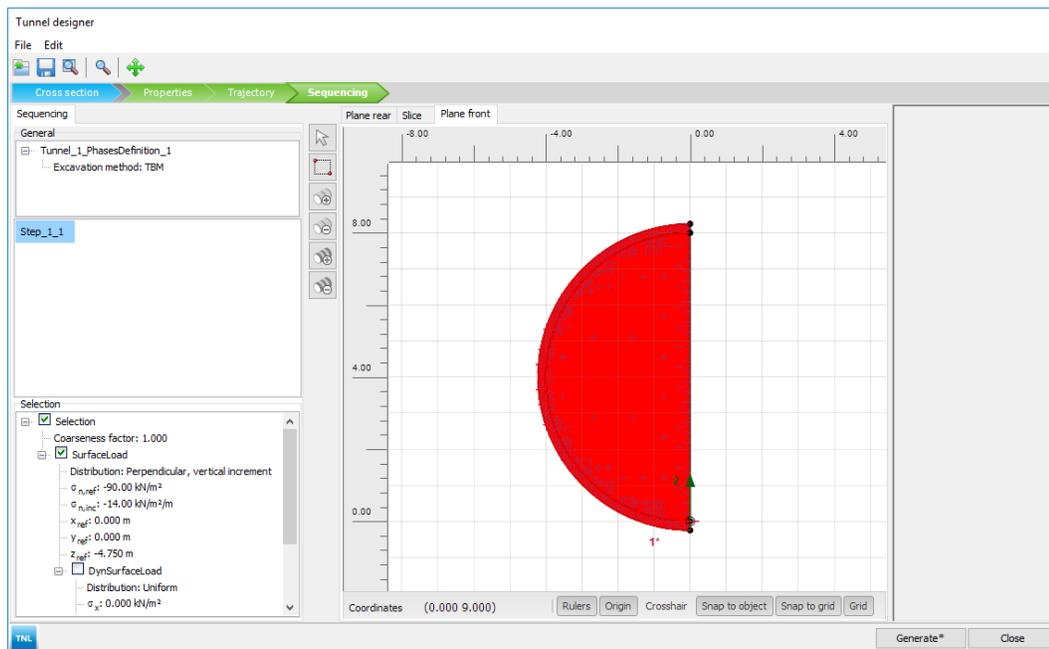


Figure 78: Plane Front tabsheet in the **Tunnel designer** for Step\_1\_1

b.  <Step\_1\_2, TBM with conicity>

Click on the **Add Step** to add a new step. The difference with the front of the TBM is only the face pressure.

## Phased excavation of a shield tunnel

### Definition of structural elements

Go to the **Plane Front** tabsheet and select all the surfaces. In the **Selection explorer**, the surface load corresponding to the face pressure is deactivated by default.

Go to the **Slice** tabsheet, select the outer surface and set  $C_{ref} = 0.1\%$ , see [Figure 79: Slice tabsheet in the Tunnel designer for Step\\_1\\_2](#) (on page 102).

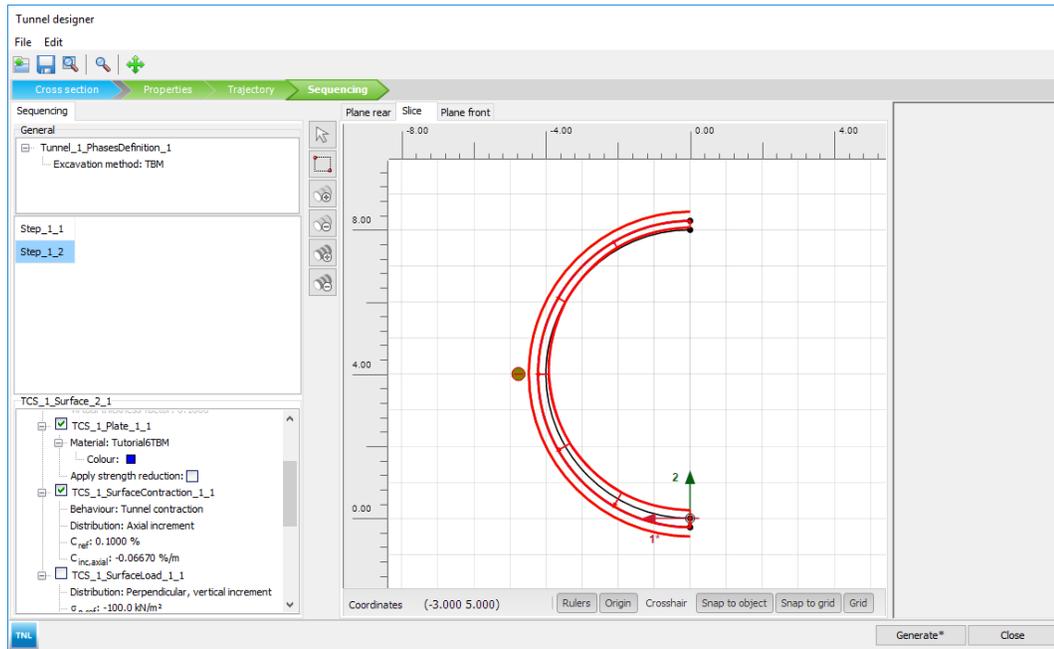


Figure 79: Slice tabsheet in the **Tunnel designer** for Step\_1\_2

### C. <Step\_1\_3 to Step\_1\_5, TBM with conicity>

Click on the **Add Step** button three times to add three new steps. These steps are necessary to define the remaining cone part of the TBM shield ([Figure 80: Slice tabsheet in the Tunnel designer from Step\\_1\\_3 to Step\\_1\\_5](#) (on page 103)).

For each step go to the **Slice** tabsheet, select the outer surface and set the following values for the surface contraction in the **Selection explorer**:

Step\_1\_3:  $C_{ref} = 0.2\%$

Step\_1\_4:  $C_{ref} = 0.3\%$

Step\_1\_5:  $C_{ref} = 0.4\%$ , see [Figure 80: Slice tabsheet in the Tunnel designer from Step\\_1\\_3 to Step\\_1\\_5](#) (on page 103)

# Phased excavation of a shield tunnel

## Definition of structural elements

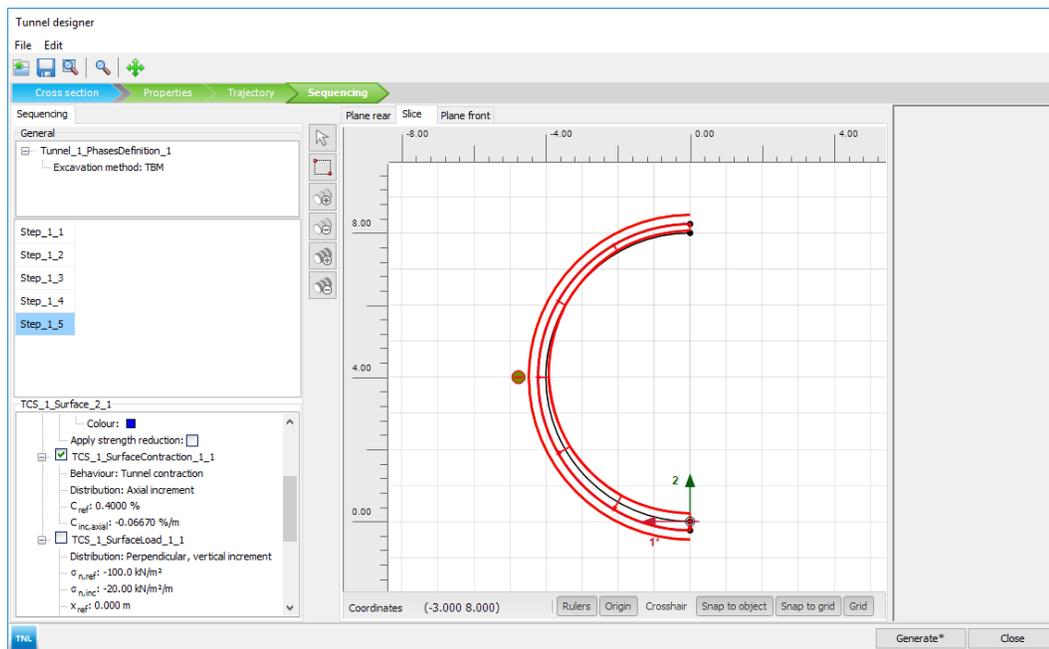


Figure 80: Slice tabsheet in the **Tunnel designer** from Step\_1\_3 to Step\_1\_5

d.  <Step\_1\_6, tail of the shield>

The last slice of the shield has a constant diameter. From the **Slice** tabsheet select the outer surface and select the surface contraction.

In the **Selection explorer** select the *Uniform* option with  $C_{ref} = 0.5\%$  ([Figure 81: Slice tabsheet in the Tunnel designer for Step\\_1\\_6](#) (on page 104)).

# Phased excavation of a shield tunnel

## Definition of structural elements

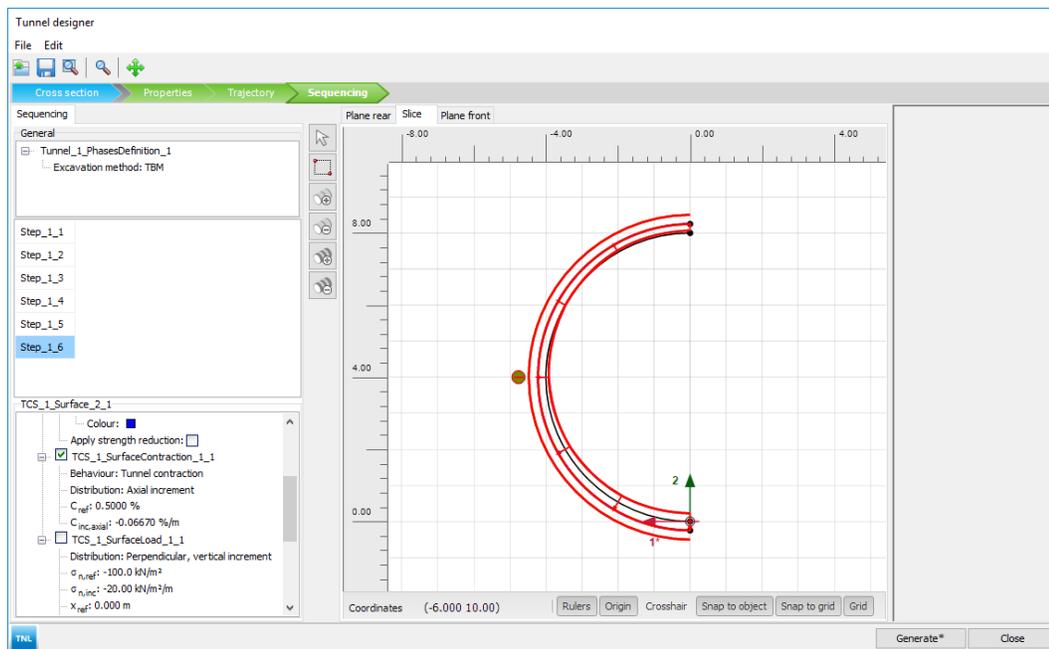


Figure 81: Slice tabsheet in the **Tunnel designer** for Step\_1\_6

e.  <Step\_1\_7, grouting and jack thrusting>

Select the **Slice** tabsheet and select the outer surface.

Deactivate the negative interface, the plate and the surface contraction.

In the **Selection explorer**, activate the surface load corresponding to the grout pressure ([Figure 82: Slice tabsheet in the Tunnel designer Step\\_1\\_7](#) (on page 105)).

Select the **Plane rear** tabsheet and select the outer surface to define the jack thrusting against the final lining.

In the **Selection explorer**, activate the surface load and select the *Perpendicular* option for the distribution with  $\sigma_{n,ref} = 635.4 \text{ kN/m}^2$  ([Figure 83: Plane Rear tabsheet in the Tunnel designer Step\\_1\\_7](#) (on page 105))

# Phased excavation of a shield tunnel

## Definition of structural elements

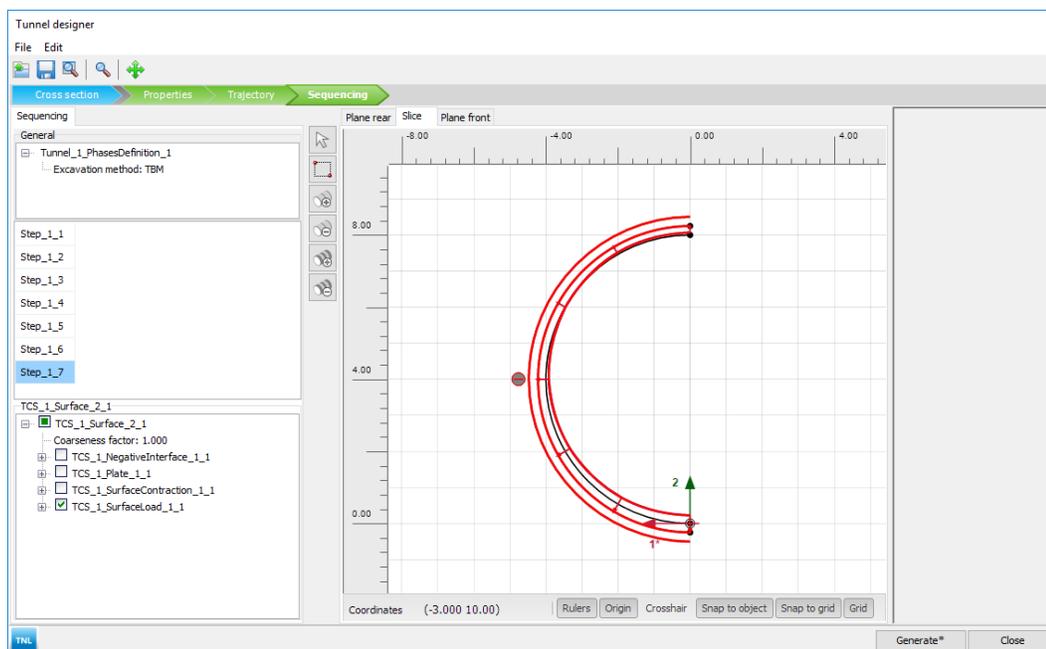


Figure 82: Slice tabsheet in the **Tunnel designer** Step\_1\_7

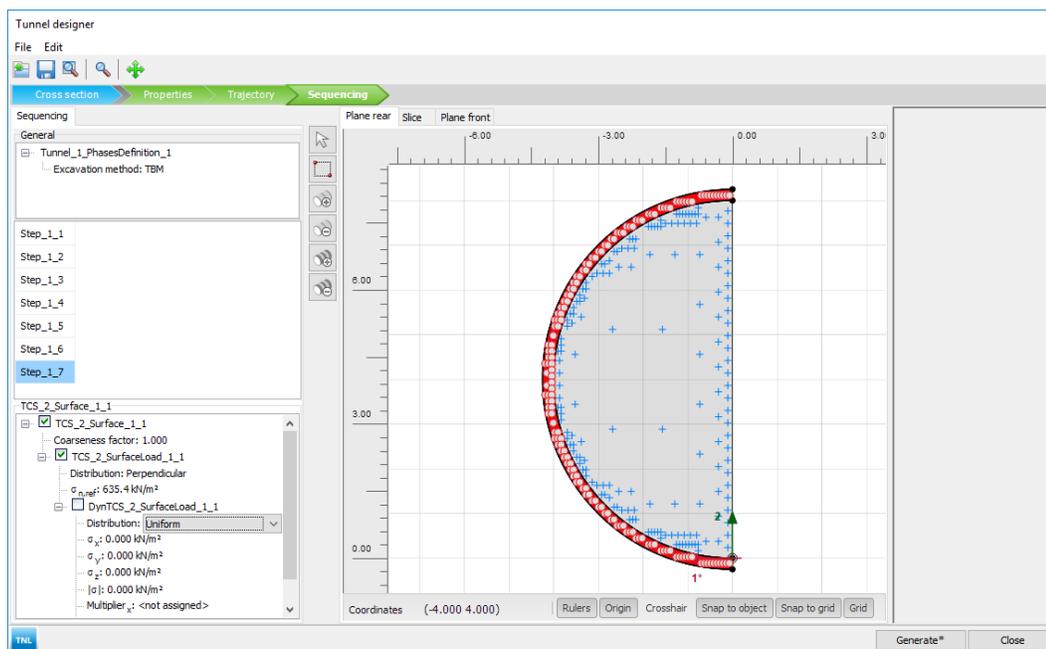


Figure 83: Plane Rear tabsheet in the **Tunnel designer** Step\_1\_7

f.  <Step\_1\_8, final lining>

Select the **Slice** tabsheet and select the outer surface.

In the **Selection explorer**, deactivate the grout pressure and activate the negative interface.

# Phased excavation of a shield tunnel

## Definition of structural elements

In the **Slice** tabsheet again, select the outer volume. Activate it, click the material and select the *Concrete* option from the drop-down menu ([Figure 84: Slice tabsheet in the Tunnel designer Step\\_1\\_8](#) (on page 106)).

Select the **Plane rear** tabsheet and select the outer surface.

In the **Selection explorer**, deactivate the surface load corresponding to the thrusting jacks ([Figure 84: Slice tabsheet in the Tunnel designer Step\\_1\\_8](#) (on page 106))

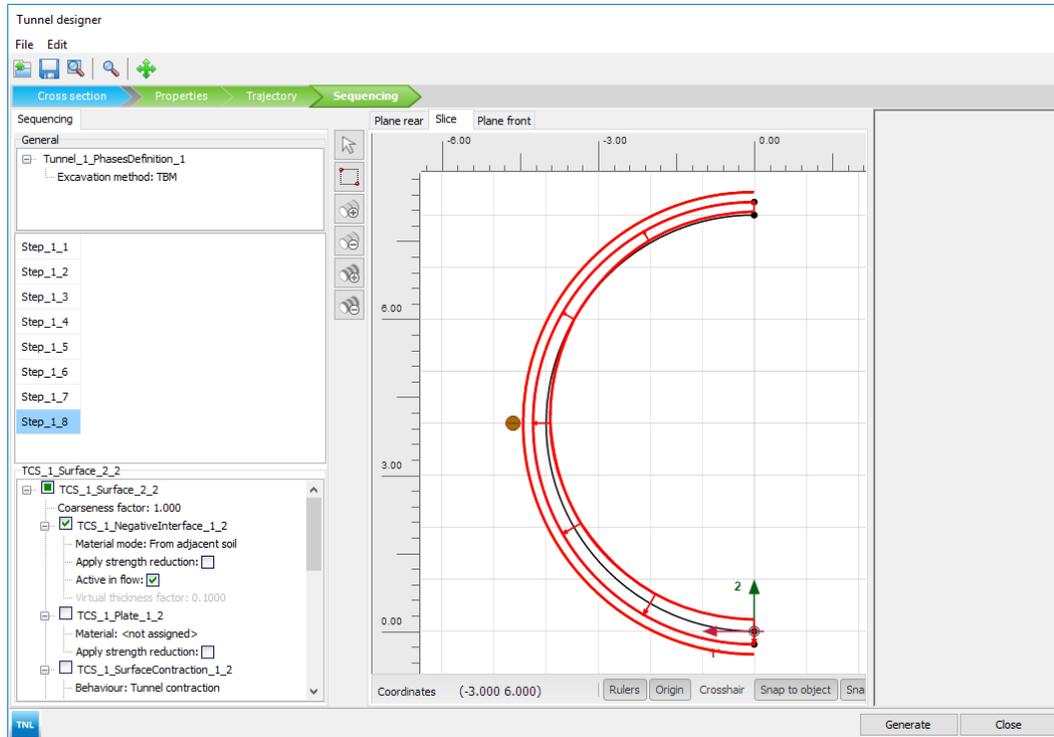


Figure 84: Slice tabsheet in the **Tunnel designer Step\_1\_8**

# Phased excavation of a shield tunnel

## Definition of structural elements

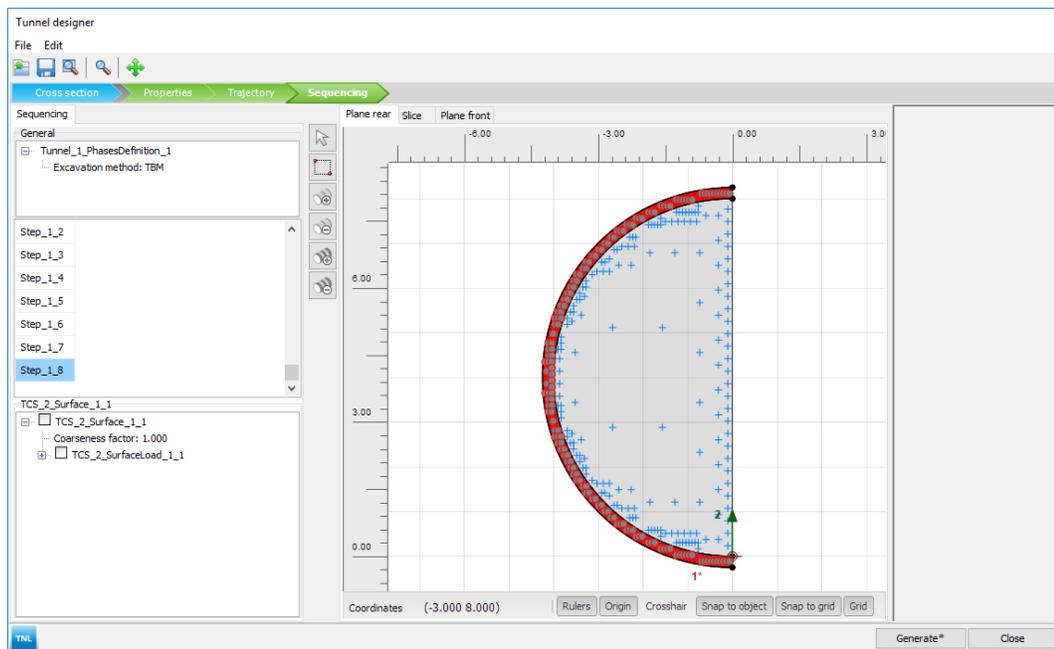


Figure 85: Plane rear tabsheet in the **Tunnel designer** Step\_1\_8

**Note:** For the steps Step1\_1 to Step1\_5 keep in mind that the contraction increment  $C_{inc,axial}$  has to be -0.0667%.

3. Click on **Generate** to include the defined tunnel in the model.
4. To create the slices, proceed to the **Slices** tabsheet.
5. Close the **Tunnel designer** window.

This concludes the model creation in **Structures** mode ([Figure 86: The created tunnels in Structures mode](#) (on page 107)).

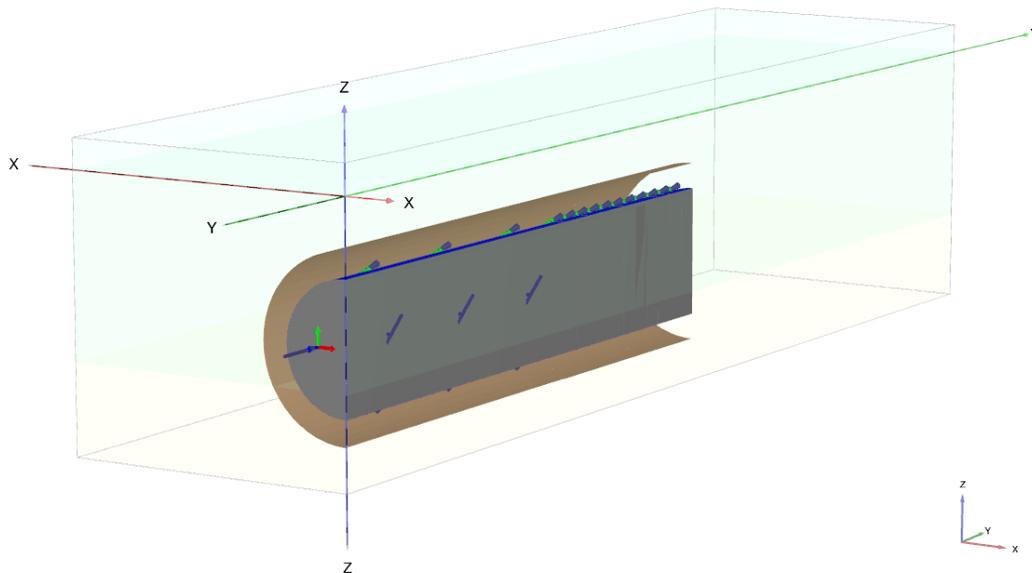


Figure 86: The created tunnels in Structures mode

## Phased excavation of a shield tunnel


Generate the mesh

---

### Generate the mesh

In the **Mesh** mode it is possible to specify global and local refinements and generate the mesh. The default local refinements are valid for this example.

1.  Click the **Generate mesh** button in order to generate the mesh. The **Mesh options** window appears. The default option (*Medium*) will be used to generate the mesh.
2.  Click the **View mesh** button to inspect the generated mesh ([Figure 87: The generated mesh](#) (on page 108)).

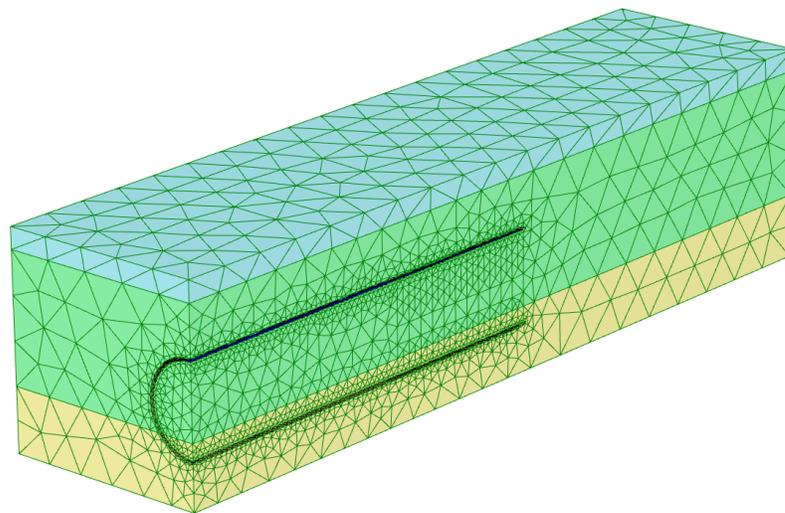

*Figure 87: The generated mesh*

After inspecting the mesh, the output window can be closed. Mesh generation has now been finished, and so creating all necessary input for defining the calculation phases has been finished.

### Define and perform the calculation

The excavation of the soil and the construction of the tunnel lining will be modelled in the **Staged construction** mode. Since water levels will remain constant the **Flow conditions** mode can be skipped. It should be noted that due to the mesh generation the tunnel effectively has been split into an upper part, located in the clay, and a lower part located in the stiff sand. As a result, both the lower and the upper part of the tunnel should be considered.

The first phase differs from the following phases, as in this phase the tunnel is activated for the first time. This phase will model a tunnel that has already advanced 25 m into the soil. Subsequent phases will model an advancement by 1.5 m each.

# Phased excavation of a shield tunnel

Define and perform the calculation

## Initial phase

The initial phase consists of the generation of the initial stresses using the  $K_0$  procedure. The default settings for the initial phase are valid.

## Phase 1: Initial position of the TBM

In the first phase, it is assumed that the TBM has already advanced 25 m. The section next to the first 25 m (section 25 m - 26.5 m), will represent the area directly behind the TBM where grout is injected in the tail void. In the next 6 sections (26.5 m - 35.5 m) the TBM will be modelled.

1.  Add the first calculation phase
2. In the **Model explorer** expand *Tunnels* and then expand *Tunnel\_1*. Scroll down the *Model explorer* until the option *Advancement step* and set it to 7 in order to simulate the advancement of the first 25 m. The final lining will be activated in the following phase. In order to consider the conicity of the TBM in the first 25 m, the clusters representing final lining need to be deactivated, the plates representing the TBM are activated and 0.5% contraction is applied.
3. Select the right view to reorientate the model in order to obtain a clearer view of the inside of the tunnel.
4. In the drawing area select the soil volumes corresponding to the lining in the first 25 m ([Figure 88: Selection of soil volumes \(0 m - 25 m\)](#) (on page 109))

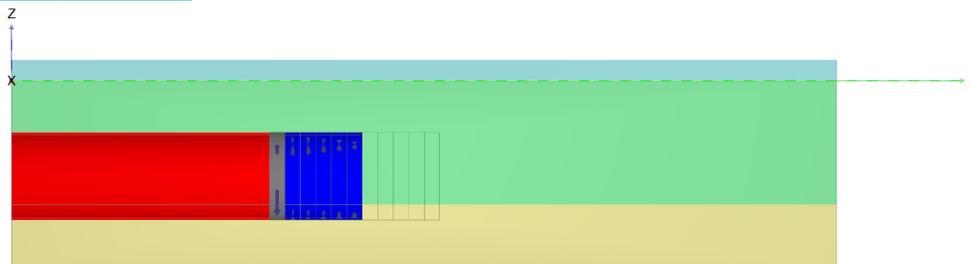


Figure 88: Selection of soil volumes (0 m - 25 m)

5. In the **Selection explorer** deactivate the soil. The soil is switched off, but the wireframe representing the deactivated soil is still coloured red as the deactivated soil is still selected.

**Note:** An object that is deactivated will automatically be hidden as a volume or surface, but a wireframe representing the hidden object will remain. The visibility of the object not active in a calculation phase can be defined in the corresponding tabsheet of the **Visualization settings** window (SECTION of the REFERENCE MANUAL)

6. The interface is already activated. To activate the plate and the contraction in the first 25 m of the tunnel:
  - a. Select the **Select plates** option in the appearing menu. Select the surfaces between 0 m and 25 m in the model to which plates are assigned ([Figure 89: Selection of plate \(0 m - 25 m\)](#) (on page 110))
  - b. In the **Selection explorer** activate plate and uniform contraction by checking the corresponding boxes.
  - c. In the drawing area select the lateral surfaces of the outer volume, corresponding to the last slice of the TBM (grout and jack thrusting) at 25.0 m ([Figure 90: Selection of soil surfaces \(25.0 m\)](#) (on page 110)). In the **Selection explorer**, deactivate the surface load corresponding to the jack thrusting, because the TBM is only placed in this phase and it's not moving.

## Phased excavation of a shield tunnel

Define and perform the calculation

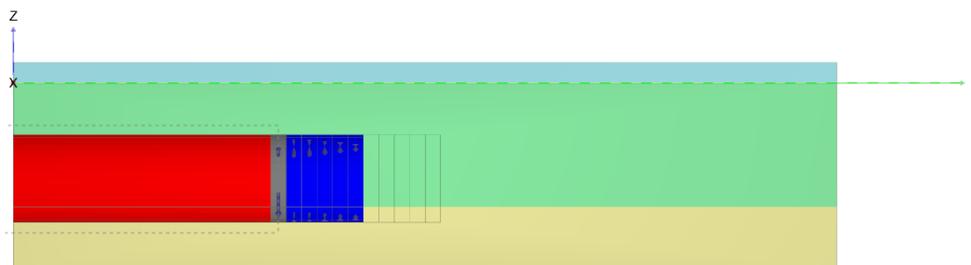


Figure 89: Selection of plate (0 m - 25 m)

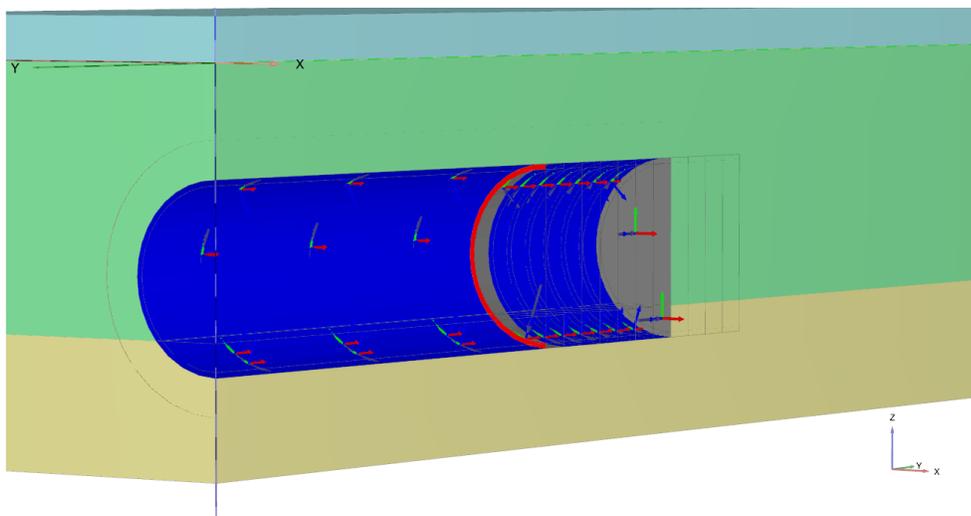


Figure 90: Selection of soil surfaces (25.0 m)

7.  Click the **Preview** button to get a preview of everything that has been defined ([Figure 91: Preview of the Phase 1](#) (on page 110)). Make sure that both grout pressure and tunnel face pressure are applied and that both increase from top to bottom.

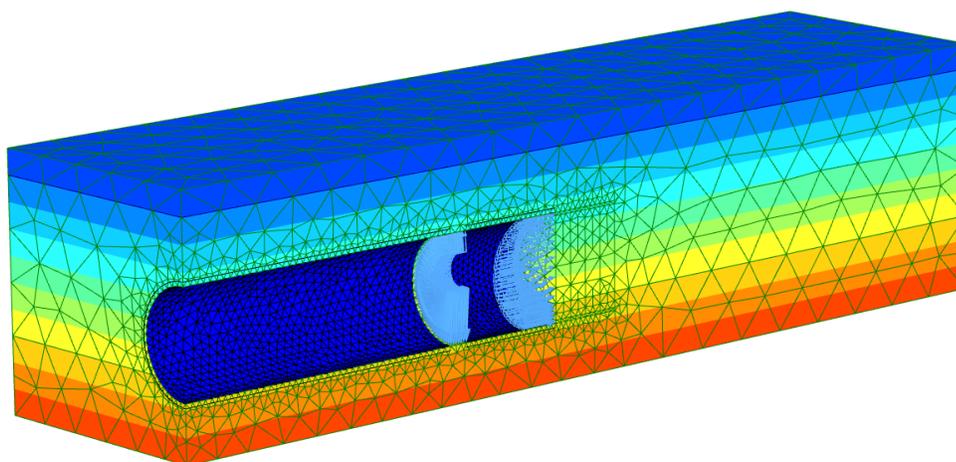


Figure 91: Preview of the Phase 1

## Phased excavation of a shield tunnel

Define and perform the calculation

### Phase 2: TBM advancement 1

In this phase, the advancement of the TBM by 1.5 m (from  $y = 35.5$  to  $y = 37$ ) will be modelled.

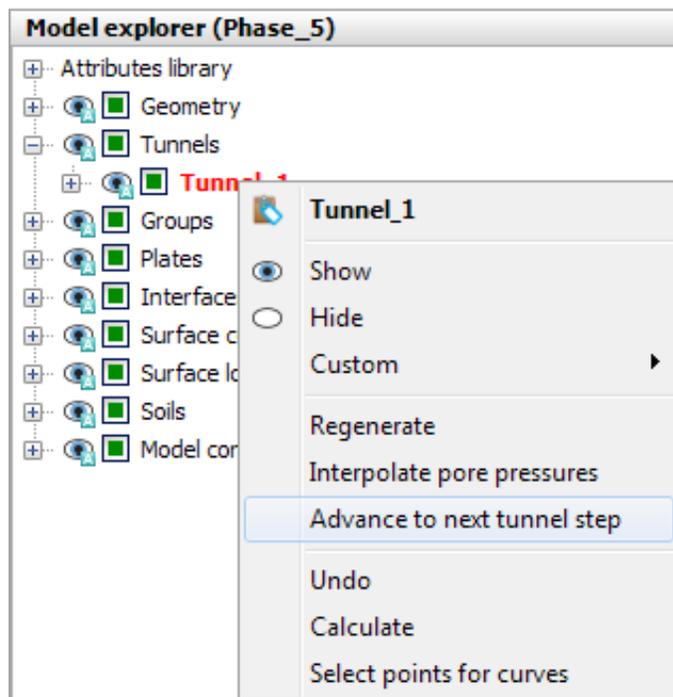


Figure 92: The Advance to next tunnel step option from Model explorer

1.  Add a new phase
2. In the **Model explorer** expand *Tunnels* and then expand *Tunnel\_1*. Scroll down the *Model explorer* until the option **Advancement step** and set it to 8 in order to simulate the advancement of the first 26.5 m.

### Phase 3: TBM advancement 2

In this phase, the TBM advances from  $y = 37$  to  $y = 38.5$ .

1.  Add a new phase
2. In the **Model explorer** expand *Tunnels* and right-click *Tunnel\_1*. Then click on **Advance to next tunnel step**.

### Phase 4: TBM advancement 3

In this phase, the TBM advances from  $y = 38.5$  to  $y = 40$ .

1.  Add a new phase
2. In the **Model explorer** expand *Tunnels* and right-click *Tunnel\_1*. Then click on **Advance to next tunnel step**.

## Phased excavation of a shield tunnel

### Results

---

#### Phase 5: TBM advancement 4

In this phase, the final advancement of the TBM is modelled (from  $y = 40$  to  $y = 41.5$ ).

1.  Add a new phase
2. In the **Model explorer** expand *Tunnels* and right-click *Tunnel\_1*. Then click on **Advance to next tunnel step**.
3. Press the **Calculate** button to start the calculation. Ignore the message "No nodes or stress points selected for curves" as any load-displacement curves are drawn in this example, and start the calculation.

## Results

Once the calculation has been completed, the results can be evaluated in the Output program. In the Output program the displacement and stresses are shown in the full 3D model, but the computational results are also available in tabular form. To view the results for the current analysis, follow these steps:

1. Select the last calculation phase (Phase 5) in the *Phases explorer*
2.  Click the **View calculation results** button in the side toolbar to open the *Output* program. The Output program will by default show the 3D deformed mesh at the end of the selected calculation phase.
3. From the *Deformations* menu, select *Total displacements* and then  $u_z$  in order to see the total vertical displacements in the model as a shaded plot ([Figure 93: Total vertical displacements after the final phase  \$u\_z \approx 3.1\$  cm](#) (on page 113))

In order to see the settlements at ground level make a horizontal cross section by choosing the *Horizontal cross section* button. In the window that appears fill in a cross section height of 1.95 m. The window with the cross section opens ([Figure 94: Settlement trough at ground level  \$|u| \approx 1.9\$  cm](#) (on page 113)). The maximum settlement at ground level is about 1.9 cm.

# Phased excavation of a shield tunnel

Results

---

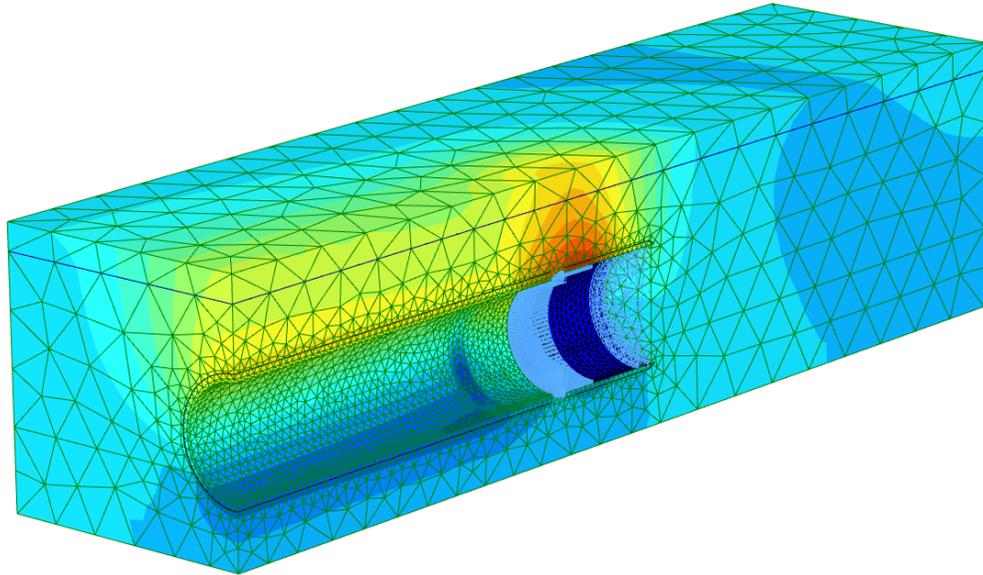


Figure 93: Total vertical displacements after the final phase  $u_z \approx 3.1\text{cm}$

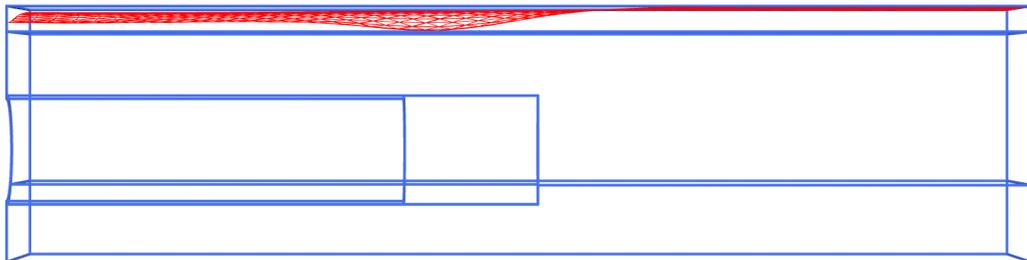


Figure 94: Settlement trough at ground level  $|u| \approx 1.9\text{cm}$

This example concerns the stability of a reservoir dam under conditions of drawdown. Fast reduction of the reservoir level may lead to instability of the dam due to high pore water pressures that remain inside the dam. The dam consists of a clay core with a well graded fill at both sides. The subsoil consists of overconsolidated silty sand.

## Objectives

- Performing fully coupled flow deformation analysis
- Defining time-dependent hydraulic conditions
- Using unsaturated flow parameters

## Geometry

The dam to be considered is 30 m high. The top width and the base width of the dam are 5 m and 172.5 m respectively. The geometry of the dam is depicted below. The normal water level behind the dam is 25 m high. A situation is considered where the water level drops 20 m. The normal phreatic level at the right hand side of the dam is 10 m below ground surface.

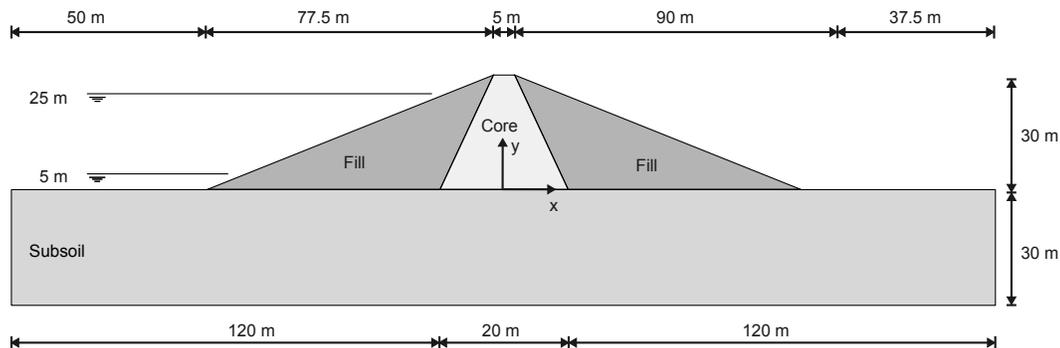


Figure 95: Geometry of the project

## Define the geometry

Assuming the dam is located in a wide valley, a representative length of 50 m is considered in the model in order to decrease the model size.

To create the geometry model, follow these steps:

1. Start the Input program and select **Start a new project** from the **Quick select** dialog box.
2. In the **Project properties** window, enter an appropriate title.
3. Keep the default units and set the model dimensions to:
  - a.  $x_{\min} = -130.0$  m,  $x_{\max} = 130.0$  m
  - b.  $y_{\min} = 0$  m and  $y_{\max} = 50.0$  m

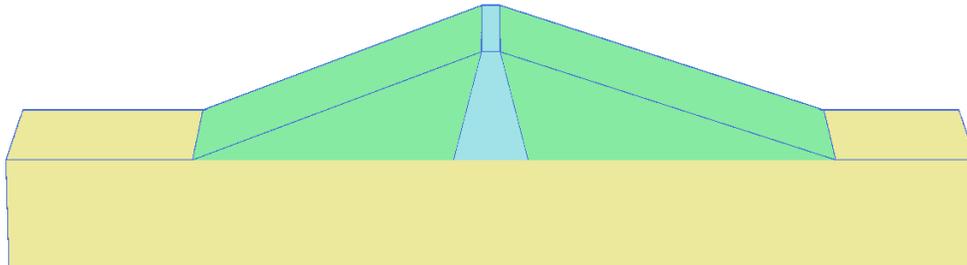


Figure 96: The geometry of the model

## Define the soil stratigraphy

In order to define the underlying foundation soil, a borehole needs to be added and material properties must be assigned. A layer of 30 m overconsolidated silty sand is considered as sub-soil in the model.

1.  Create a borehole at (0.0 0.0).  
The **Modify soil layers** window pops up.
2. Add a soil layer extending from ground surface ( $z = 0$ ) to a depth of 30 m ( $z = -30$ ).
3. Set the **Head** in the borehole to -10 m. A horizontal water level will be automatically generated. This water level in combination with surface groundwater flow boundary conditions will be used in the **Fully coupled flow deformation** analyses.

## Create and assign material data sets

Three material data sets need to be created for the soil layers.

The layers have the following properties:

Table 17: Material properties of the dam and subsoil

Parameter	Name	Core	Fill	Subsoil	Unit
General					
Material model	Model	Mohr-Coulomb	Mohr-Coulomb	Mohr-Coulomb	-
Draining type	Type	Undrained (B)	Drained	Drained	-

## Rapid drawdown analysis

Create and assign material data sets

Parameter	Name	Core	Fill	Subsoil	Unit
Soil unit weight above phreatic level	$\gamma_{\text{unsat}}$	16.0	16.0	17.0	kN/m <sup>3</sup>
Soil unit weight below phreatic level	$\gamma_{\text{sat}}$	18.0	20.0	21.0	kN/m <sup>3</sup>
Parameters					
Young's modulus	$E'$	$1.5 \cdot 10^3$	$2.0 \cdot 10^4$	$5.0 \cdot 10^4$	kN/m <sup>2</sup>
Poisson's ratio	$\nu_{\text{ur}}'$	0.35	0.33	0.3	-
Cohesion	$c_{\text{ref}}'$	-	5.0	1.0	kN/m <sup>2</sup>
Undrained shear strength	$s_{\text{u,ref}}$	5.0	-	-	kN/m <sup>2</sup>
Friction angle	$\varphi'$	-	31	35.0	°
Dilatancy angle	$\psi$	-	1.0	5.0	°
Young's modulus inc.	$E_{\text{inc}}'$	300	-	-	kN/m <sup>2</sup> /m
Reference level	$z_{\text{ref}}$	30	-	-	m
Undrained shear strength inc.	$s_{\text{u,inc}}$	3.0	-	-	kN/m <sup>2</sup>
Groundwater					
Flow data set	Model	Hypres	Hypres	Hypres	-
Model	-	Van Genuchten	Van Genuchten	Van Genuchten	-
Soil	-	Subsoil	Subsoil	Subsoil	-
Soil coarseness	-	Very fine	Coarse	Coarse	-
Permeability in horizontal direction	$k_x$	$1.0 \cdot 10^{-4}$	0.25	0.01	m/day
Permeability in horizontal direction	$k_y$	$1.0 \cdot 10^{-4}$	0.25	0.01	m/day

Parameter	Name	Core	Fill	Subsoil	Unit
Permeability in vertical direction	$k_z$	$1.0 \cdot 10^{-4}$	0.25	0.01	m/day

To create the material sets, follow these steps:

-  Open the **Material sets** window.
- Create data sets under **Soil and interfaces** set type according to the information given in [Table 17: Material properties of the dam and subsoil](#) (on page 115). Note that the **Interfaces** and **Initial** tabsheets are not relevant (no interfaces or **K0 procedure** used).
- Assign the **Subsoil** material dataset to the soil layer in the borehole.

## Define the dam

The dam will be defined in the **Structures** mode.

The surface groundwater boundary conditions are defined in the table below:

**Table 18: Surface groundwater flow boundary conditions**

Surface	Points
1	(-130 0 0), (-80 0 0), (-80 50 0), (-130 50 0)
2	(-80 0 0), (-2.5 0 30), (-2.5 50 30), (-80 50 0)
3	(-130 0 0), (-130 0 -30), (-130 50 -30), (-130 50 0)

-  Define a surface by specifying points located at (-80 0 0), (92.5 0 0), (2.5 0 30) and (-2.5 0 30).
-  Define a surface by specifying points located at (-10 0 0), (10 0 0), (2.5 0 30) and (-2.5 0 30).
- Multi-select the created surfaces and right-click on the drawing area. Select the **Intersect and recluster** menu item.
- Multi-select the surfaces and extrude along (0 50.0 0) The volumes representing the dam are generated.
- Delete the surfaces used to create the soil volumes.
- Assign the corresponding material data sets to the soil volumes.
-  Time dependent conditions can be assigned to surface groundwater flow boundary conditions. Define surface groundwater flow boundary conditions (under the **Create hydraulic conditions** tool) according to the information in [Table 18: Surface groundwater flow boundary conditions](#) (on page 117).

## Generate the mesh

For the generation of the mesh it is advisable to set the **Element distribution** parameter to **Fine**.

To modify the global coarseness:

1.  Click the **Generate mesh** button in the side toolbar. The **Mesh options** window is displayed.
2. Select the **Fine** option from the **Element distribution** drop-down:

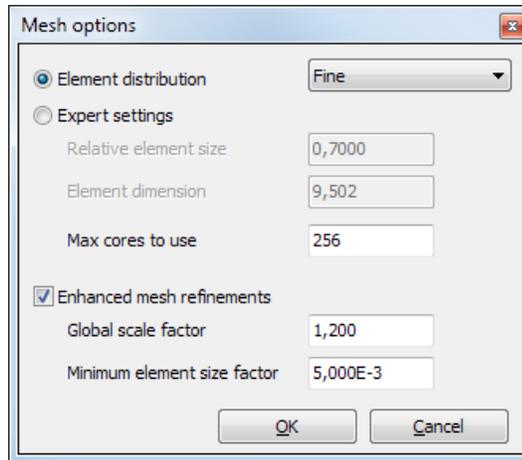


Figure 97: Modification of the Global coarseness

3. Click **OK** to close the **Mesh options** window and to generate the mesh.
4.  Click the **View mesh** button in the side toolbar to preview the mesh. The resulting mesh is displayed:

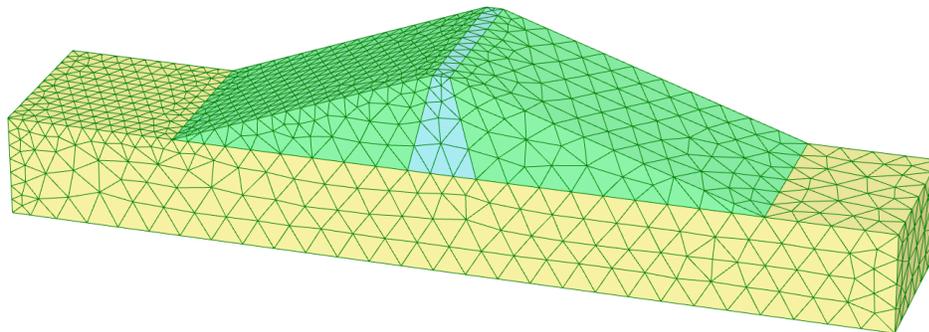


Figure 98: The generated mesh

## Define and perform the calculation

In the calculation process the initial state (high reservoir), the rapid drawdown case, the slow drawdown case and finally the low water level case will be considered. A safety analysis will be performed for each of the cases.

**Table 19: Water levels**

Level	Points
High reservoir	(-130 0 25), (-10 0 25), (93 0 -10), (130 0 -10), (130 50 -10), (93 50 -10), (-10 50 25), (-130 50 25)
Low reservoir	(-130 0 5), (-10 0 5), (93 0 -10), (130 0 -10), (130 50 -10), (93 50 -10), (-10 50 5), (-130 50 5)

1. Proceed to the **Flow conditions** mode.
2.  Create water levels corresponding to the full reservoir and the low water level cases according to the information given in [Table 19: Water levels](#) (on page 119).
3. In the **Attributes library** of the **Model explorer** rename the created user water levels as High\_Reservoir and Low\_Reservoir.

**Note:**

No modifications, such as **Time dependency** is possible for **Borehole water levels** and non-horizontal **User water levels**.

## Initial phase: High reservoir

1. Proceed to the **Staged construction** mode.
2. Double-click the initial phase in the **Phases explorer**.
3. In the **General** subtree of the **Phases** window rename the phase as High reservoir.
4.  Select the **Gravity loading** option as **Calculation type**.  
Note that **Staged construction** is the only option available for **Loading type**.
5.  Select the **Steady state groundwater flow** option as pore pressure calculation type.
6. Note that the options **Ignore undr. behaviour (A,B)** and **Ignore suction** are by default selected in the **Deformation control parameters** subtree. The default values will be used for the parameters in the **Numerical control parameters** and **Flow control parameters** subtrees.
7. Click **OK** to close the **Phases** window.
8. In the **Staged construction** mode activate the soil clusters representing the embankment.
9. In the **Model explorer** expand the **Model conditions** subtree.
10. In the **GroundwaterFlow** subtree set **BoundaryYMin**, **BoundaryYMax** and **BoundaryZMin** to **Closed**. The remaining boundaries should be **Open**.

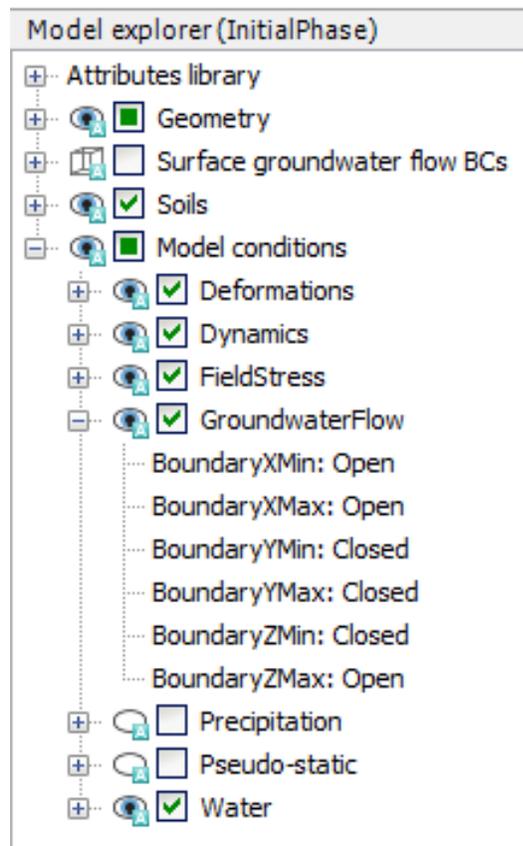


Figure 99: Boundary conditions for groundwater flow

11. In the **Water** subtree select the high reservoir water level (High\_Reservoir) as **GlobalWaterLevel**.

## Phase 1: Rapid drawdown

In the rapid drawdown phase the water level in the reservoir will be lowered from  $z = 25$  m to  $z = 5$  m in a period of 5 days. To define the function describing the fluctuation of the water level:

1.  Add a new calculation phase.
2. In the **Phases explorer** double-click the newly added phase.  
The **Phases** window is displayed.
3. In the **General** subtree specify the name of the phase (e.g. Rapid drawdown).
4.  Set the **Calculation type** to **Fully coupled flow-deformation**.
5. Set the **Time interval** to 5 days.
6. The **Reset displacements to zero** option is automatically selected in the **Deformation control parameters** subtree.
7. Click **OK** to close the **Phases** window.
8. Expand the **Attributes library** in the **Model explorer**.
9. Right-click on **Flow functions** and select the **Edit** option in the appearing menu.  
The **Flow functions** window is displayed.

10.  In the **Head functions** tabsheet add a new function by clicking the corresponding button. The new function is highlighted in the list and options to define the function are displayed.
- Specify a proper name to the function for the rapid drawdown (e.g. Rapid).
  - Select the **Linear** option from the **Signal** drop-down menu.
  - Assign a value of -20 m to **Δ Head**, representing the amount of the head decrease.
  - Specify a time interval of 5 days. A graph is displayed showing the defined function

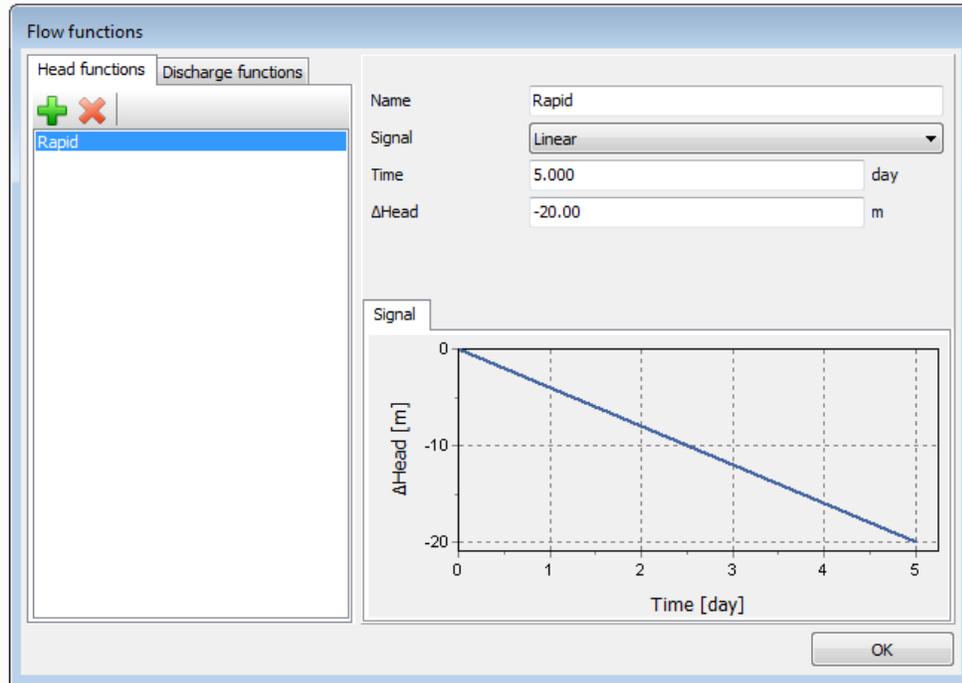


Figure 100: The flow function for the rapid drawdown case

- Click **OK** to close the **Flow functions** window.
- Activate all the surface groundwater flow boundary conditions.
  - Multi-select the surface groundwater flow BCs in the drawing area.
  - In the **Selection explorer** select the **Head** option as behaviour. The distribution of the head is **Uniform**. Assign a value of 25 m to  $h_{ref}$ .
  - Set the time dependency to **Time dependent** and select the **Rapid** option as **Head function**. Information related to the head function is displayed in the **Object explorers** as well.
  - In the **Water** subtree in the **Model explorer** select the BoreholeWaterLevel\_1 option as **GlobalWaterLevel**.

## Phase 2: Slow drawdown

In the slow drawdown phase the water level in the reservoir will be lowered from  $z = 25$  m to  $z = 5$  m in a period of 50 days. To define the function describing the fluctuation of the water level:

- Select the initial phase (High reservoir) in the **Phases explorer**.
-  Add a new calculation phase.
- In the **Phases explorer** double-click the newly added phase. The **Phases** window is displayed.

## Rapid drawdown analysis

Define and perform the calculation

4. In the **General** subtree specify the name of the phase (e.g. Slow drawdown).
5.  Set the **Calculation type** to **Fully coupled flow-deformation**.
6. Set the **Time interval** option to 50 days.
7. The **Reset displacements to zero** option is automatically selected in the **Deformation control parameters** subtree.
8. Click **OK** to close the **Phases** window.
9. Create a new flow function following the steps previously described.
  - a. Specify a proper name to the function for the slow drawdown (e.g. Slow).
  - b. Select the **Linear** option from the **Signal** drop-down menu.
  - c. Assign a value of -20 m to  **$\Delta$ Head**, representing the amount of the head decrease.
  - d. Specify a time interval of 50 days.

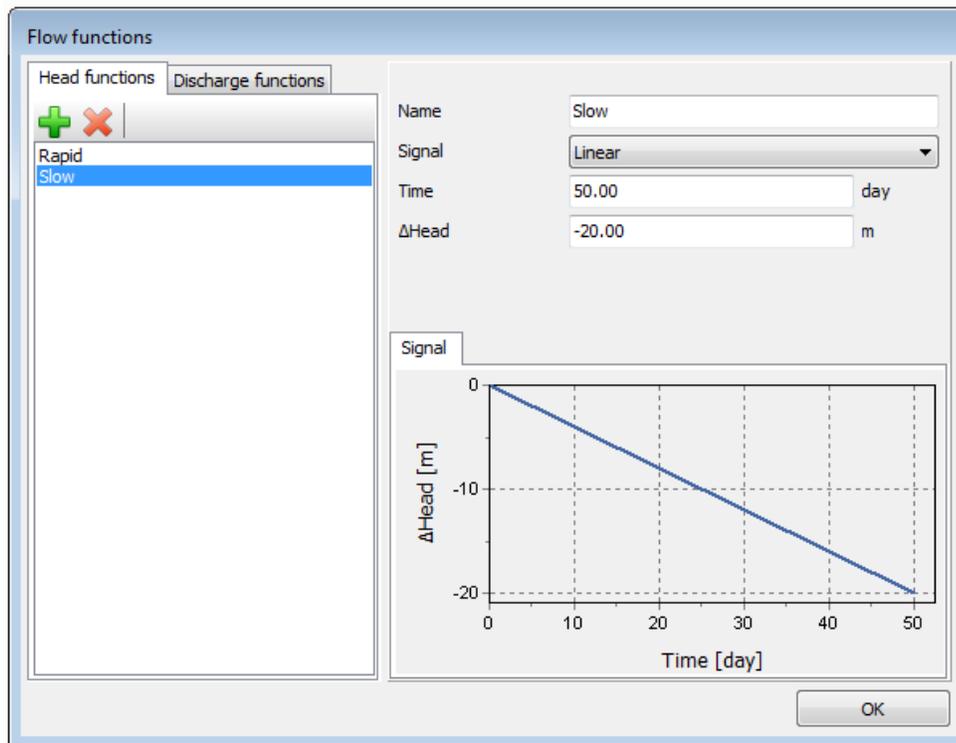


Figure 101: The flow function for the slow drawdown case

10. Activate all the surface groundwater flow boundary conditions and multi-select them in the drawing area.
11. In the **Selection explorer** select the **Head** option as behaviour. The distribution of the head is **Uniform**. Assign a value of 25 m to  $h_{ref}$ .
12. Set the time dependency to **Time dependent** and select the **Slow** option as **Head function**.
13. In the **Water** subtree in the **Model explorer** select the **BoreholeWaterLevel\_1** option as **GlobalWaterLevel**.

### Phase 3: Low level

This phase considers the steady-state situation of a low reservoir level.

## Rapid drawdown analysis

Define and perform the calculation

---

1. Select the initial phase (High reservoir) in the **Phases explorer**.
2.  Add a new calculation phase.
3. In the **Phases explorer** double-click the newly added phase.  
The **Phases** window is displayed.
4. In the **General** subtree specify the name of the phase (ex: Low level).
5.  The default calculation type (**Plastic**) is valid for this phase.
6.  The default **Pore pressure calculation type (Steady state groundwater flow)** is valid for this phase.
7. In the **Deformation control** subtree, select **Ignore und. behaviour (A,B)** and make sure that the **Reset displacements to zero** is selected as well.
8. Click **OK** to close the **Phases** window.
9. The surface groundwater flow BCs should be deactivated in the **Model explorer**.
10. In the **Water** subtree select the low reservoir water level (Low\_Reservoir) as **GlobalWaterLevel**.

### Phase 4 to 7

In Phases 4 to 7, stability calculations are defined for the previous phases respectively.

1. Select Phase\_1 in the **Phases explorer**.
2.  Add a new calculation phase and proceed to the **Phases** window.
3. In the **General** subtree specify the name of the phase (ex: Rapid drawdown - Safety).
4.  Set **Calculation type** to **Safety**. The **Incremental multipliers** option is valid as **Loading type**.
5. Select the **Reset displacements to zero** option in the **Deformation control** subtree.
6. In the **Numerical control parameters** subtree set the **Max steps** parameter to 50 for Phase 4.
7. Follow the same procedure for Phases 5 to 7.

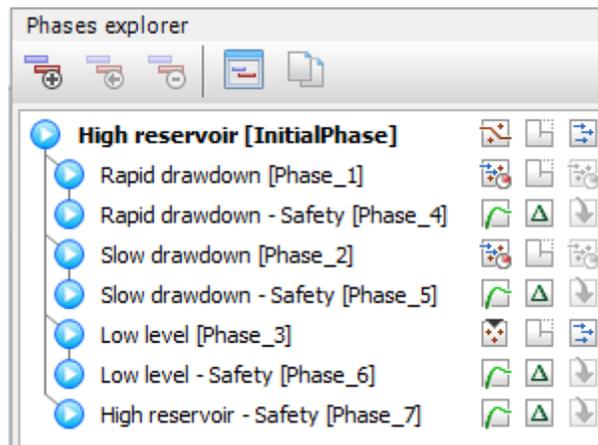


Figure 102: The final view of the Phases explorer

### Execute the calculation

1.  In the **Staged construction** mode select a node at the crest (-2.5 25.0 30.0).

-  Start the calculation process. Ignore the calculation warnings.
-  Save the project when the calculation has finished.

## Results

-  After the calculation is finished click the **View the calculation results** button.  
The **Output** window now shows the deformed mesh for the selected phase.
- Select the menu item **Stresses > Pore pressures >  $P_{water}$** .
-  Define a vertical cross section passing through (-130 15) and (130 15)

### Note:

-  Note that by default the legend is locked in cross section plots, meaning that the same layer distribution will be used if the cross section is relocated in the model or if the results are displayed for other phases.
-  The legend can be unlocked by clicking on the **Lock** icon under the legend. A 'free' legend is indicated by the **Open lock** icon.

The results of the four groundwater flow calculations in terms of pore pressure distribution are shown in the series of figures below. Four different situations were considered:

- The situation with a high (standard) reservoir level
- The situation after rapid drawdown of the reservoir level
- The situation after slow drawdown of the reservoir level
- The situation with a low reservoir level

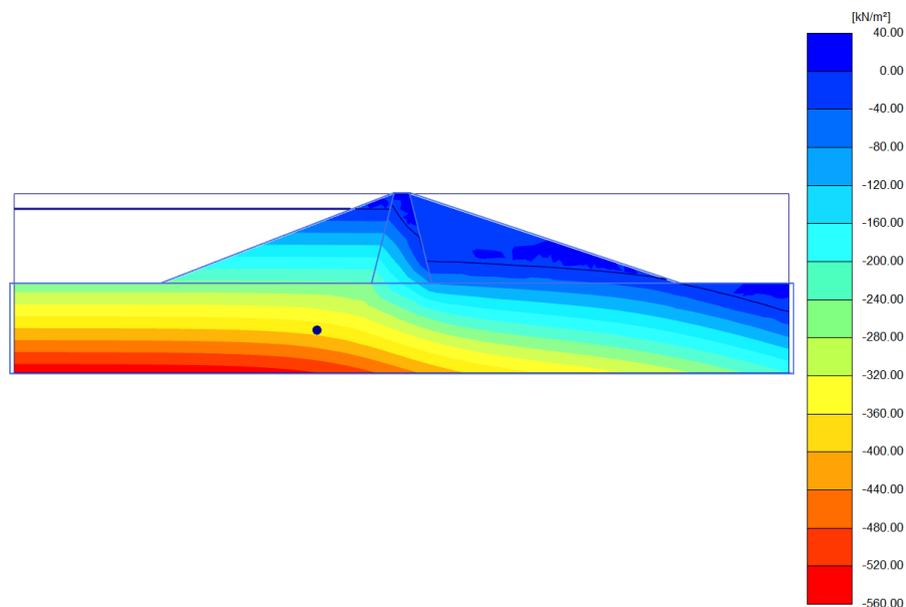


Figure 103: Pore water pressure distribution for high reservoir level (Initial phase)

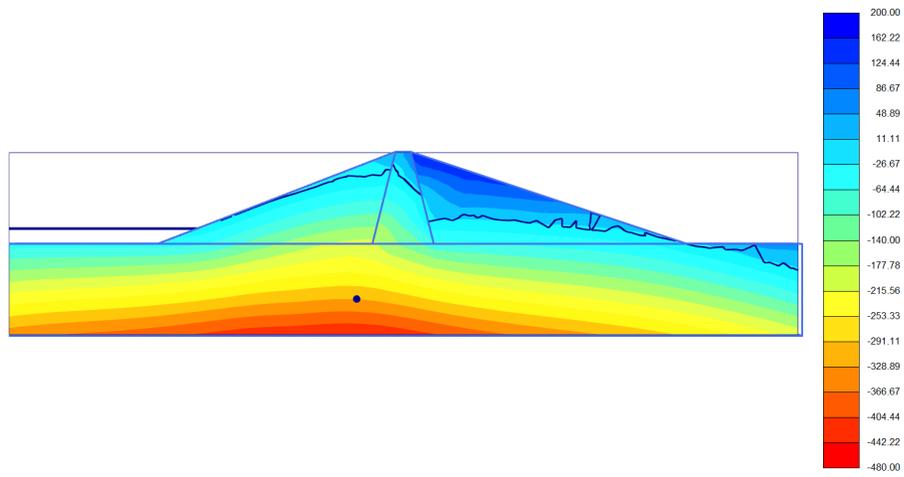


Figure 104: Pore water pressure distribution after rapid drawdown (Phase\_1)


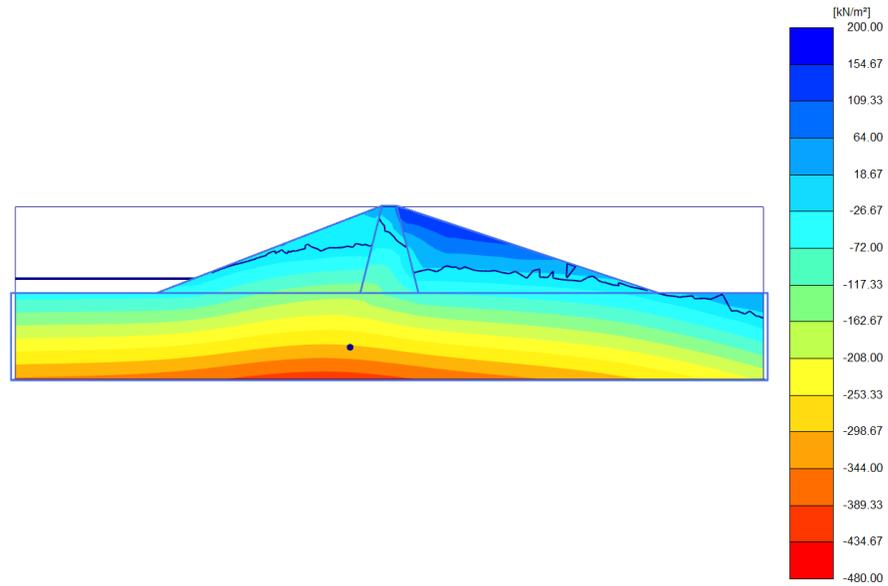


Figure 105: Pore water pressure distribution after slower drawdown (Phase\_2)

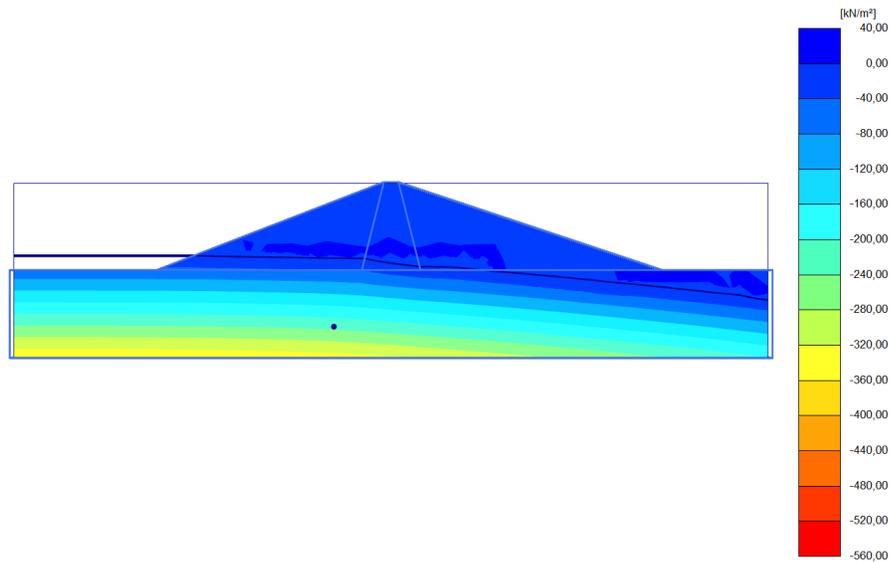

*Figure 106: Pore water pressure distribution for low reservoir level (Phase\_3)*

When the change of pore pressure is taken into account in a deformation analysis, some additional deformation of the dam will occur. These deformations and the effective stress distribution can be viewed on the basis of the results of phases 1 to 4.

For the phases 1 and 2 change the legend settings to **Manual** and set the values as follows:

- Minimum value: -480
- Maximum value: 200
- Number of intervals: 18

In this tutorial attention is focused on the variation of the safety factor of the dam for the different situations. Therefore, the development of  $\Sigma Msf$  is plotted for the phases 4 to 7 as a function of the displacement of the dam crest point:

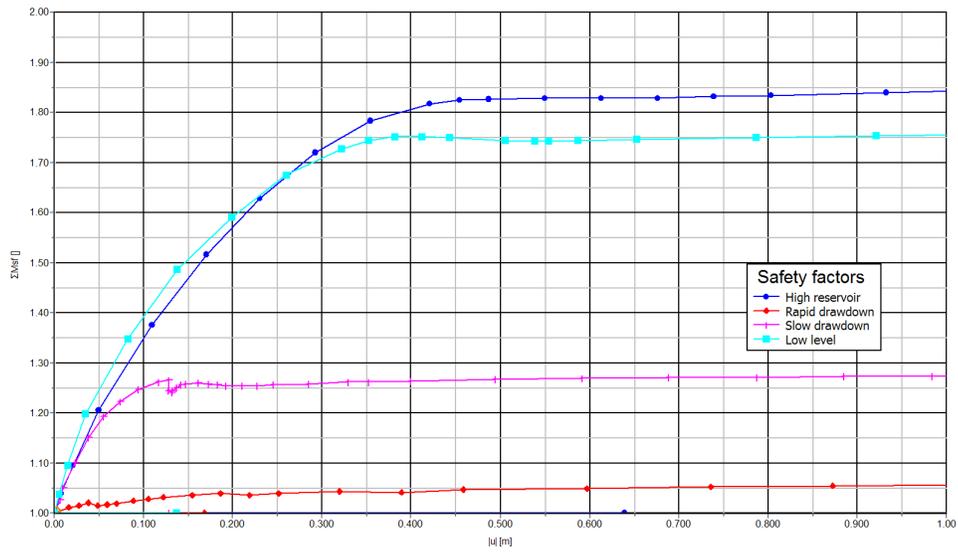


Figure 107: Safety factors for different situations

Rapid drawdown of a reservoir level can reduce the stability of a dam significantly. Fully coupled flow-deformation and stability analysis can be performed with PLAXIS 3D to effectively analyse such situations.

# 9

## Dynamic analysis of a generator on an elastic foundation

---

In this tutorial the influence of a vibrating source on its surrounding soil is studied. To reduce the calculation time, only one-quarter of the overall geometry is modelled, using symmetry boundary conditions along the lines of symmetry. The physical damping due to the viscous effects is taken into consideration via Rayleigh damping. Also, due to radial wave propagation, 'geometric damping' can be significant in attenuating the vibration.

The modelling of the boundaries is one of the key points in the dynamic calculation. In order to avoid spurious wave reflections at the model boundaries (which do not exist in reality), special conditions have to be applied in order to absorb waves reaching the boundaries.

### Objectives

- Performing a **Dynamic** calculation
- Defining dynamic boundary conditions (viscous)
- Defining dynamic loads by means of load multipliers
- Defining material damping by means of Rayleigh damping

### Geometry

The vibrating source is a generator founded on a 0.2 m thick concrete footing of 1 m in diameter. Oscillations caused by the generator are transmitted through the footing into the subsoil. These oscillations are simulated as a uniform harmonic loading, with a frequency of 10 Hz and amplitude of 10 kN/m<sup>2</sup>. In addition to the weight of the footing, the weight of the generator is modelled as a uniformly distributed load of 8 kN/m<sup>2</sup>.

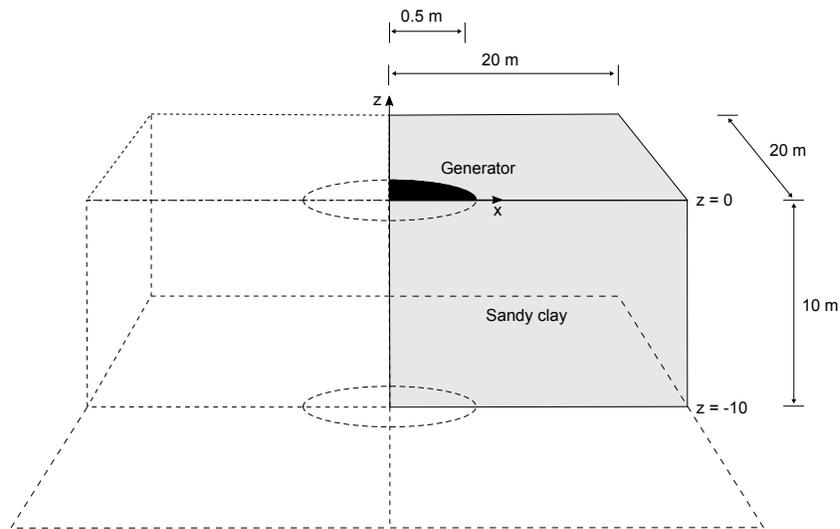


Figure 108: Generator founded on elastic subsoil

The model boundaries should be sufficiently far from the region of interest, to avoid disturbances due to possible reflections. Although special measures (absorbent boundaries) are adopted in order to avoid spurious reflections, there is always a small influence and it is still a good habit to put boundaries far away. In a dynamic analysis, model boundaries are generally taken further away than in a static analysis.

## Define the geometry

To create the geometry model, follow these steps:

1. Start the Input program and select **Start a new project** from the **Quick select** dialog box.
2. In the **Project properties** window, enter an appropriate title.
3. Keep the default units and set the model dimensions to:
  - a.  $x_{\min} = 0$  and  $x_{\max} = 20$
  - b.  $y_{\min} = 0$  and  $y_{\max} = 20$

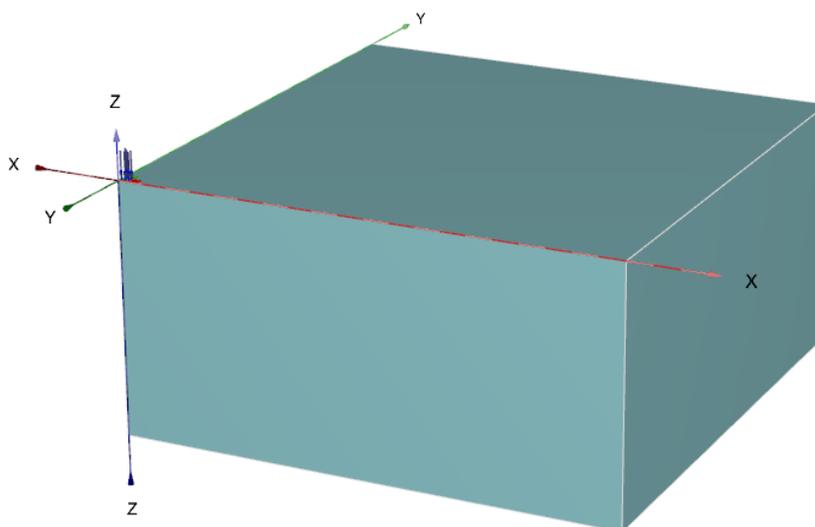


Figure 109: The geometry of the model

## Define the soil stratigraphy

1. The subsoil consists of one layer with a depth of 10 m. The ground level is defined at  $z = 0$ .
2. Note that water conditions are not considered in this example and the hydraulic head is set at  $z = -10$ .

## Create and assign material data sets

Create the material data set according to the table below and assign it to the soil layer.

**Table 20: Material properties**

Parameter	Name	Sandy clay	Unit
General			
Material model	Model	Linear elastic	-
Drainage type	Type	Drained	-
Unit weight above phreatic level	$\gamma_{unsat}$	20.0	$\text{kN/m}^3$
Unit weight below phreatic level	$\gamma_{sat}$	20.0	$\text{kN/m}^3$
Parameters			
Young's modulus	$E'$	$5 \cdot 10^4$	$\text{kN/m}^2$

Parameter	Name	Sandy clay	Unit
Poisson's ratio	$\nu'$	0.3	-
Interfaces			
Interface strength	-	Rigid	-
Initial			
$K_0$ determination	-	Automatic	-
Lateral earth pressure coefficient	$K_0$	0.5	-

## Definition of structural elements

The generator is defined in the **Structures** mode. The **Polycurve** feature is used to define the geometry.

-  Click the **Create polycurve** button in the side toolbar and click on (0 0 0) in the drawing area.
- In the **General** tabsheet the default option for shape (**Free**) and the default orientation axes (x-axis, y-axis) are valid for this polycurve.
- In the **Segments** tabsheet three segments are defined as given in the table below. The insertion point is located at (0 0 0).

**Table 21: Segment properties**

Segment	Segment 1	Segment 2	Segment 3
Segment type	Line	Arc	Line
Segment properties	Relative start angle = 0° Length = 0.5 m	Relative start angle = 90° Radius = 0.5 m Segment angle = 90°	Relative start angle = 90° Length = 0.5 m

- Right-click the polycurve and select the **Create surface** option from the appearing menu.
- Right-click the created surface and select the **Create surface load** option in the appearing menu.
- In the **Selection explorer**, the **Uniform** distribution is valid for the surface load. Assign (0 0 -8) to the pressure components.

## Definition of dynamic multipliers

Dynamic loads are defined on the basis of input values of loads or prescribed displacements and corresponding time-dependent multipliers.

To create the multipliers of the dynamic load:

- In the **Model explorer** expand the **Attributes library** subtree.

2. Right-click the **Dynamic multipliers** subtree and select the **Edit** option from the appearing menu.

The **Multipliers** window pops up.

3. Click the **Load multipliers** tab.

4.  Click **Add** button to introduce a multiplier for the loads.

5. Define a **Harmonic** signal with an **Amplitude** of 10, a **Frequency** of 10 Hz and a **Phase** of  $0^\circ$  as shown below:

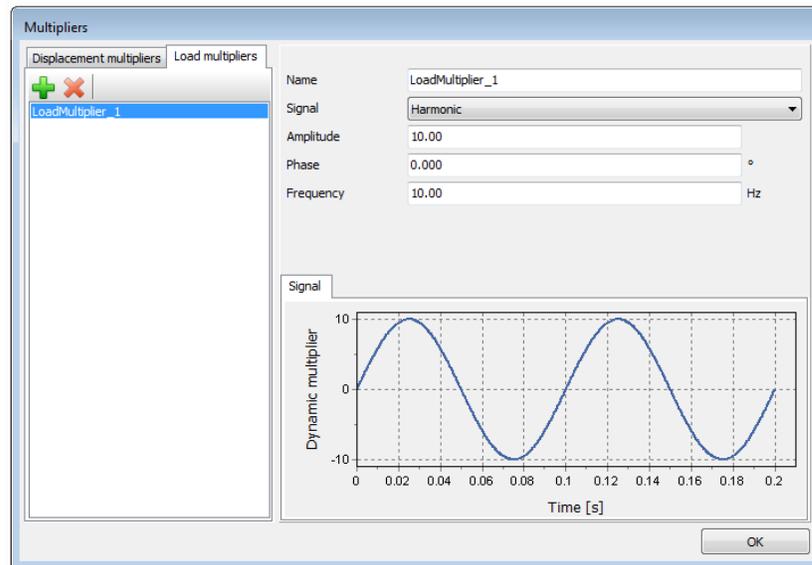


Figure 110: Definition of a Harmonic multiplier

6.  In the **Selection explorer**, under DynSurfaceLoad\_1 specify the components of the load as (0 0 -1).
7. Click Multiplier<sub>z</sub> in the dynamic load subtree and select the LoadMultiplier\_1 option from the appearing menu.

### Note:

The dynamic multipliers can be defined in the **Geometry** modes as well as in the **Calculation** modes.

## Generate the mesh

1. Proceed to the **Mesh** mode.
2. Refine the surface corresponding to the generator by assigning a **Coarseness factor** of 0.125.
3.  Click the **Generate mesh** button. The **Medium** option will be used for **Element distribution**.
4.  View the generated mesh.

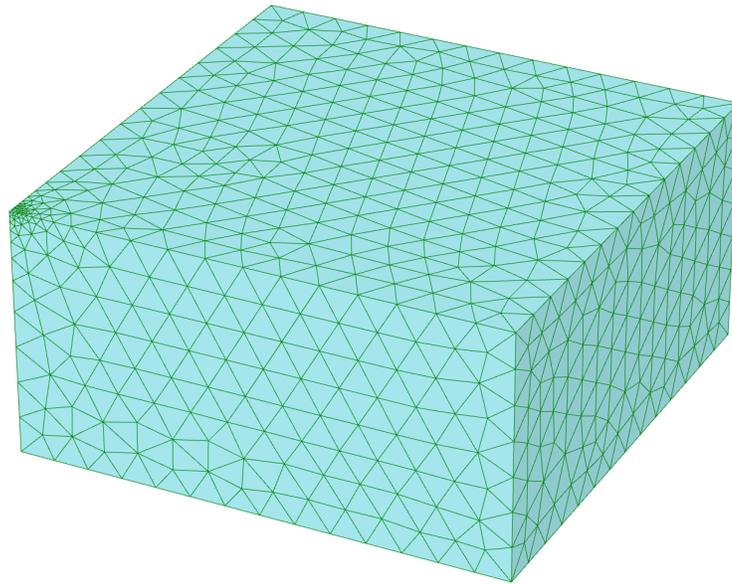


Figure 111: The generated mesh

**Note:** In all dynamic calculations, the user should pay special attention to the element size to decrease numerical dispersion of waves. It should be noted that large elements are not able to transmit high frequencies. The transmission of waves is governed by both wave speed and wave length. If dynamic input contains high frequencies, either high frequencies should be filtered out or a finer mesh should be used.

## Define and perform the calculation

The calculation consists of 4 phases. The initial phase consists of the generation of the initial stresses using the **K0 procedure**. The second phase is a **Plastic** calculation where the static load is activated. The third phase is a **Dynamic** calculation where the effect of the functioning generator is considered. The fourth and final phase is a **Dynamic** calculation as well where the generator is turned off and the soil will vibrate freely.

### Initial phase

1. Click on the **Staged construction** tab to proceed with definition of the calculation phases.
2. The initial phase has already been introduced. The default settings of the initial phase will be used in this tutorial.

### Phase 1

1.  Add a new calculation phase (Phase\_1). The default settings of the added phase will be used for this calculation phase.

2. In the **Staged construction** mode activate the static component of the surface load. Do not activate the dynamic load.

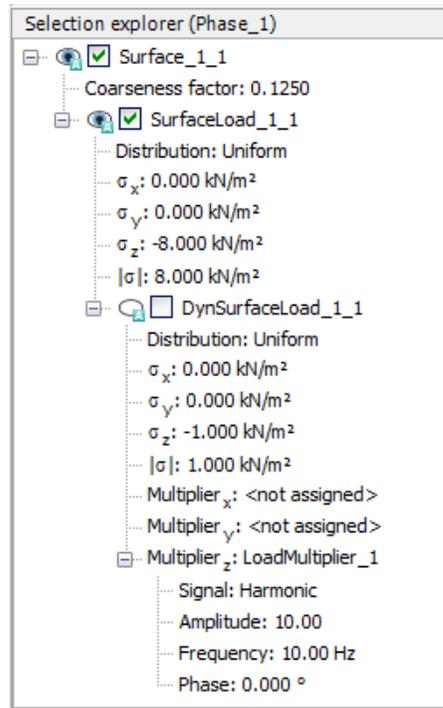


Figure 112: Applied load in the Phase\_1

## Phase 2

1.  Add a new calculation phase (Phase\_2).
2.  In the **General** subtree in the **Phases** window, select the **Dynamic** option as calculation type.
3. Set the **Time interval** parameter to 0.5 s.
4. In the **Deformation control parameters** subtree in the **Phases** window select the **Reset displacement to zero** parameter. The default values of the remaining parameters will be used for this calculation phase.
5. In the **Numerical control parameters** subtree uncheck the **Use default iter parameters** checkbox, which allows you to change advanced settings and set the **Time step determination** to **Manual**.
6. Set the **Max steps** to 250.
7. In the **Staged construction** mode activate the dynamic component of the surface load. Note that the static component of the load is still active.

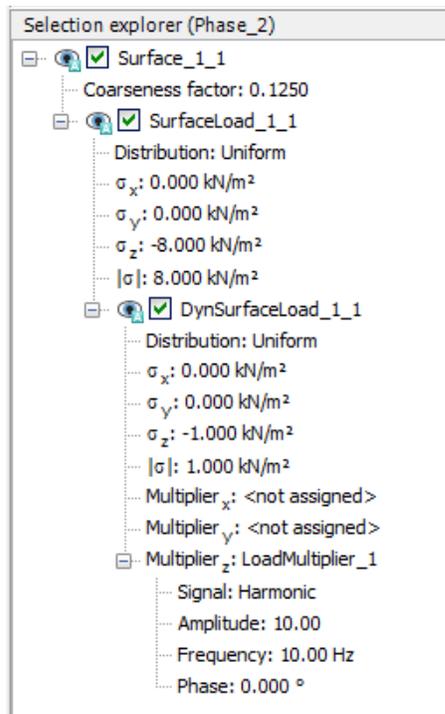


Figure 113: Applied load in the Phase\_2

Special boundary conditions have to be defined to account for the fact that in reality the soil is a semi-infinite medium. Without these special boundary conditions the waves would be reflected on the model boundaries, causing perturbations. To avoid these spurious reflections, viscous boundaries are specified at Xmax, Ymax and Zmin. The dynamic boundaries can be specified in the **Dynamics** subtree located under the **Model conditions** in the **Model explorer**.

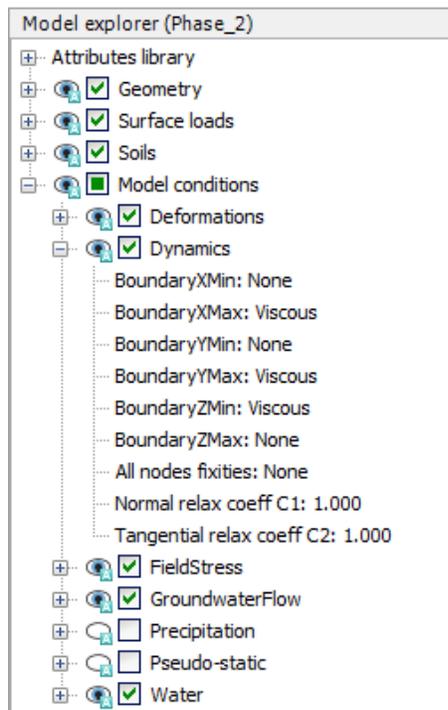


Figure 114: Boundary conditions for Dynamic calculations

## Phase 3

1.  Add a new calculation phase (Phase\_3).
2.  In the **General** subtree in the **Phases** window, select the **Dynamic** option as calculation type.
3. Set the **Dynamic time interval** parameter to 0.5 s.
4. In the **Numerical control parameters** subtree uncheck the **Use default iter parameters** checkbox, which allows you to change advanced settings and set the **Time step determination** to **Manual**.
5. Set the **Max steps** to 250.
6. In the **Staged construction** mode deactivate the dynamic component of the surface load. Note that the static load is still active. The dynamic boundary conditions of this phase should be the same as in the previous phase.

The following figure shows the **Phases** explorer of this tutorial.

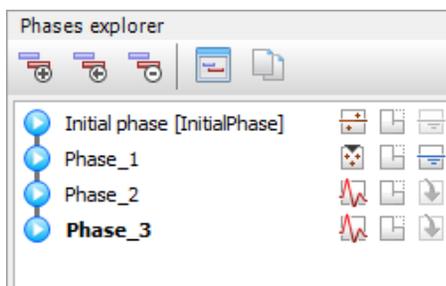


Figure 115: Phases explorer

## Execute the calculation

1.  Select nodes located at the ground surface (ex: (1.4 0 0), (1.9 0 0), (3.6 0 0)) to consider in curves.
2.  Execute the calculation.
3.  Save the project.

## Additional calculation with damping

In a second calculation, material damping is introduced by means of Rayleigh damping. Rayleigh damping can be entered in the material data set. The following steps are necessary:

1. Save the project under another name.
2. Open the material data set of the soil.
3. In the **General** tabsheet click the box next to the **Rayleigh  $\alpha$**  parameter.  
Note that the display of the **General** tabsheet has changed displaying the **Single DOF equivalence** box.
4. Set the value of the  $\xi$  parameter to 5% for both targets.
5. Set the frequency values to 9 and 11 for the **Target 1** and **Target 2** respectively.
6. Click on one of the definition cells of the Rayleigh parameters. The values of  $\alpha$  and  $\beta$  are automatically calculated by the program.

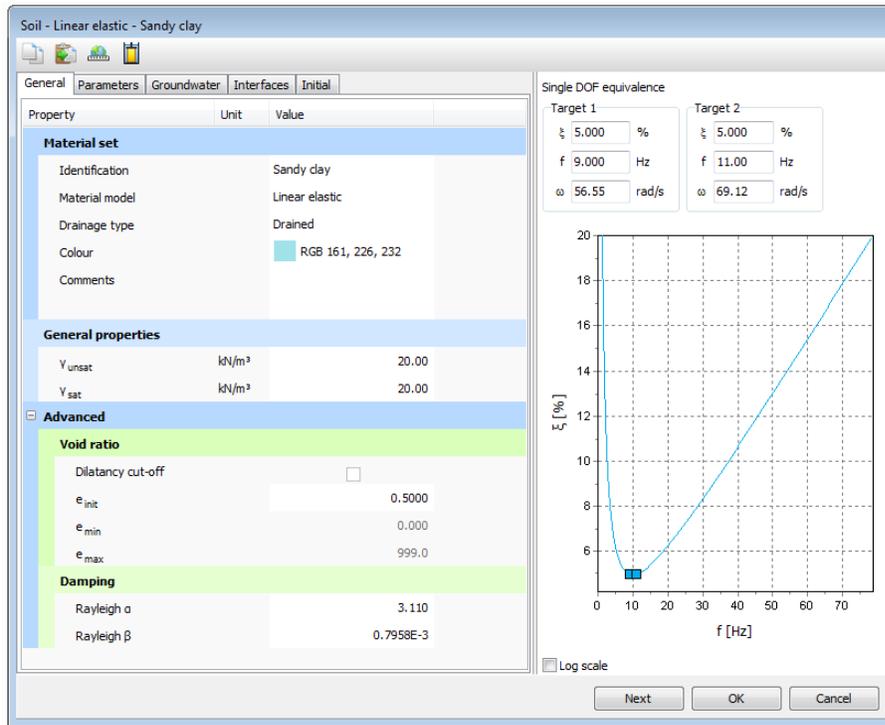


Figure 116: Input of Rayleigh damping

7. Click **OK** to close the data base.
8. Check whether the phases are properly defined (according to the information given before) and start the calculation.

## Results

The **Curve generator** feature is particularly useful for dynamic analysis. You can easily display the actual loading versus time (input) and also displacements, velocities and accelerations of the pre-selected points versus time. The evolution of the defined multipliers with time can be plotted by assigning **Dynamic time** to x-axis and  $u_z$  to the y-axis. [Figure 117: Vertical displ.- time on the surface at different distances to the vibrating source \(without damping\)](#) (on page 139) shows the response of the pre-selected points at the surface of the structure. Even with no damping, the waves are dissipated thanks to the geometric damping.

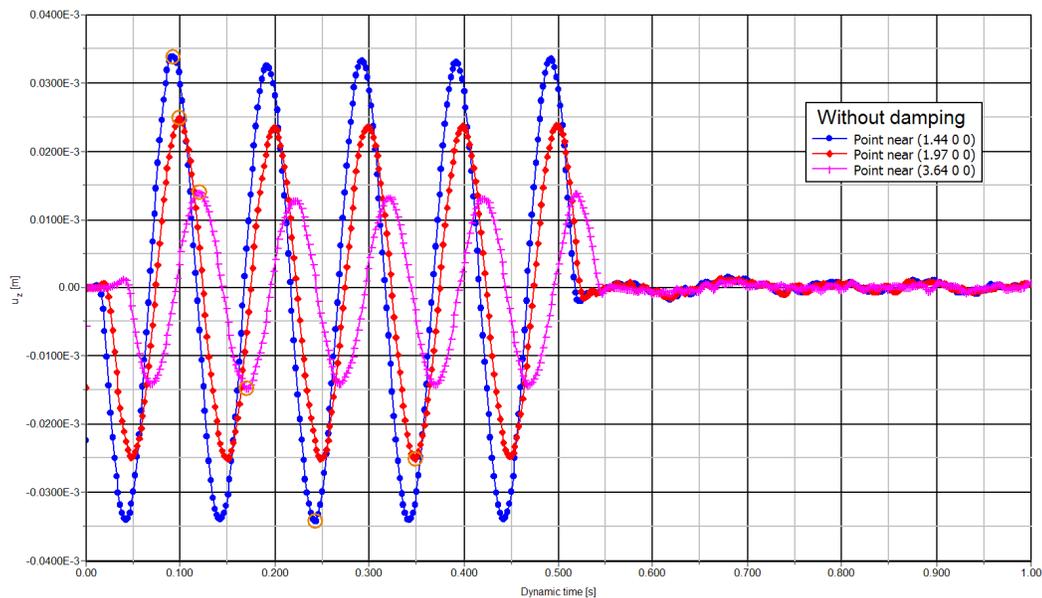


Figure 117: Vertical displ.- time on the surface at different distances to the vibrating source (without damping)

[Figure 118: Vertical displ.- time \(with damping\)](#) (on page 139) shows the response of the pre-selected points at the surface of the structure with material damping. The vibration is seized when some time is elapsed after the removal of the dynamic component of the surface load (at  $t = 0.5$  s). Comparing the results without damping with the results with damping, also the displacement amplitudes are lower.

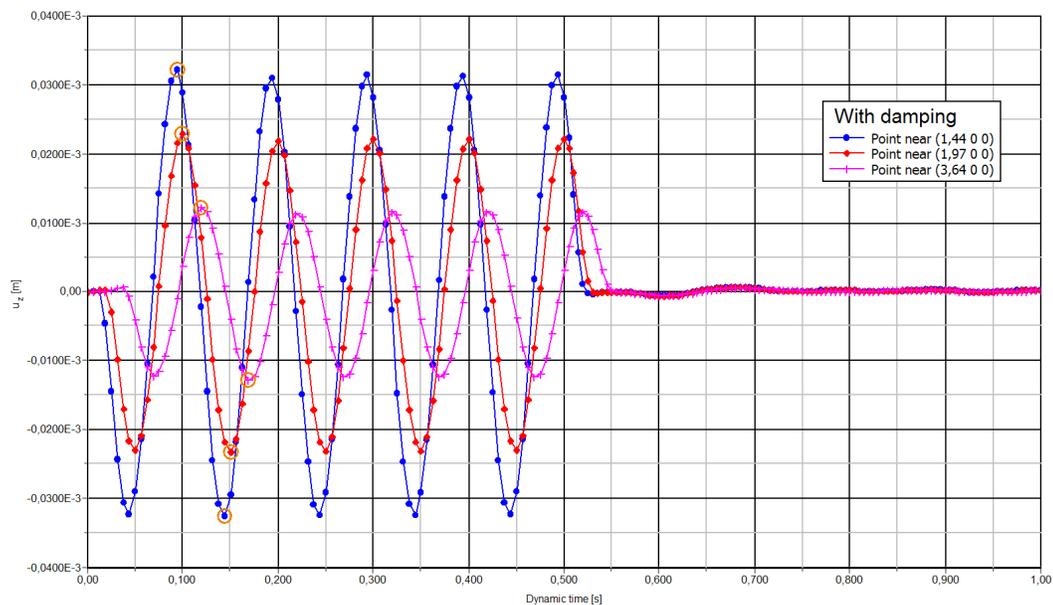


Figure 118: Vertical displ.- time (with damping)

It is possible in the Output program to display displacements, velocities and accelerations at a particular time, by choosing the appropriate option in the **Deformations** menu. [Figure 119: Total accelerations in the soil at the](#)

[end of Phase 2 \(with damping\)](#) (on page 140) shows the total accelerations in the soil at the end of phase 2 ( $t = 0.5$  s).

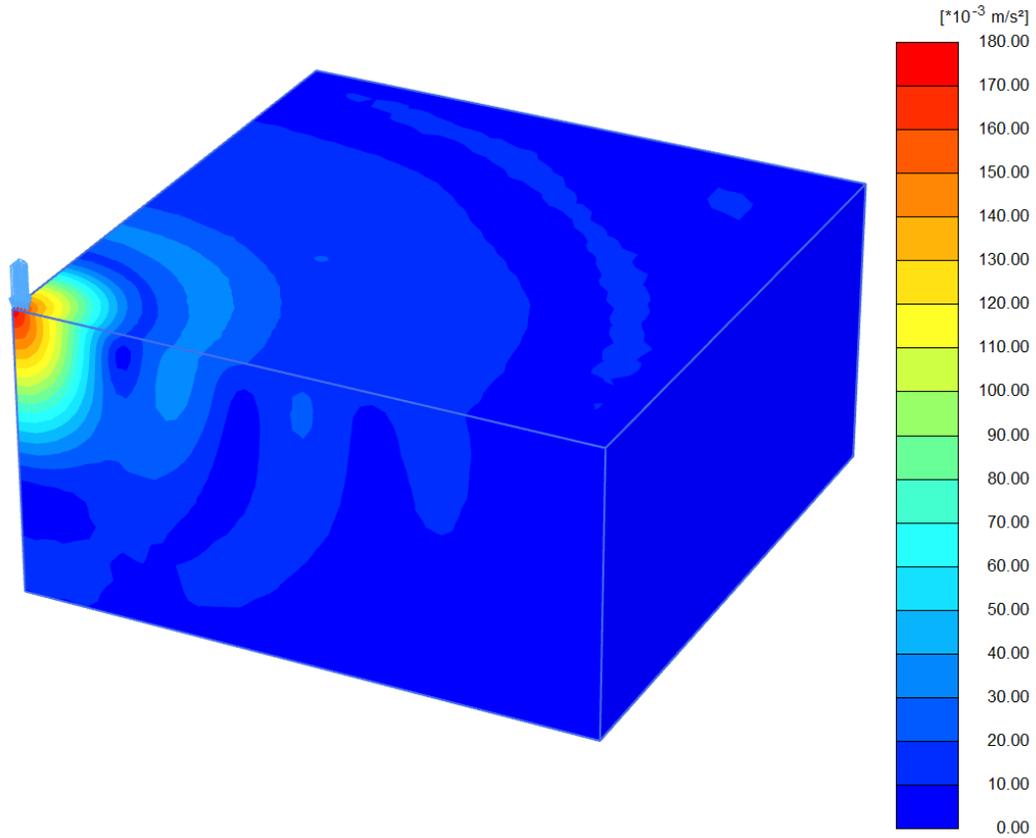


Figure 119: Total accelerations in the soil at the end of Phase 2 (with damping)

# 10

## Free vibration and earthquake analysis of a building



This example demonstrates the natural frequency of a long five-storey building when subjected to free vibration and earthquake loading. The two calculations employ different dynamic boundary conditions:

- In the free vibration, the **Viscous** boundary conditions are considered. This option is suitable for problems where the dynamic source is inside the mesh.
- For the earthquake loading, the **Free-field** and **Compliant base** boundary conditions are considered. This option is preferred for earthquake analysis, where the dynamic input is applied along the model boundary.

### Objectives

- Performing a **Dynamic** calculation
- Defining dynamic boundary conditions (free-field and compliant base)
- Defining earthquakes by means of displacement multipliers
- Modelling of free vibration of structures
- Modelling of hysteretic behaviour by means of Hardening Soil model with small-strain stiffness
- Calculating the natural frequency by means of Fourier spectrum

### Geometry

The building consists of 5 floors and a basement. It is 10 m wide and 17 m high including the basement. The total height from the ground level is  $5 \times 3 \text{ m} = 15 \text{ m}$  and the basement is 2 m deep. A value of  $5 \text{ kN/m}^2$  is taken as the weight of the floors and the walls. The building is constructed on a clay layer of 15 m depth underlaid by a deep sand layer. In the model, 25 m of the sand layer will be considered.

### Define the geometry

The length of the building is much larger than its width and the earthquake is supposed to have a dominant effect across the width of the building. Taking these facts into consideration, a representative section of 3 m will be considered in the model in order to decrease the model size. To create the geometry follow these steps:

1. Start the Input program and select **Start a new project** from the **Quick select** dialog box.
2. In the **Project properties** window, enter an appropriate title.
3. Keep the default units and set the model dimensions to:
  - a.  $x_{\min} = -80$  and  $x_{\max} = 80$

b.  $y_{min} = 0$  and  $y_{max} = 3$

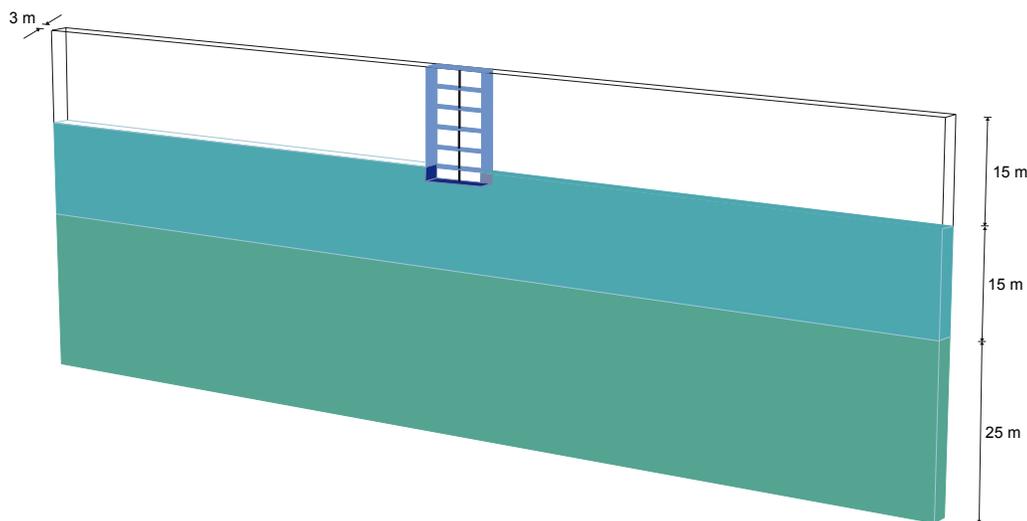


Figure 120: The geometry of the model

## Define the soil stratigraphy

1. The subsoil consists of two layers. The **Upper clayey layer** lies between the ground level ( $z = 0$ ) and  $z = -15$ .
2. The underlying **Lower sandy layer** lies to  $z = -40$ .
3. Define the phreatic level by assigning a value of  $-15$  to the **Head** in the borehole.

## Create and assign material data sets

Two material data sets are needed for this tutorial. The properties and some details of the material model are explained here.

Table 22: Material properties

Parameter	Name	Upper clayey layer	Lower sandy layer	Unit
General				
Material model	Model	HS small	HS small	-
Drainage type	Type	Drained	Drained	-
Soil unit weight above phreatic level	$\gamma_{unsat}$	16	20	kN/m <sup>3</sup>

## Free vibration and earthquake analysis of a building

Create and assign material data sets

Parameter	Name	Upper clayey layer	Lower sandy layer	Unit
Soil unit weight above phreatic level	$\gamma_{\text{sat}}$	20	20	kN/m <sup>3</sup>
Parameters				
Secant stiffness in standard drained triaxial test	$E_{50}^{\text{ref}}$	$2.0 \cdot 10^4$	$3.0 \cdot 10^4$	kN/m <sup>2</sup>
Tangent stiffness for primary oedometer loading	$E_{\text{oed}}^{\text{ref}}$	$2.561 \cdot 10^4$	$3.601 \cdot 10^4$	kN/m <sup>2</sup>
Unloading / reloading stiffness	$E_{\text{ur}}^{\text{ref}}$	$9.484 \cdot 10^4$	$1.108 \cdot 10^5$	kN/m <sup>2</sup>
Power for stress-level dependency of stiffness	m	0.5	0.5	-
Cohesion	$c'_{\text{ref}}$	10	5	kN/m <sup>2</sup>
Friction angle	$\varphi'$	18.0	28.0	°
Dilatancy angle	$\psi$	0.0	0.0	°
Shear strain at which $G_s = 0.722 G_0$	$\gamma_{0.7}$	$1.2 \cdot 10^{-4}$	$1.5 \cdot 10^{-4}$	-
Shear modulus at very small strains	$G_0^{\text{ref}}$	$2.7 \cdot 10^5$	$1.0 \cdot 10^5$	kN/m <sup>2</sup>
Poisson's ratio	$\nu'_{\text{ur}}$	0.2	0.2	-

When subjected to cyclic shear loading, the Hardening Soil model with small-strain stiffness will show typical hysteretic behaviour. Starting from the small-strain shear stiffness,  $G_0^{\text{ref}}$ , the actual stiffness will decrease with increasing shear. The figures below display the Modulus reduction curves, i.e. the decay of the shear modulus with strain.

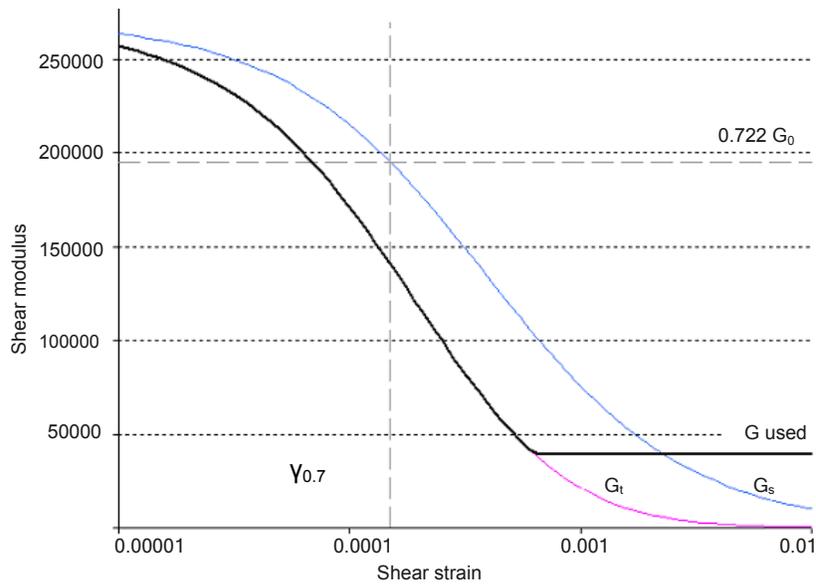


Figure 121: Modulus reduction curves for the upper clayey layer

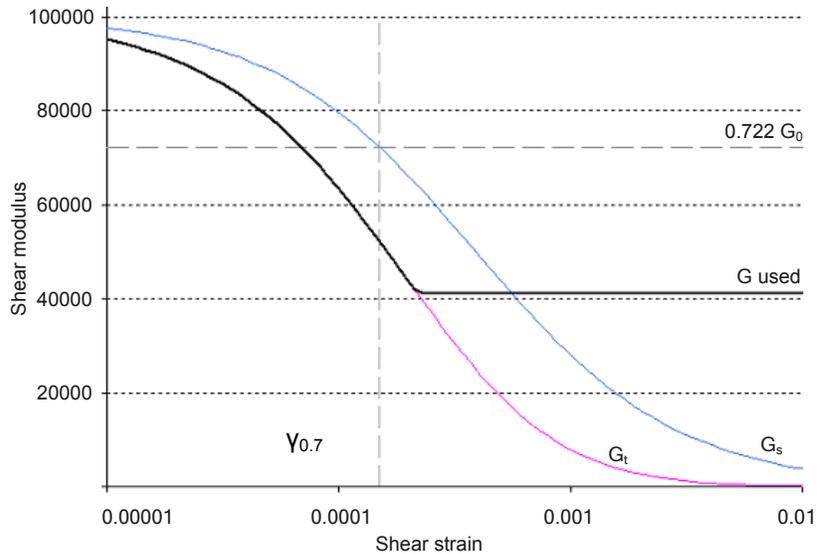


Figure 122: Modulus reduction curve for the lower sandy layer

In the Hardening Soil model with small-strain stiffness, the tangent shear modulus is bounded by a lower limit,  $G_{ur}$ .


$$G_{ur} = \frac{E_{ur}}{2(1 + \nu_{ur})}$$

The values of  $G_{ur}^{ref}$  for the **Upper clayey layer** and **Lower sandy layer** and the ratio to  $G_0^{ref}$  are shown in [Table 23: Gur values and ratio to G0ref](#) (on page 145). This ratio determines the maximum damping ratio that can be obtained.


**Table 23:  $G_{ur}$  values and ratio to  $G_0^{ref}$**

Parameter	Unit	Upper clayey layer	Lower clayey layer
$G_{ur}$	kN/m <sup>2</sup>	39517	41167
$G_0^{ref} / G_{ur}$	-	6.83	2.43

The two figures below show the damping ratio as a function of the shear strain for the material used in the model. For a more detailed description and elaboration from the modulus reduction curve to the damping curve can be found in the literature. See Brinkgreve, R.B.J., Kappert, M.H., Bonnier, P.G. (2007). Hysteretic damping in small-strain stiffness model. In Proc. 10th Int. Conf. on Comp. Methods and Advances in Geomechanics. Rhodes, Greece, 737-742.

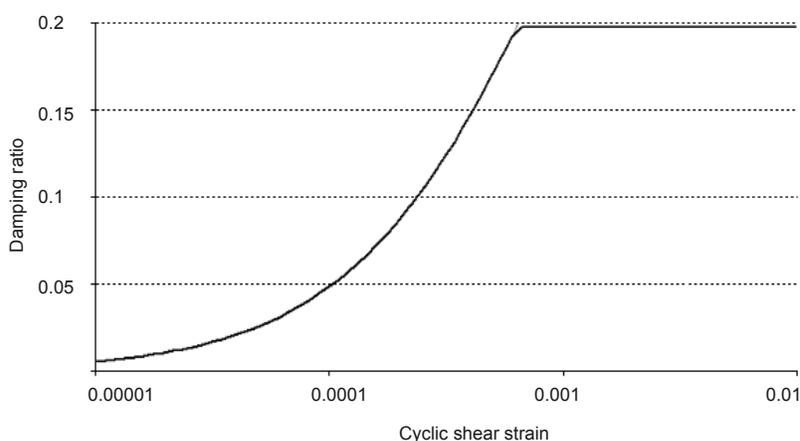

*Figure 123: Damping curve for the upper clayey layer*

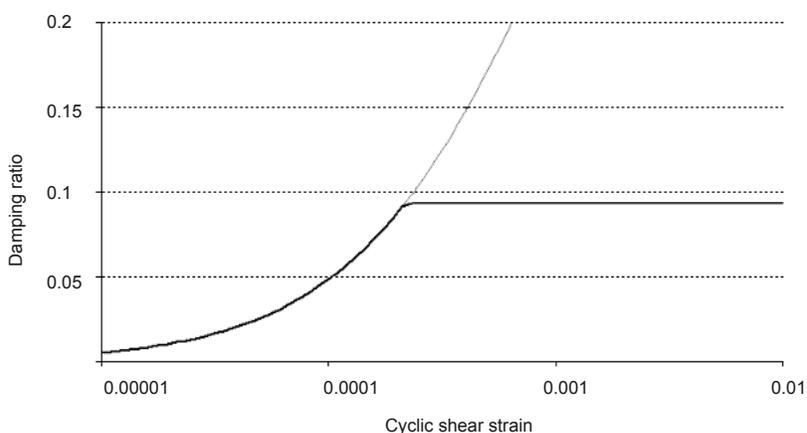

*Figure 124: Damping curve for the lower sandy layer*

1. Create the material data set according to the table above. and
2. Assign it to the corresponding soil layers. The upper layer consists of mostly clayey soil and the lower one consists of sandy soil.

### Definition of structural elements

The structural elements of the model are defined in the **Structures** mode.

### Create a building

The building consists of 5 floors and a basement. It is 10 m wide and 17 m high including the basement. The total height from the ground level is  $5 \times 3 \text{ m} = 15 \text{ m}$  and the basement is 2 m deep. A value of  $5 \text{ kN/m}^2$  is taken as the weight of the floors and the walls.

For the building two material data sets are needed, with the following material properties:

**Table 24: Material properties of the building (plate properties)**

Parameter	Name	Rest of building	Basement	Unit
Type of behaviour	Type	Elastic; Isotropic	Elastic; Isotropic	-
Thickness	d	0.3	0.3	m
Material weight	$\gamma$	33.33	50	$\text{kN/m}^3$
Young's modulus	$E_1$	$3 \cdot 10^7$	$3 \cdot 10^7$	$\text{kN/m}^2$
Poisson's ratio	$\nu_{12}$	0	0	-
Rayleigh damping	$\alpha$	0.2320	0.2320	-
	$\beta$	$8 \cdot 10^{-3}$	$8 \cdot 10^{-3}$	-

To define the structure:

The central column of the structure is modelled using the **Node-to-node anchor** feature. To create the central column of the structure:

1.  Define a surface passing through the points (-5 0 -2), (5 0 -2), (5 3 -2) and (-5 3 -2).
2.  Create a copy of the surface by defining an 1D array in z-direction. Set the number of the columns to 2 and the distance between them to 2 m.
3.  Select the created surface at  $z = 0$  and define a 1D array in the z-direction. Set the number of the columns to 6 and the distance between consecutive columns to 3 m.
4.  Define a surface passing through the points (5 0 -2), (5 3 -2), (5 3 15) and (5 0 15).
5.  Create a copy of the vertical surface by defining an 1D array in x-direction. Set the number of the columns to 2 and the distance between them to -10 m.

6. Multiselect the vertical surfaces and the horizontal surface located at  $z = 0$ .
7. Right-click on the selection and select the **Intersect and recluster** option from the appearing menu. It is important to do the intersection in the **Structures mode** as different material data sets are to be assigned to the basement and the rest of the building.
8.  Select all the created surfaces representing the building (basement, floors and walls), right-click and select the **Create plate** option from the appearing menu.
9. Define the material data set for the plates representing the structure according to [Table 24: Material properties of the building \(plate properties\)](#) (on page 146). Note that two different material data sets are used for the basement and the rest of the building respectively.
10. Assign the **Basement** material data set to the horizontal plate located at  $z = -2$  and the vertical plates located under the ground level.
11. Assign the corresponding material data set to the rest of the plates in the model.
12. In order to model the soil-structure intersection at the basement of the building assign interfaces to the outer side of the basement. Note that depending on the local coordinate system of the surfaces an interface either positive or negative is assigned.
13.  Create a **Line** through points (0 1.5 -2) and (0 1.5 0) corresponding to the column in the basement floor.
14. Create a **Line** through points (0 1.5 0) and (0 1.5 3) corresponding to the column in the first floor.
15.  Create a copy of the last defined line by defining an 1D array in z-direction. Set the number of the columns to 5 and the distance between them to 3 m.
16.  Select the created lines, right-click and select the **Create node-to-node anchor** option from the appearing menu.
17. Create the material data set according to the table below and assign it to the anchors.

**Table 25: Material properties of the node-to-node anchor**

Parameter	Name	Column	Unit
Material type	Type	Elastic	-
Normal stiffness	EA	$2.5 \cdot 10^6$	kN

## Create the loads

A static lateral force of 10 kN/m is applied laterally at the top left corner of the building. To create the load:

The earthquake is modelled by imposing a prescribed displacement at the bottom boundary. To define the prescribed displacement: To define the dynamic multipliers for the prescribed displacement:

1.  Create a line load passing through (-5 0 15) and (-5 3 15).
2. Specify the components of the load as (10 0 0).
3.  Create a surface prescribed displacement passing through (-80 0 -40), (80 0 -40), (80 3 -40) and (-80 3 -40).

4. Specify the x-component of the prescribed displacement as **Prescribed** and assign a value of 1.0. The y and z components of the prescribed displacement are **Fixed**. The default distribution (**Uniform**) is valid.
5. In the **Model explorer** expand the **Attributes library** subtree. Right-click on **Dynamic multipliers** and select the **Edit** option from the appearing menu.  
The **Multipliers** window pops up displaying the **Displacement multipliers** tabsheet.
6.  To add a multiplier click the corresponding button in the **Multipliers** window.
7. From the **Signal** drop-down menu select the **Table** option.
8. The file containing the earthquake data is available in the PLAXIS 3D Knowledge Base (tutorial **Free vibration and earthquake analysis of a building**).
9. Open the page in a web browser, copy all the data to a text editor (e.g. Notepad) and save the file in your computer with the extension \*.smc. Alternatively this file can also be found in the **Importables** folder in the PLAXIS 3D directory.
10.  In the **Multipliers** window click the **Open** button and select the saved file. In the **Import data** window select the **Strong motion CD-ROM files** option from the **Parsing method** drop-down menu and press **OK** to close the window.
11. Select the **Acceleration** option in the **Data type** drop-down menu.
12. Select the **Drift correction** options and click **OK** to finalize the definition of the multiplier.  
In the **Dynamic multipliers** window the table and the plot of the data is displayed.

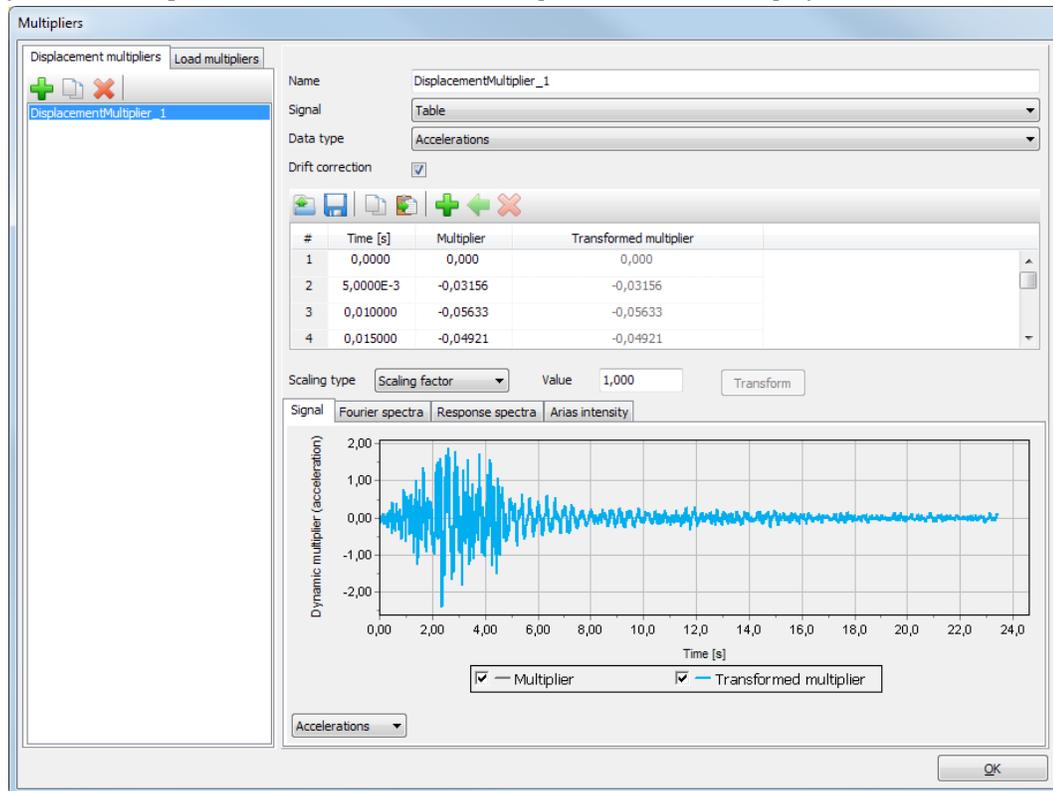


Figure 125: Dynamic multipliers window

13. In the **Model explorer** expand the **Surface displacements** subtree and assign the Multiplier<sub>x</sub> to the x-component by selecting the option in the drop-down menu.

### Create interfaces on the boundary

**Free-field** and **Compliant base** require the manual creation of interface elements along the vertical and bottom boundaries of the model in the **Structures mode**. The interface elements must be added inside the model, else the **Free-field** and **Compliant base** boundary conditions are ignored. To define the interfaces:

1.  Create a surface passing through  $(-80\ 3\ 0)$ ,  $(-80\ 0\ 0)$ ,  $(-80\ 0\ -40)$  and  $(-80\ 3\ -40)$ . Right-click the created surface and click **Create positive interface** to add an interface inside the model.
2.  Create a surface passing through  $(80\ 3\ 0)$ ,  $(80\ 0\ 0)$ ,  $(80\ 0\ -40)$  and  $(80\ 3\ -40)$ . Right-click the created surface and click **Create negative interface** to add an interface inside the model.
3. The surface at the bottom of the model is already created by the prescribed displacement. Right-click the surface at the bottom of the model and click **Create positive interface** to add an interface inside the model.

### Generate the mesh

1. Proceed to the **Mesh** mode.
2.  Click the **Generate mesh** button. Set the element distribution to **Fine**.
3.  View the generated mesh.

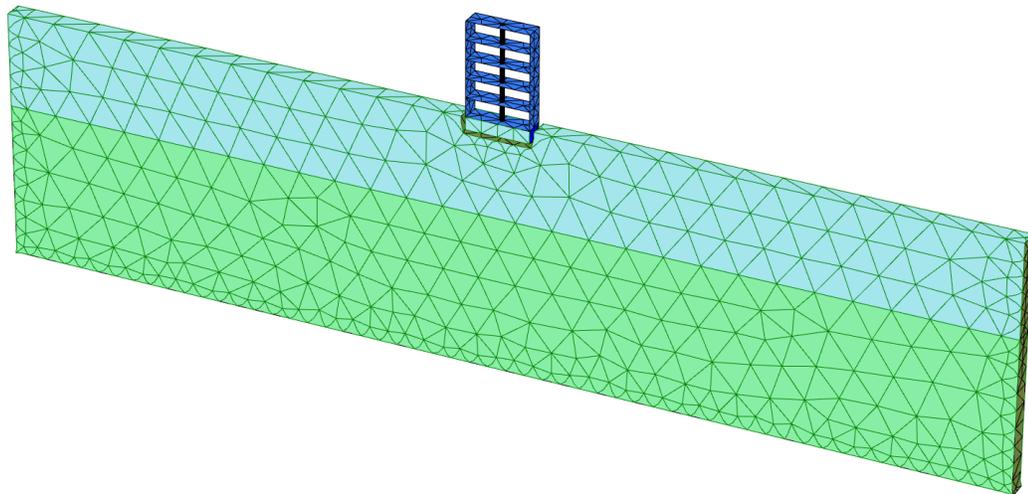


Figure 126: The generated mesh

### Define and perform the calculation

The calculation process consists of the initial conditions phase, simulation of the construction of the building, loading, free vibration analysis and earthquake analysis.

## Initial phase

1. Click on the **Staged construction** tab to proceed with the definition of the calculation phases.
2. The initial phase has already been introduced. The default settings of the initial phase will be used in this tutorial.
3. In the **Staged construction** mode check that the building and load are inactive.

## Phase 1

1.  Add a new calculation phase (Phase\_1). The default settings of the added phase will be used for this calculation phase.
2. In the **Staged construction** mode construct the building (activate all the plates, the anchors and only the interfaces of the basement) and deactivate the basement volume.

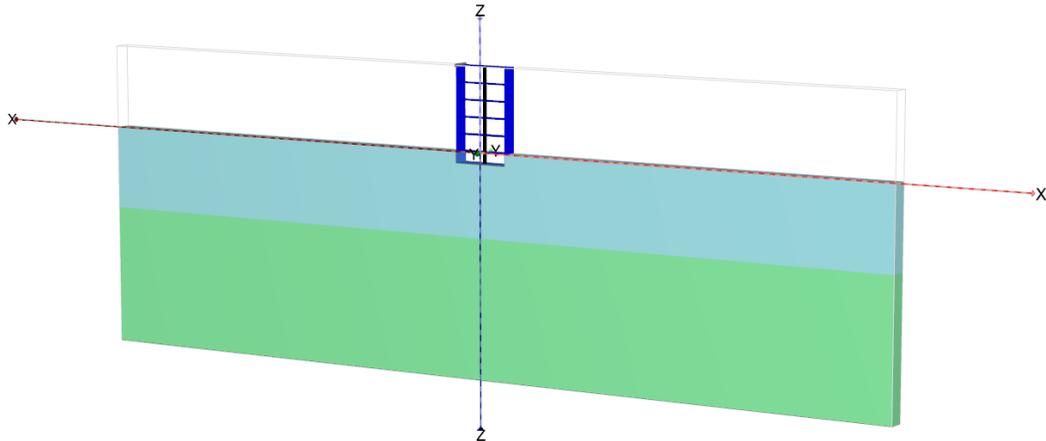


Figure 127: Construction of the building

## Phase 2

1.  Add a new calculation phase (Phase\_2).
2. In the **Phases** window select the **Reset displacement to zero** in the **Deformation control parameters** subtree. The default values of the remaining parameters will be used in this calculation phase.
3. In the **Staged construction** mode activate the line load. The value of the load is already defined in the **Structures** mode.

## Phase 3

1.  Add a new calculation phase (Phase\_3).

## Free vibration and earthquake analysis of a building

Define and perform the calculation

-  In the **Phases** window select the **Dynamic** option as **Calculation type**.
- Set the **Time interval** parameter to 5 sec.
- In the **Staged construction** mode deactivate the line load.
- In the **Model explorer** expand the **Model conditions** subtree.
- Expand the **Dynamics** subtree. By default the boundary conditions in the x and y directions are set to viscous. Select the **None** option for the boundaries in the y direction. Set the boundary Zmin to viscous.

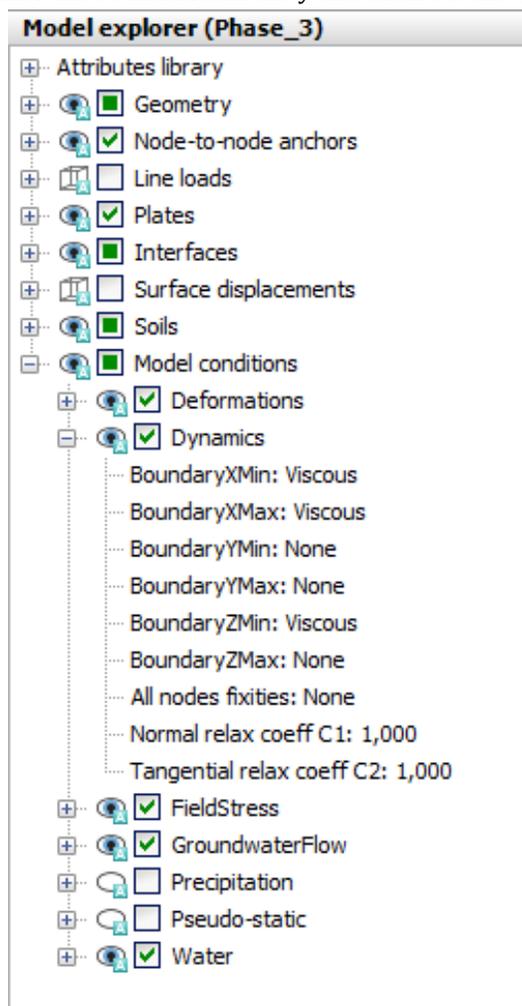


Figure 128: Boundary conditions for Dynamic calculations (Phase\_3)

**Note:** For a better visualisation of the results, animations of the free vibration and earthquake can be created. If animations are to be created, it is advised to increase the number of the saved steps by assigning a proper value to the **Max steps saved** parameter in the **Parameters** tabsheet of the **Phases** window.

### Phase 4

-  Add a new phase (Phase\_4).

## Free vibration and earthquake analysis of a building

Define and perform the calculation

- In the **Phases** window set the **Start from phase** option to Phase 1 (construction of building).
-  Select the **Dynamic** option as **Calculation type**.
- Set the **Dynamic time interval** parameter to 20 sec.
- Select the **Reset displacement to zero** in the **Deformation control parameters** subtree. The default values of the remaining parameters will be used in this calculation phase.
- In the **Numerical control parameters** subtree uncheck the **Use default iter parameters** checkbox, which allows you to change advanced settings and set the **Time step determination** to **Manual**.
- Set the **Max steps** to 1000 and the **Max number of sub steps** to 4.
- In the **Model explorer** expand the **Model conditions** subtree.
- Expand the **Dynamics** subtree. Set the **Free-field** option for the boundaries in the x direction. The boundaries in the y direction are already set to **None**. Set the boundary Zmin to **Compliant base**.

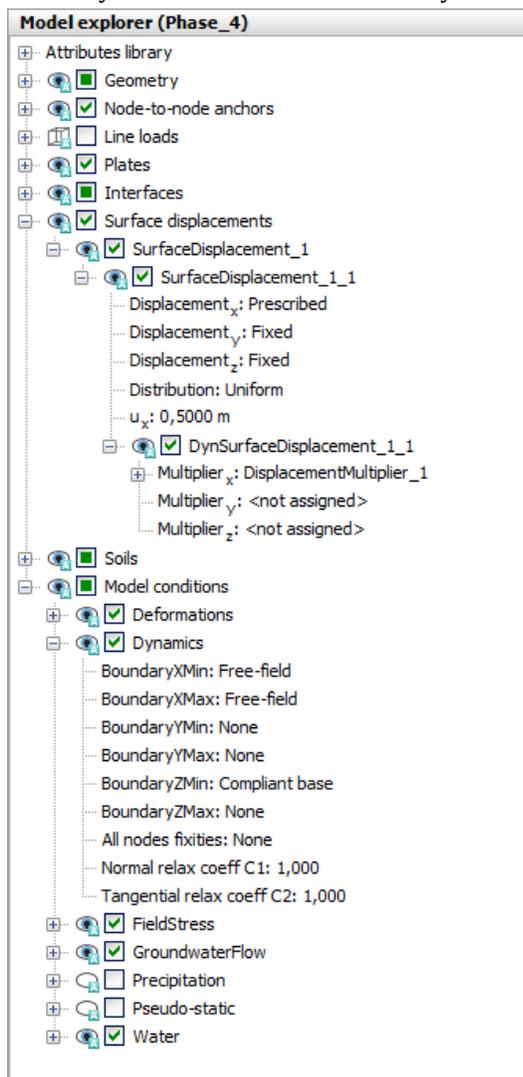


Figure 129: Boundary conditions for Dynamic calculations (Phase\_4)

- Make sure that the interfaces on the boundary of the model are not activated in the **Model explorer**.


11. In the **Model explorer** activate the **Surface displacement** and its dynamic component. Set the value of  $u_x$  to 0.5 m. Considering that the boundary condition at the base of the model will be defined using a **Compliant base**, the input signal has to be taken as half of the outcropping motion.

### Execute the calculation

1.  Select points for load displacement curves at (0 1.5 15), (0 1.5 6), (0 1.5 3) and (0 1.5 -2).
2.  Execute the calculation.

### Results

[Figure 130: Deformed mesh of the system at the end of Phase\\_2](#) (on page 153) shows the deformed structure at the end of the Phase 2 (application of horizontal load).

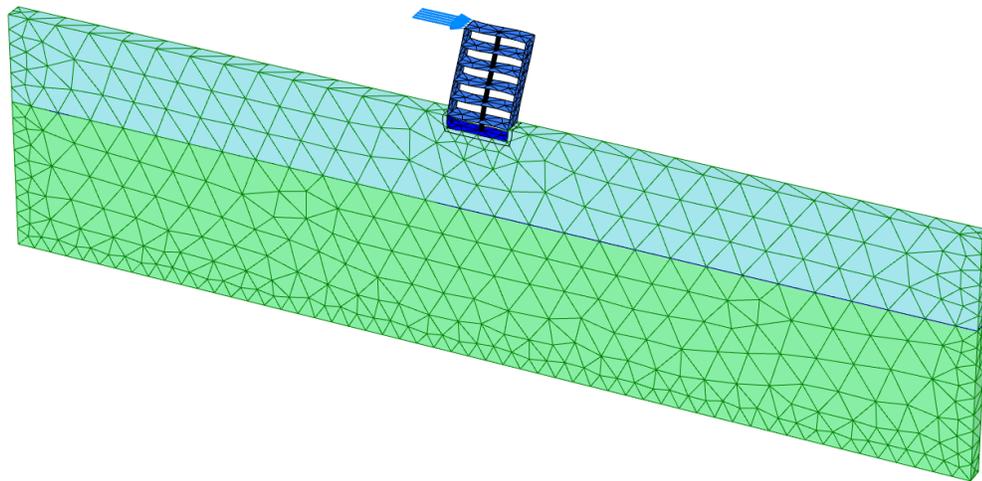

*Figure 130: Deformed mesh of the system at the end of Phase\_2*

[Figure 131: Time history of displacements \(Free vibration\)](#) (on page 154) shows the time history of displacements of the selected points A (0 1.5 15), B (0 1.5 6), C (0 1.5 3) and D (0 1.5 -2) for the free vibration phase. It may be seen from the figure that the vibration slowly decays with time due to damping in the soil and in the building.

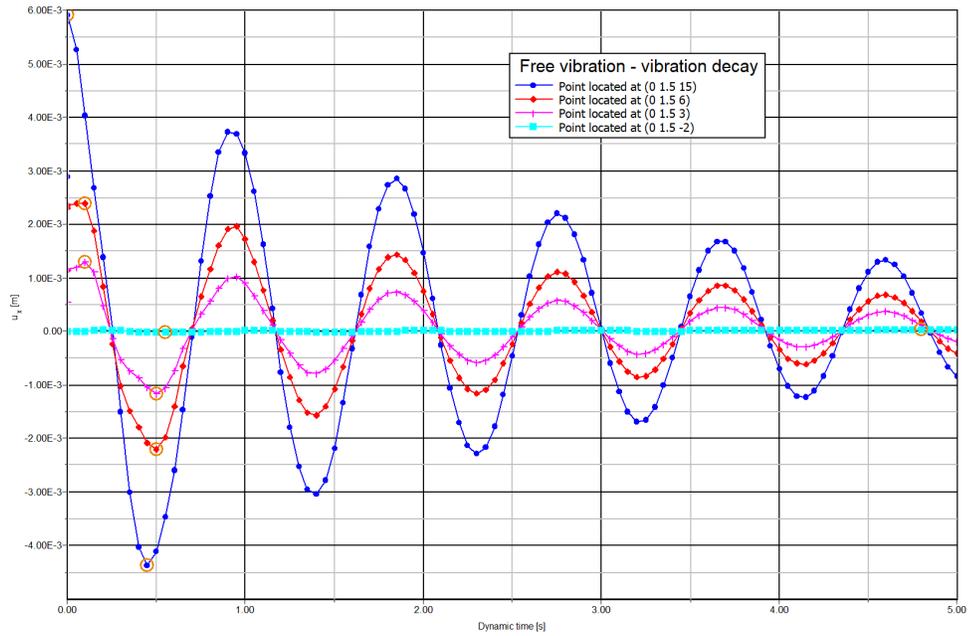


Figure 131: Time history of displacements (Free vibration)

In the **Chart** tabsheet of the **Settings** window select the **Use frequency representation (spectrum)** and **Use standard frequency (Hz)** options in the **Dynamics** box. The plot is shown in the figure below. From this figure it can be evaluated that the dominant building frequency is around 1 Hz. For a better visualisation of the results animations of the free vibration and earthquake can be created.


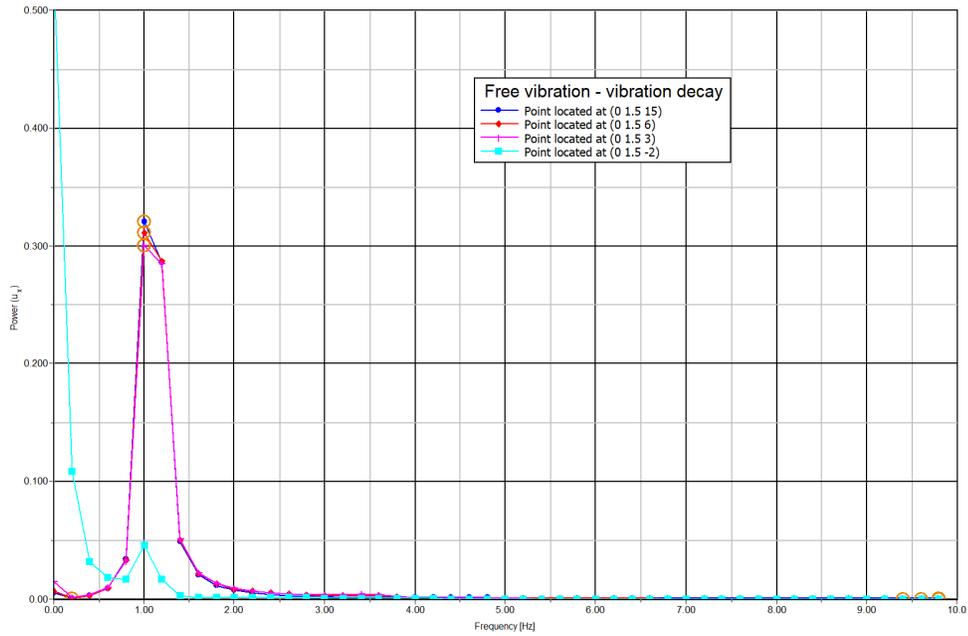


Figure 132: Frequency representation (spectrum - Free vibration)

The figure below shows the time history of displacements of the point A (0 1.5 15) for the earthquake phase. It may be seen from the figure that the vibration slowly decays with time due to damping in the soil and in the building.

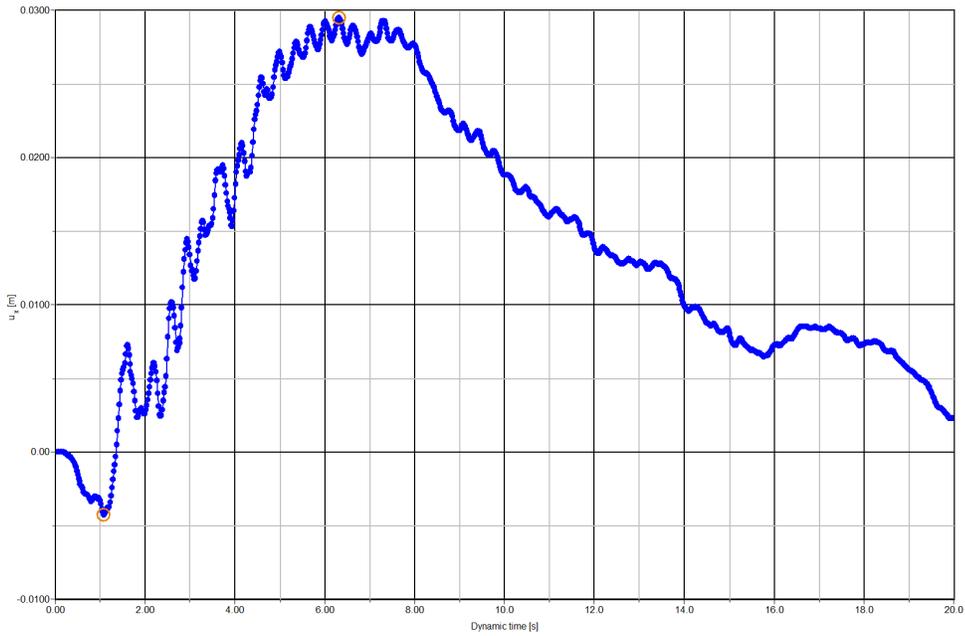

*Figure 133: Time history of displacements of the top of the building (Earthquake)*

The time history signature of the point A (0 1.5 15) of the earthquake phase has been transformed to normalised power spectra through Fast Fourier transform for Phase 4 and is plotted in the figure below.


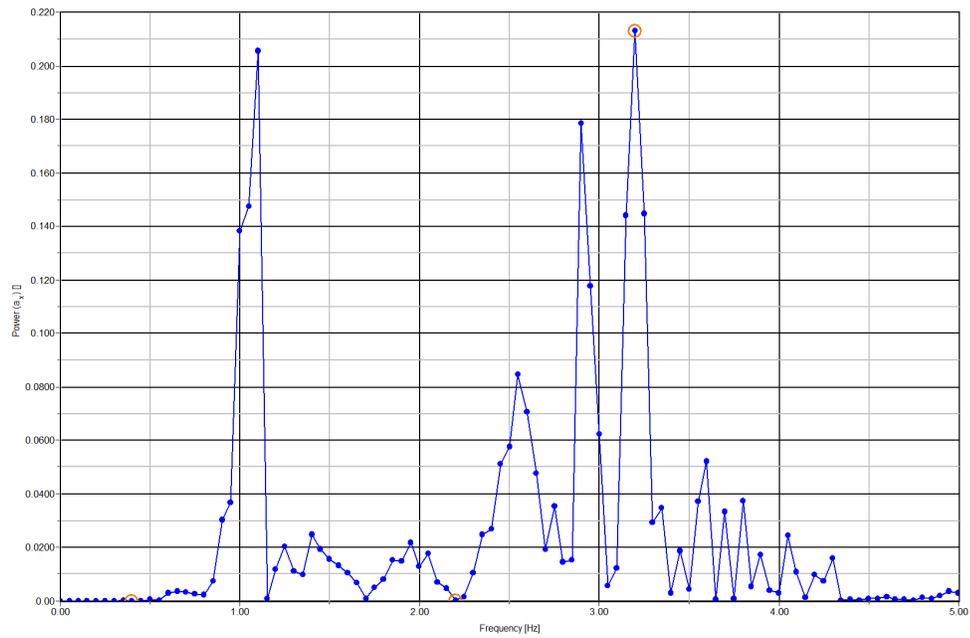


Figure 134: Acceleration power spectra at (0 1.5 15)

# Calculation scheme for initial stresses due to soil weight



Examples of non-horizontal surfaces, and non-horizontal weight stratifications are:

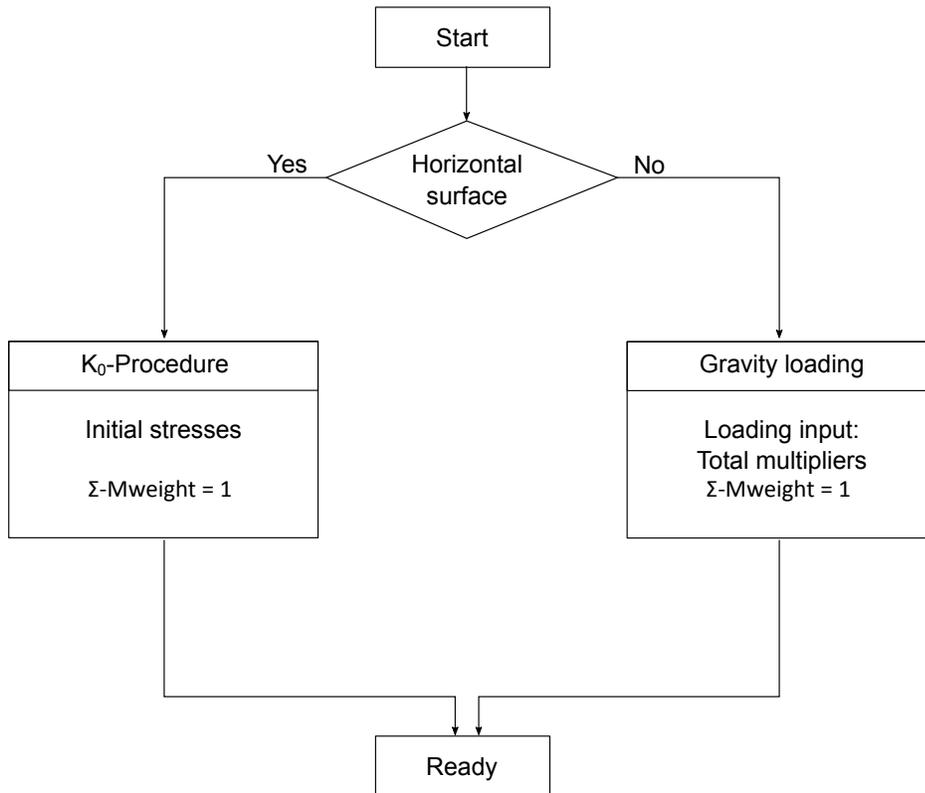