	SYNCHRO Field	OpenRoads Designer/ Civil Navigator Mobile
Civil-specific capabilities		
Perpendicular cross-section view	•	
Skewed cross-section view	•	
Profile view	•	
Station/offset	•	•
Working with documents		
Share service documents	•	
ProjectWise connection	•	
View document folders	•	
View documents	•	
View documents offline	•	
PDF mark-up tools	•	
Upload/download documents	•	
Working with forms		
Create/view issue	•	•
Create/view Daily Log	•	
Create/view Observations	•	
Create/view RFI	•	
Create/view Inspection	•	
View Work Package	•	
Model mark-up (redline)	•	
Attach additional files	•	•
Access device camera functions	•	
Create/view user-configured forms	•	
Working with maps		
Map view form locations	•	
Map view device GPS location	•	
Working with models		
GPS device location	•	•
GPS/telemetry of iPad controls model view		•
Measure area	•	
Measure distance	•	•
Point location coordinates	•	•
Measure radius	•	
Measure angle	•	
Element and property viewing	•	•
Open iModel	•	•
Element isolation	•	•
Element properties	•	•
Selection tool	•	•
2D views	•	•
Element layer visibility tree	•	•



## Comparing SYNCHRO Field and Bentley Navigator

OpenRoads Designer/ Civil Navigator Mobile
•
•
•
•
•
•
•
•
•
•
•
_