

Plate 1: RSTAB Loads defined as entities.


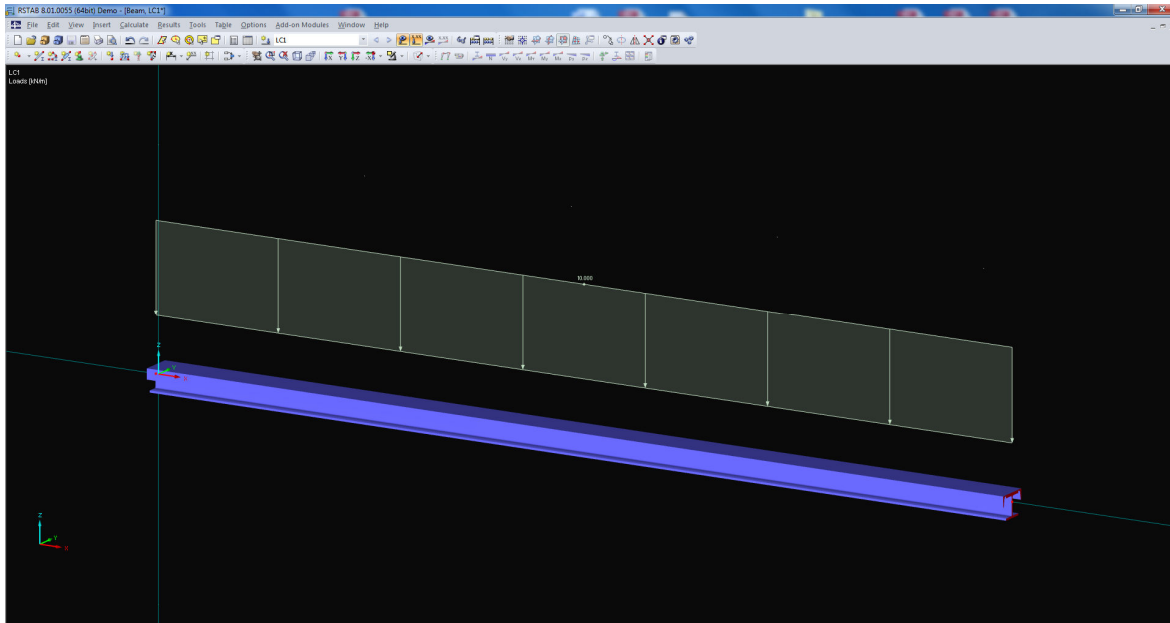


Plate 2: Double Click on the Load and you get a Sub Menu where you can do the required modification.

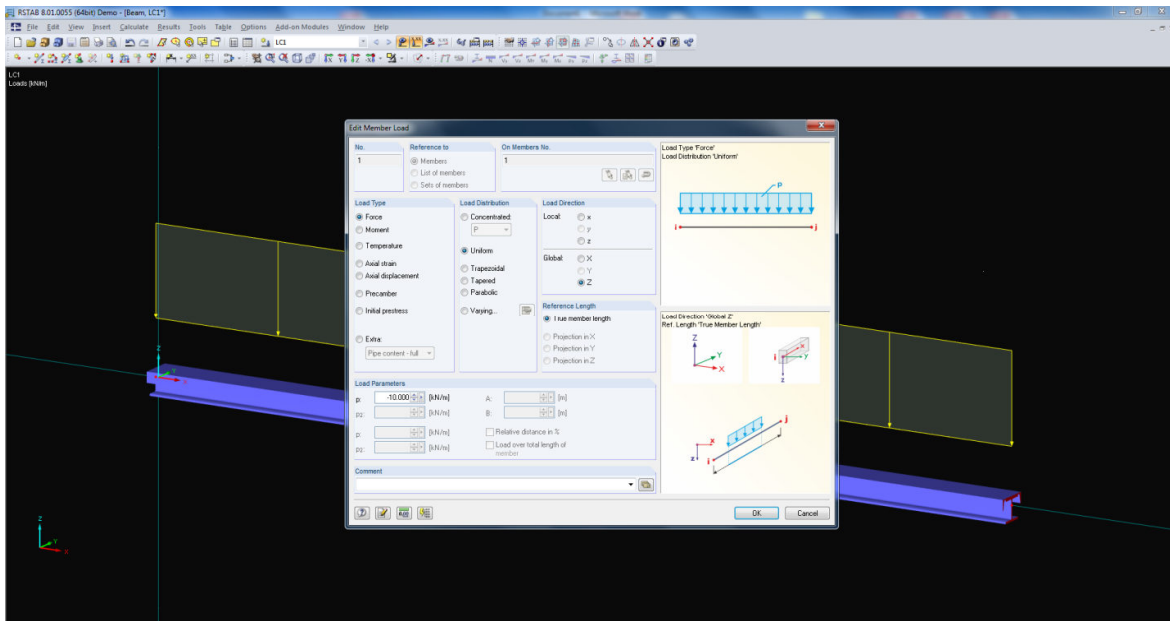

Don't want the loads? Single click and delete them. Easy as that....